



INSTALLATION INSTRUCTIONS

KTM Super Adventure 1290/S 2017-

© by MRA-Klement GmbH – 11/2018 4025066147878

INSTALLATION INSTRUCTIONS

KTM Superduke 1290/S 2017-

Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA windscreen	---	Torx 30 Allen key 3mm
2	Lens head screws, M5x35mm	10632	
2	Lens head screws, M5x30mm	10566	
4	Washers 13x6 x0.5mm	10669	
2	Distance sleeves 25mm	10996	
2	Distance sleeves 20mm	11181	
4	O-rings 45x1.5mm	10992	
1	Edge protection strip with clamping sleeves	---	


Fitting the windscreen to the motorcycle:

1. Place the motorcycle on a flat surface.
2. Dismantle the original windscreen.
3. Insert the provided M5x35mm lens head screws [10632] with the plastic washers [10669] into the **lower** holes on the MRA windscreen. Then insert the M5x30mm lens head screws [10566] into the **supper** holes on the MRA windscreen.
4. Now apply the 25mm distance sleeves [10996] from behind onto the screws of the **lower** hole. The 20mm distance sleeves [11181] must be applied to the **upper** holes. Now the sleeves must be secured with the provided O-rings [10992] which act as assembling aid.
5. Mount the MRA windscreen to your motorbike and tighten all four screws (P8).
6. Apply the protective edge strip profile as shown in the figure.
7. Push the clamping sleeves over the ends of the protective edge strip and lightly compress them, using a pair of pliers to secure the protective edge strip profile.

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.



P 1

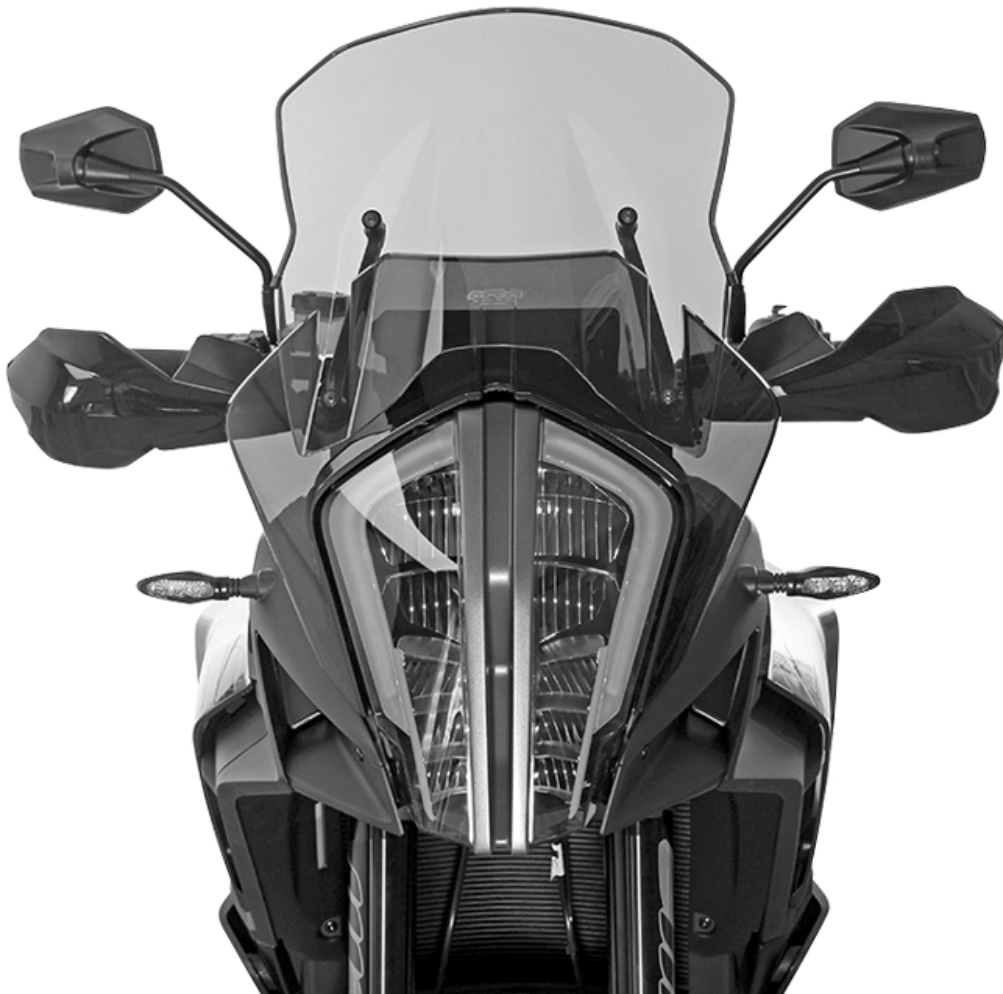

P 2