



INSTALLATION INSTRUCTIONS

HONDA CMX500 Rebel 2017-

© by MRA-Klement GmbH – 05/2019 4025066165902

INSTALLATION INSTRUCTIONS

Honda CMX500 Rebel 17-

Thank you for buying a MRA Windshield.


Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA windscreen	---	Allen key 3mm, 5mm
1	pair of holders	11386	
4	M5 rubber nut	10629	
4	Plastic washer 12 X 5 x 0.5mm	10635	
4	Lens head screws M5 x 20mm	10637	
2	Hexagonal cheese head screws. M6 X 40	11016	
2	Washer 12 X 6 X 1mm	10559	
2	M6 cap	10581	
4	3mm spacer	10872	
4	O-ring 4.5 X 1.5 15mm	10992	
2	Black steel sleeve	11388	


Fitting the screen to the motorcycle:

1. Place the motorcycle on a flat surface.
2. Remove the two fixing screws from the speedometer (P1).
3. Attach the retaining plates onto the motorbike with the M6x40 Allen screws [11016], the washers [10635] and the spacers [11388] . Only tighten the screws gently.
4. Apply the rubber nuts [10629] to the holding plates [11386](P2).
5. Insert the M5x20mm lens head screws [10637] with the plastic washers through the MRA windscreen.
6. Place the 3mm spacers [10872] against them from behind and secure these using O-rings [10992].
7. Attach the windscreen onto the retaining plates.
8. Align the windscreen and the retaining plates on the motorbike and tighten all screws fully.
9. Finally, place the black covering caps [10581] onto the Allen screws.

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.

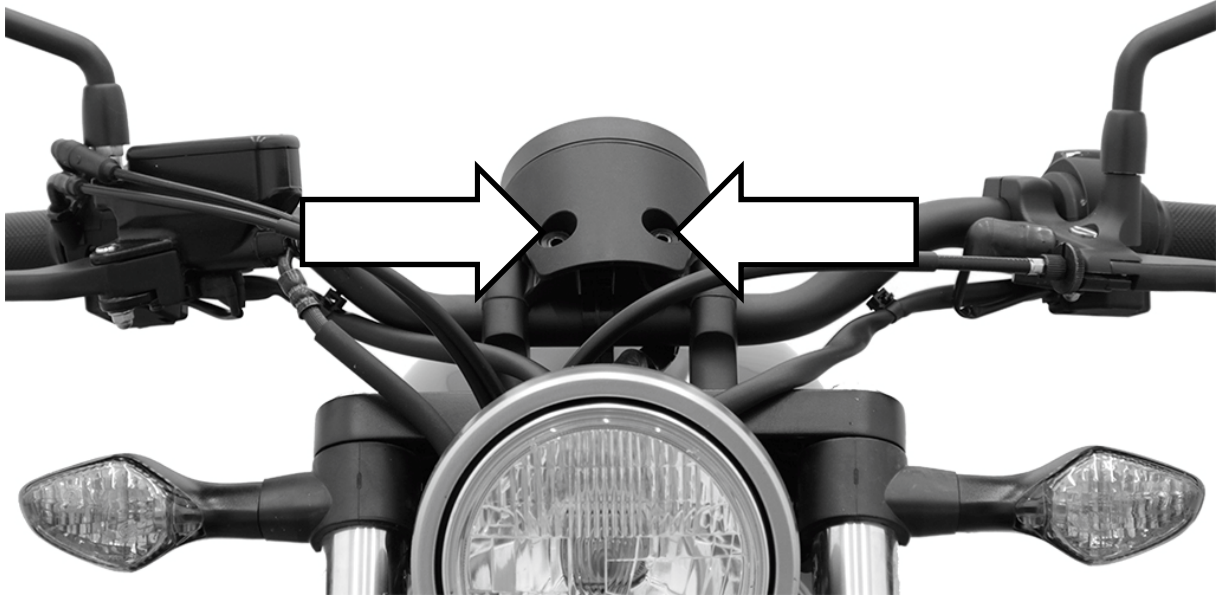

P 1

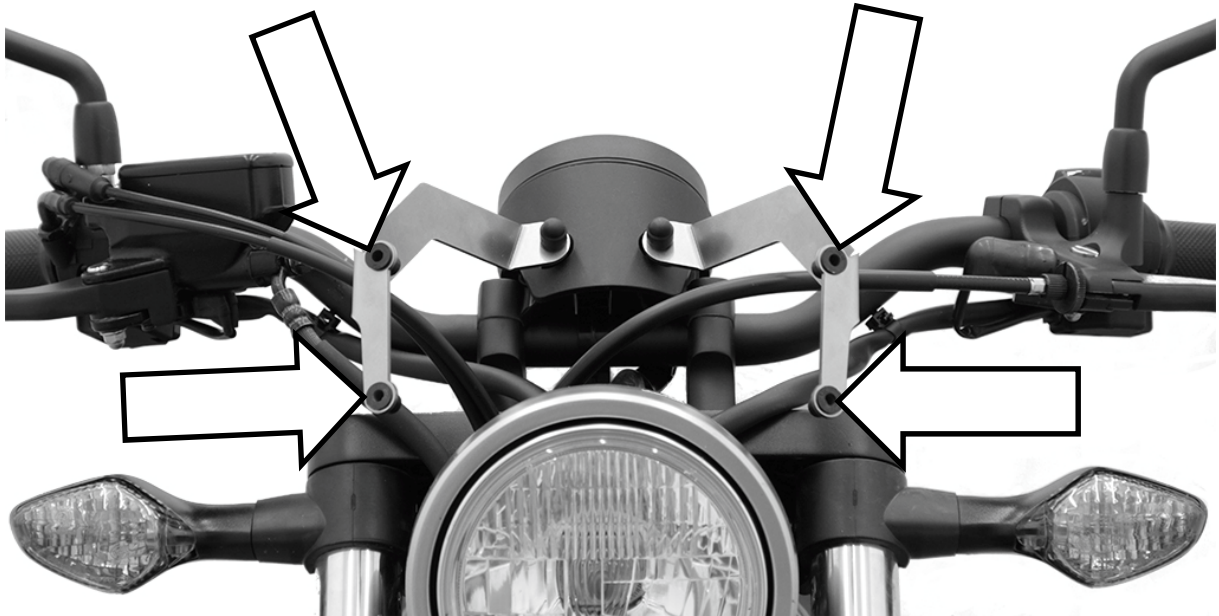

P 2