



## MOUNTING SUGGESTIONS:


### Harley-Davidson® FLT/FLHT 1980-1996 One-piece Sport Touring

<b>Hardware:</b>	¼"-20 serrated nuts x 2 10-32 screws x 2 and steel bracket (1980-1988) If no handrail, part 78007 ( <b>not included</b> )
<b>Tools needed:</b>	7/16" open-end wrench Phillips screwdriver (1980-1982)

### Installation of Mustang Seat:

1. Remove serrated washers from the studs on the baseplate.
2. 1980-1982 – remove the screws holding the mounting bracket and reverse its position.
3. Engage seat mounting bracket with mount point on frame.
4. Firmly push seat forward so the nose meets the chrome dash panel.
5. Align studs with the holes in the stock handrail and fasten with supplied nuts.

Nose bracket for 1980-1982 FLT

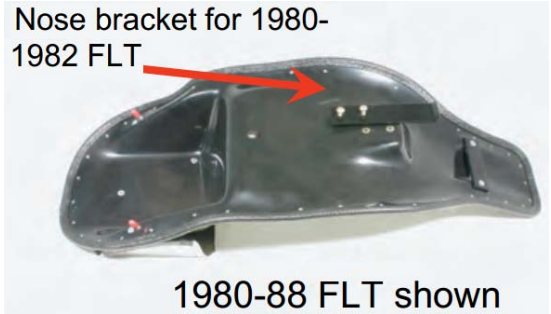

1980-88 FLT shown

**Note:** If installing without the stock handrail, you will need part 78007 to install the seat. Attach this to the fender mounts with the stock bolts before beginning installation.

**Enjoy the comfort and custom look of your new Mustang seat!**



These steps are guidelines to help you install your new Mustang product.

Refers to part numbers: 75047, 75235