



MOUNTING SUGGESTIONS:

Harley-Davidson® FX/FL Big Twin 1965-1984 Solo and Passenger Seat

Hardware:	Solo seat: Expansion plugs with 5/16"-18 x 3/4" bolts (if mounting solo only)	Passenger seat: Stock rear bracket 1/4"-20 x 1/2" screw x 2
Tools needed:	Phillips screwdriver 1/2" open-end wrench or nutdriver (if mounting solo only)	

Removal of Stock Seat:

1. Remove the rear 1/4"-20 fender screw with a Phillips screwdriver and set it aside. The stock rear fender screw will be used to attach your new Mustang seat.




2. Slide the seat up and back to disengage the front bracket and remove the seat.

Installation of Mustang Seat:

Solo only:

1. Insert the threaded rubber expansion plugs into the copper sleeves, and into the hollow frame cross tube located halfway between the tank and the fender.

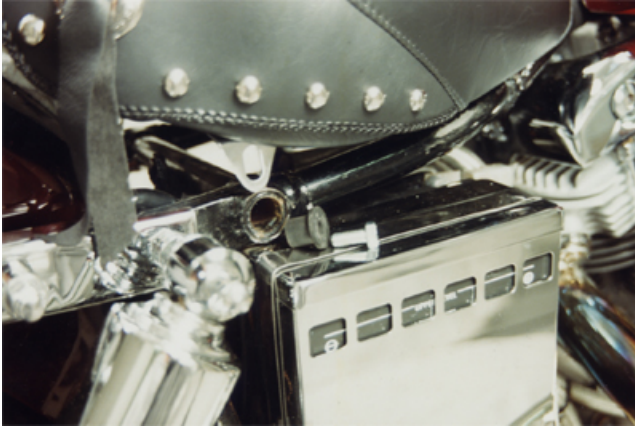

2. Slide the front forks under the frame cross rail and align the side brackets with the expansion plugs.
3. Insert the $\frac{5}{16}$ "-18 x $\frac{3}{4}$ " bolts through the side brackets and into the expansion plugs. Tighten securely.

Solo and passenger seat:

1. Remove the two $\frac{1}{4}$ "-20 x $\frac{1}{2}$ " screws from the back of the Mustang solo and attach the passenger seat's front brackets to the solo. Tighten these screws securely.

2. Slide the front forks under the frame cross rail.
3. Align the rear tab with the fender hole.
4. Secure the rear bracket to the fender with the stock screw.

Enjoy the comfort and custom look of your new Mustang seat!



Handcrafted in  the USA

Looking for motorcycle seats & backrests? Visit our website.