

MOUNTING SUGGESTIONS:

Honda VLX600 Shadow 1999-2008 One-piece Seat

Hardware: Stock 6mm side bolts x 2

Tools needed: 10mm wrench

Removal of Stock Seat:

1. Remove the 6mm mounting bolts from either side of the seat with a 10mm wrench.




2. Slide the seat back, then lift up to remove from the motorcycle.




Installation of Mustang Seat:

1. Slide the Mustang seat's front bracket into the tunnel in the frame.

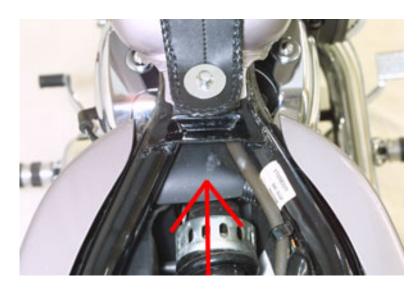

2. Ensure the rear brackets are aligned so they will slide under the fender studs.

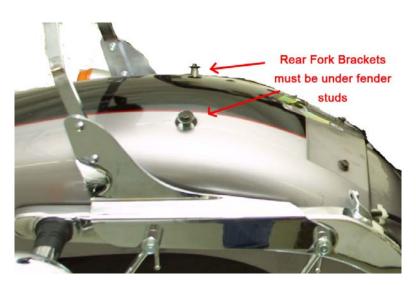

- 3. Push the seat forward about $\frac{1}{4}$ " so the rear brackets have fully engaged the studs.
- 4. Install the two side bolts very loosely. Tighten the bolts slowly and evenly, working from one side to the other. Tightening one side too much will make it difficult to tighten the other side. A ¼" gap between the brackets and frame is required to put sufficient pressure on the nose bracket as the bolts are tightened.

Note: When properly installed, the nose of the seat will be centered on the tank. The side covers are not identical. The left side cover will appear approximately ½" larger than the right.

Enjoy the comfort and custom look of your new Mustang seat!

