

Quantum® Hardcoated Polycarbonate VStream[®] Windscreen for: Honda CB500X N20063 Low Dark Tint N20064 Mid Light Tint

Tall Clear



Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.

WARNING:

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

CONTENTS OF KIT

Item Description Part No. Qty. VStream® Windscreen 1 All OEM Hardware Will Be Reused 1



Figure 1

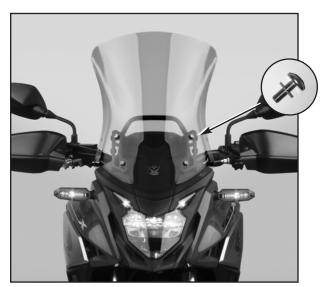


Figure 2

NOTE:

N20065

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

Notes and Tools

TOOLS REQUIRED 5mm Hex Key



PREPARATION

1. Place motorcycle securely on its stand.

Remove OEM Windshield

2. Remove the four 5mm hex screws and plastic washers securing the OEM windscreen to the bracket. Remove OEM windshield. Wellnuts remain in place. (5mm Hex Key) Figure 1



3. Install VStream Windscreen onto the OEM bracket. Re-install the four 5mm screws and plastic washers. (5mm Hex Key) Figure 2

4. Securly tighten hardware. Do not overtighten. (5mm Hex Key)

Enjoy the ride with your new VStream Windscreen!

VStream® Windscreen Patent No. 7,387,328



CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash[™] (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your windscreen clear in rainy weather.

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly. Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycles instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.