



SwitchBlade Deflector™ Windshield
Lexan® polycarbonate with QUANTUM™ Coating
 This installation manual covers Kit UQ41, Kit UQ42 and Kit Q43

Dealers: If installing this windshield for a customer, please give them this manual. It contains information needed to properly maintain and use this product.

The SwitchBlade Deflector is intended for use with the correct SwitchBlade™ mount kit for your motorcycle. At any time you may interchange windshields with the 2-Up™, Chopped or Shorty™ using the same mount kit. *All Patents Pending*

Attention



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

Parts List For: Kit UQ41, Kit UQ42 and Kit UQ43

Note: Your specific Mount Bracket number is specified in Index 1 and 2.



The items pre-assembled to the windscreen are properly tightened using thread lock. Do not adjust.

INDEX	PART NO. AND DESCRIPTION	QTY.
1	37-371941-000 Mount Bracket, Left KIT UQ41	1
1	37-371943-000 Mount Bracket, Left KIT UQ42	1
1	37-371945-000 Mount Bracket, Left KIT UQ43	1
2	37-371942-000 Mount Bracket, Right KIT UQ41	1
2	37-371944-000 Mount Bracket, Right KIT UQ42	1
2	37-371946-000 Mount Bracket, Right KIT UQ43	1
BAG 761 Contained in KIT UQ41, UQ42 and UQ43		
3	55-586043-000 Bolt, Carriage 5/16"-18 x 5/8"	4
4	42-482201-000 Nut, Hex Cap 5/16 - 18	4

Preparation

Position the motorcycle securely on its stand or a work stand. Cover the front fender and fuel tank with a suitable cloth to avoid scratches from dropped tools.



Left and right side of motorcycle and product are determined while sitting on the bike.



- 1, 9/16" Socket
- 1, Socket Wrench

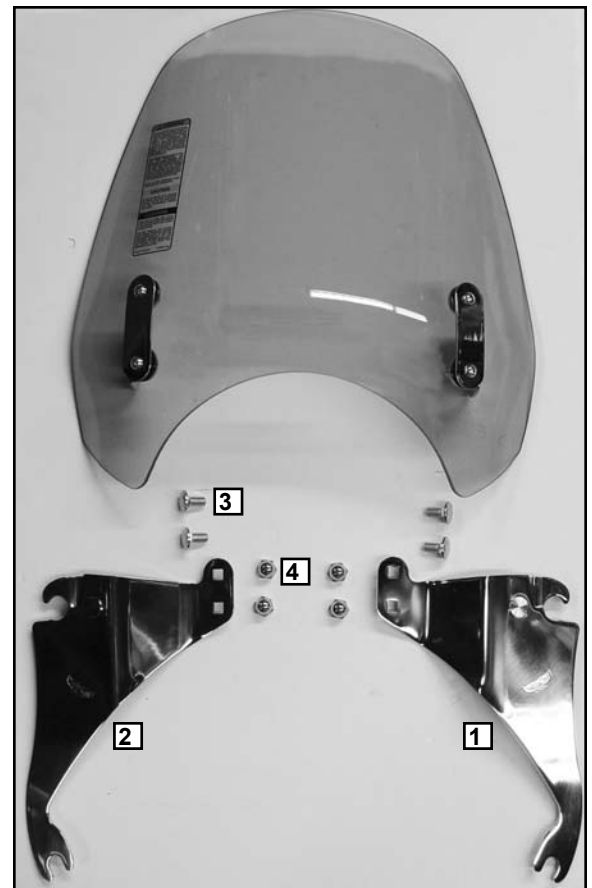


Figure 1.

INSTALLATION
ATTACH THE BRACKETS TO THE WINDSHIELD

 When properly identified and installed, Bracket bends outboard.

1. Identify right side Bracket (2).
2. Assemble right Bracket to right side of windshield with Carriage Bolts (3) and Nuts (4). Be certain Bolt neck seats correctly in Bracket. **(9/16 Socket and Wrench) Figure 2.**

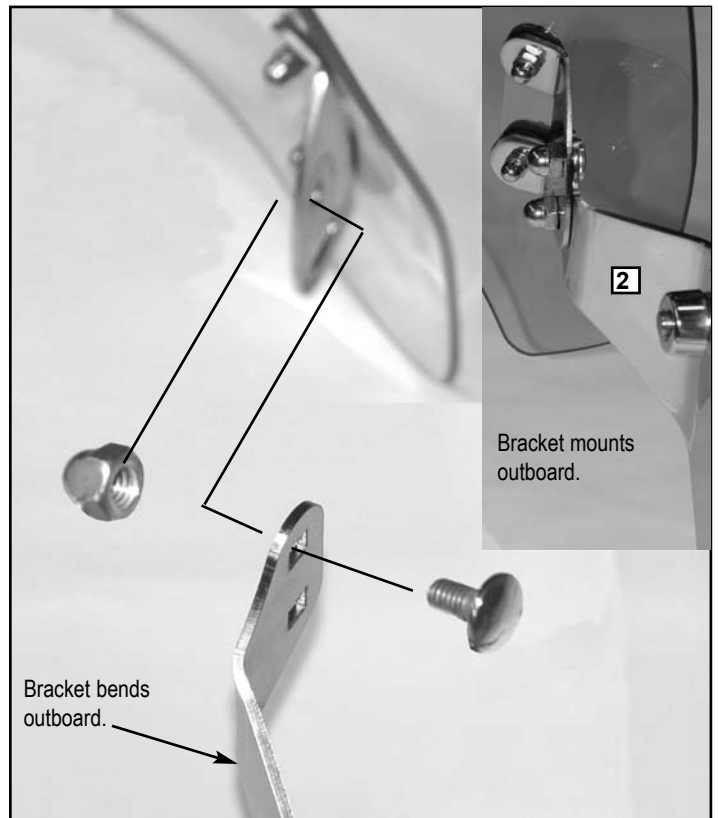


Figure 2. Right Side Bracket Assembly

ADJUST BRACKETS, TIGHTEN TO "HOLD"

3. Repeat on left side. For now, adjust Brackets so bend is perpendicular to the ground and screen has a slight rake. Tighten to hold. **Figure 3 and 4.**

INSTALL WINDSHIELD TO MOTORCYCLE, ADJUST AND TIGHTEN SECURELY

4. Refer to the SwitchBlade Owner's Manual attached to the windshield and install shield to motorcycle. Make final adjustments to rake and tighten Nuts (4) firmly (15 ft/lbs.) **(9/16 Socket and Wrench)**

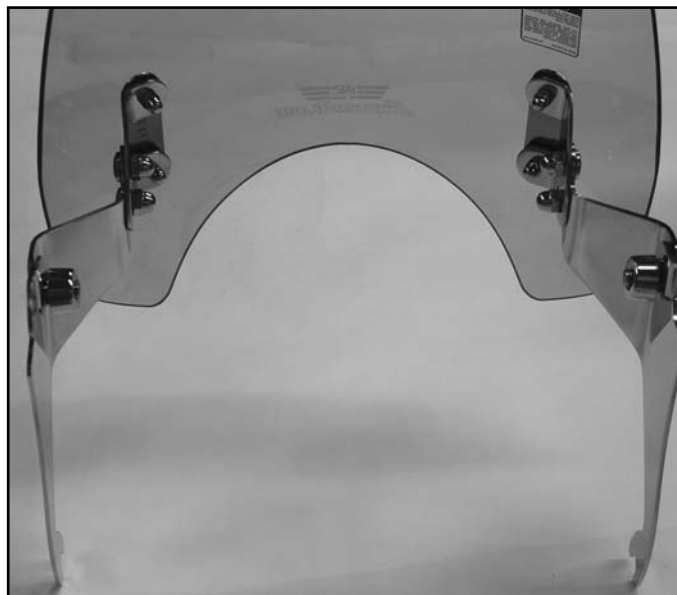


Figure 4.

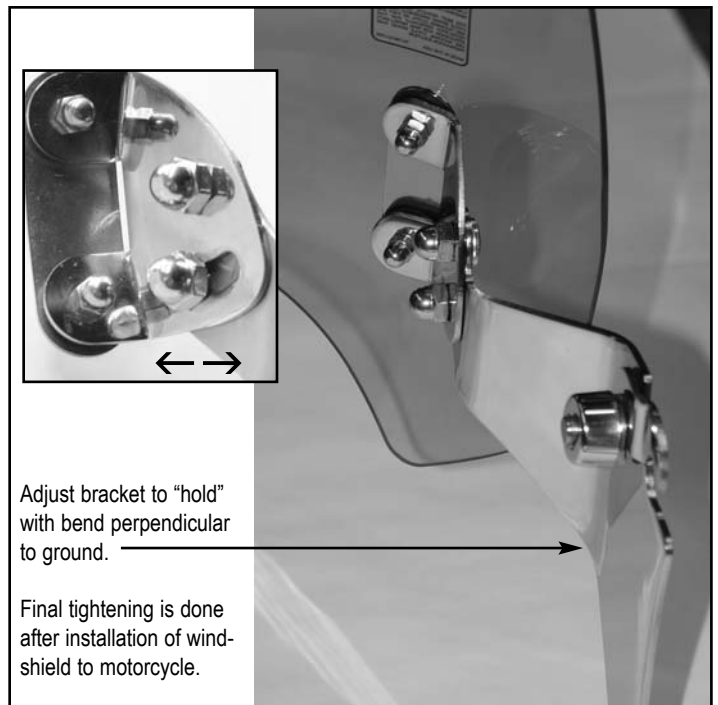


Figure 3.