


**TOOLS REQUIRED:**

- Masking Tape (Not shown)
- Marking Pen (Not shown)
- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

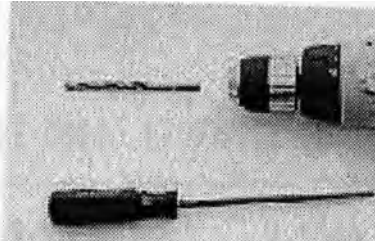

**PARTS LIST:**

Part No.	Description	Qty.
70-710062-000	Front of Front	1
70-710063-000	Rear of Front	1

**Bag No. 448**

42-423050-000	Nut, M5	4
49-490531-000	Washer, Flat #10	4
55-568216-000	Screw, M5-8 x 16	4

**PREPARATION:**

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thouroughly.

**INSTALLATION**

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the front Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 2.**
3. Mark the hole locations with the marking pen. **Figure 3.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Figure 4.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the washers and nuts on the screws and tighten securely. **Figure 5.**
9. Repeat the above steps to install 70-710063-000 Fender Tip to the Rear of the Front Fender.

**MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.



Figure 1.



Figure 2.



Figure 3.

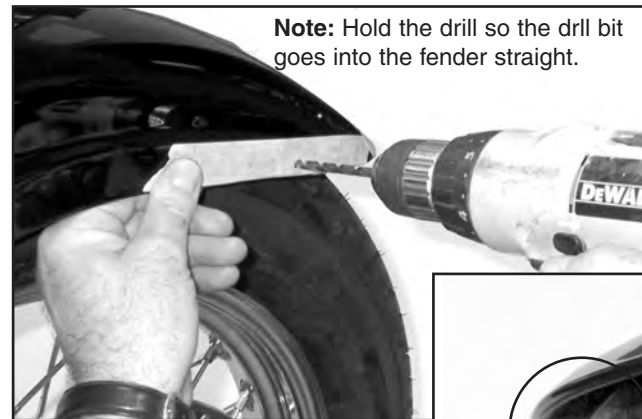


Figure 4.

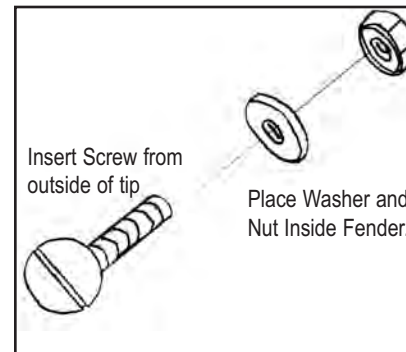



Figure 5.

Drill Straight, the drill hole will be through the edge of the inner hem. The washer will hold screw tight.

**INSTALLATION INSTRUCTION**  
**CAST FENDER TIP for Suzuki C90**  
**N7018 Rear Fender Tip**

**TOOLS REQUIRED:**

- Masking Tape (Not shown)
- Marking Pen (Not shown)
- Power Drill with 7/32" Drill Bit
- 8mm Wrench
- No. 2 Phillips Screwdriver

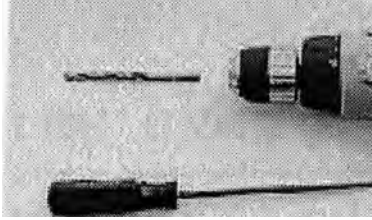

**PARTS LIST:**

Part No.	Description	Qty.
70-710064-000	Rear of Rear	1
<b>Bag No. 588</b>		
42-423050-000	Nut, M5	2
49-490531-000	Washer, Flat #10	2
55-568216-000	Screw, M5-8 x 16	2

**PREPARATION:**

1. Position motorcycle securely on its stand or a work stand.
2. Clean the fender thouroughly.

**INSTALLATION**

1. Cover the area of the fender where the Fender Tip goes with a thin layer of masking tape. Make certain the tape is smooth. **Figure 1.**
2. Carefully, position the Rear Fender Tip on the fender, make sure the Tip is centered on the fender. **Figure 1.**
3. Mark the hole locations with the marking pen. **Figure 2.**
4. Remove the Fender Tip.
5. Drill holes through the fender at the marks. **Figure 3.**
6. Remove the masking tape.
7. Position the Fender Tip and insert the screws from the outside.
8. Install the washers and nuts on the screws and tighten securely. **Figure 4.**



Figure 1.



Figure 2.



Figure 3.

**Note:** Hold the drill so the drill bit goes into the fender straight.

**MAINTENANCE**

Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.

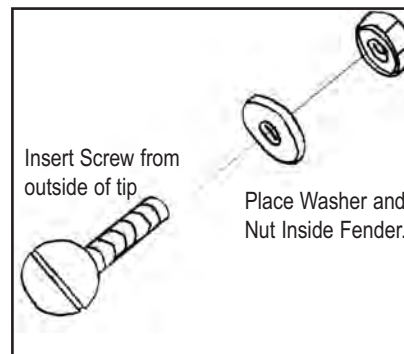


Figure 4.