




**INSTALLATION INSTRUCTION
CAST FENDER TIP
N738 Rear Fender
Suzuki VL1500LC**

TOOLS REQUIRED:

- Power Drill with 1/4" Drill Bit
- Scribe
- 11/32" Wrench
- Block of wood that fits between Fender & Tire,
- No. 2 Phillips Screwdriver

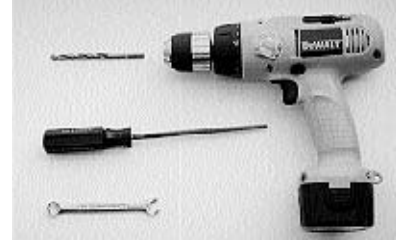

PARTS LIST:

Fender Tip, N738 Rear Fender Tip	1
Bag No. 298	Qty.
Nut, Nylok, M5	2
Washer, #10	2
Screw, M5 x 16	2

PREPARATION:

1. Position motorcycle securely on its side stand.
2. Position the Fender Tip in place on the rear fender. Make sure the Fender Tip is symmetrical and is tight against the Fender.
3. Mark the hole locations on the fender using the Scribe.
4. With the Wood Block between the fender and the tire, use the 1/4" drill bit to drill hole through the fender at the marked locations.

INSTALLATION

1. Position the fender tip on the fender
2. Install using a Screw, Lock Washer and Nut.
3. Fully tighten Nuts with wrench. The Nuts should be tight enough to avoid rattles.
4. Check the tightness of the Nuts after about ten miles of riding

CARE AND MAINTENANCE: Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.