
NEW CLES INSTALLATION INSTRUCTIONS

KTM SUPER DUKE 1290/R

FENDER ELIMINATOR

- 1 Remove seat and unplug 4 wire white connector (picture 1)
- Remove (4) T30 torx bolts and slide fender off (picture 2)
- To remove wiring harness, disassemble fender by removing all (12) screws (picture 3)
- Unplug (3) white connectors and plug back into 4 pin connector under seat (picture 4)
- **5** Remove (2) T27 torx bolts underneath bike
- Take NRC kit, slide connectors through hole below stock tail light, insert two tabs into lower slots and use stock T30 torx bolts to tighten (picture 5/6)



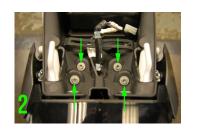







NEW CLES INSTALLATION INSTRUCTIONS

FENDER ELIMINATOR

- Take (2) black spacers and M5x45 bolts and mount into lower holes underneath bike (picture 7)
- Plug connectors into harness underneath seat and test lights (picture 8)
- ② Zip tie if necessary and put tool bag and seat back on bike





