

BMW F900R '20-

M O U N T I N G I N S T R U C T I O N S







REF 20359

WINDSHIELD NG SPORT (OEM SUPPORT)

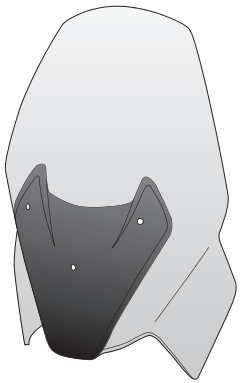

WITH ORIGINAL BMW SUPPORT




ID	PART	DESCRIPTION	QTY	REF
1		SPORT screen	1	10775W/H/F/N
2		M5x15 special screw hexagonal length 14	3	TORNI-EM5---513
3		Ø9XØ6X8mm silentblock	3	AROPASACABLES-3
4		Ø12XØ6,8X7,3 bush with blange	3	CASQUI-1A---750
5		M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
6		M5 ISO 7380 Allen cap screw	3	TAPON-----85

BMW F900R '20-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

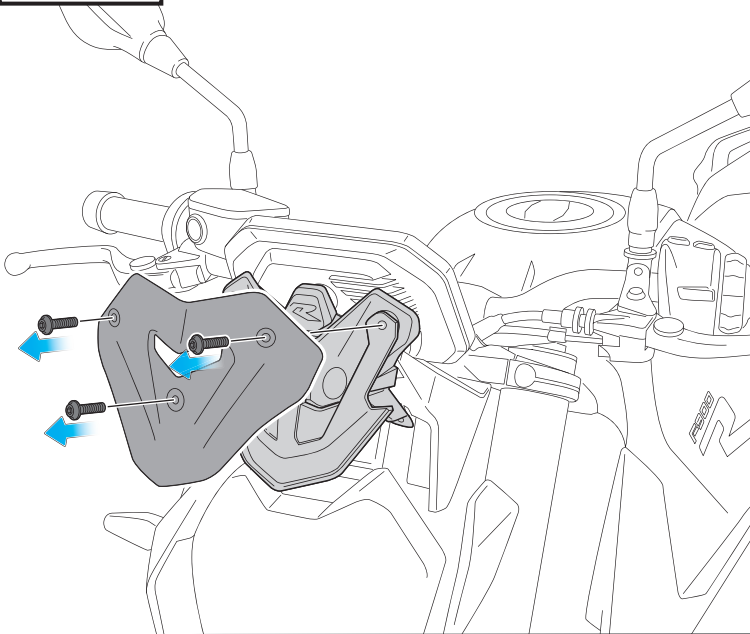


2

ASSEMBLY

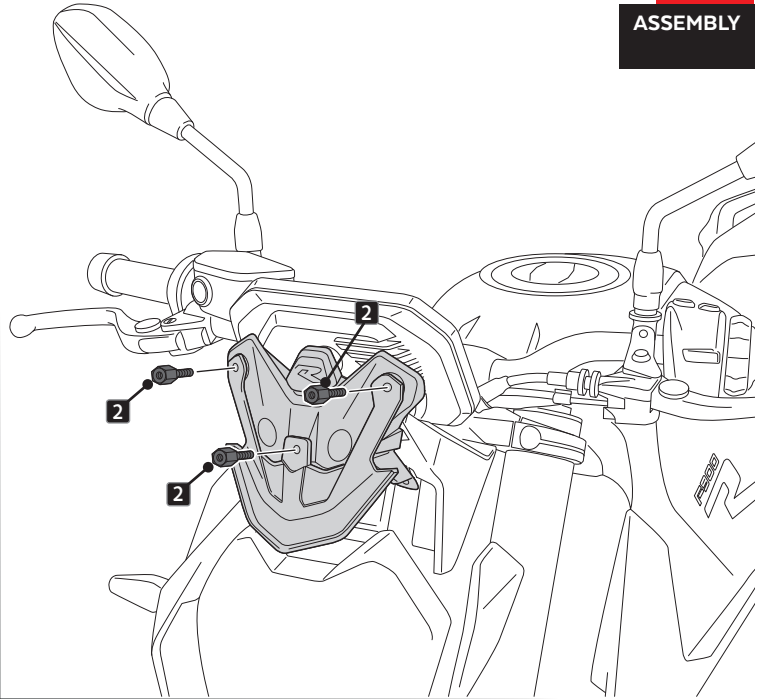


3

ASSEMBLY

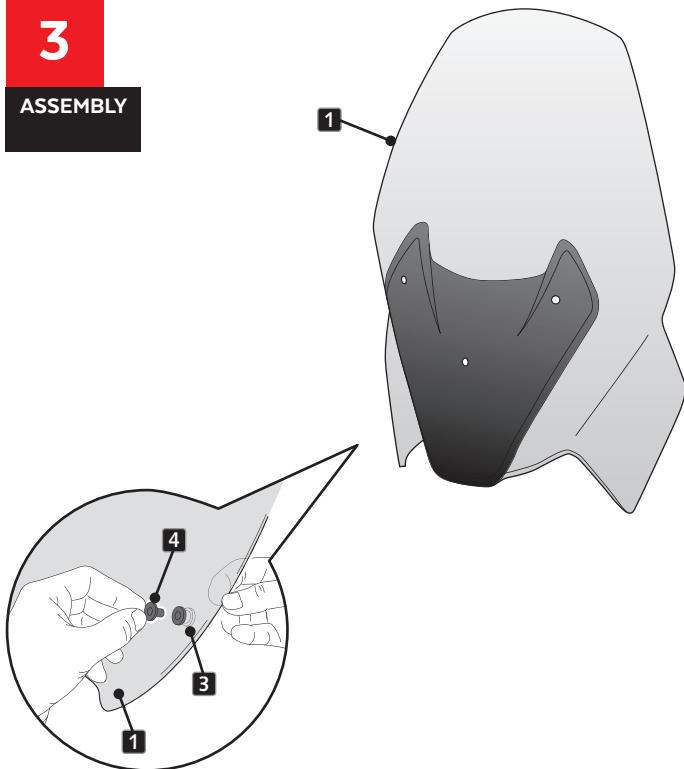

4

ASSEMBLY

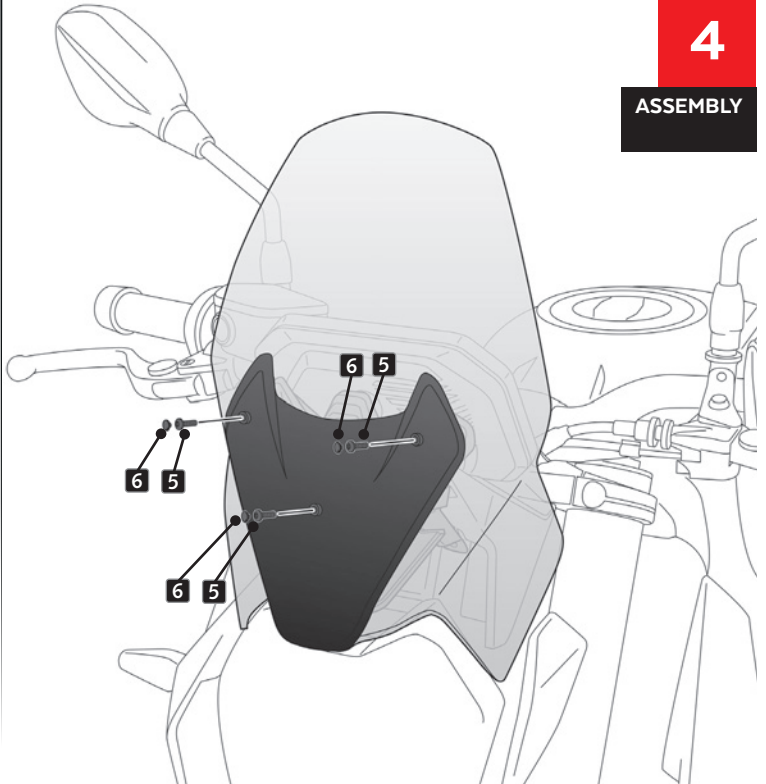

BMW F900R '20-

M O U N T I N G I N S T R U C T I O N S











REF 20360

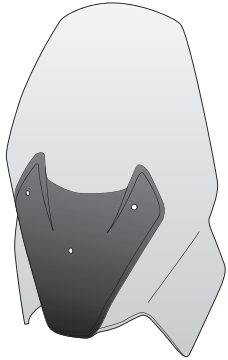WINDSHIELD NG SPORT (PUIG SUPPORT)



NEED PUIG SUPPORT




ID	PART	DESCRIPTION	QTY	REF
1		SPORT screen	1	10775W/H/F/N
2		Metal upper support	1	SOPOR3P2-S20360
3		Right metal inferior support	1	SOPOR3P2-IR20360
4		Left metal inferior support	1	SOPOR3P2-IL20360
5		M5x9 special screw hexagonal length 10	2	TORNI-EM5---761
6		Ø9XØ6X8mm silentblock	3	AROPASACABLES-3
7		Ø12XØ6,8X7,3 bush with blange	3	CASQUI-1A---750
8		M5x11 Ø11 ISO 7380 Allen screw	6	TORNI-AI----520
9		M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
10		M5 ISO 7380 Allen cap screw	9	TAPON-----85

BMW F900R '20-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

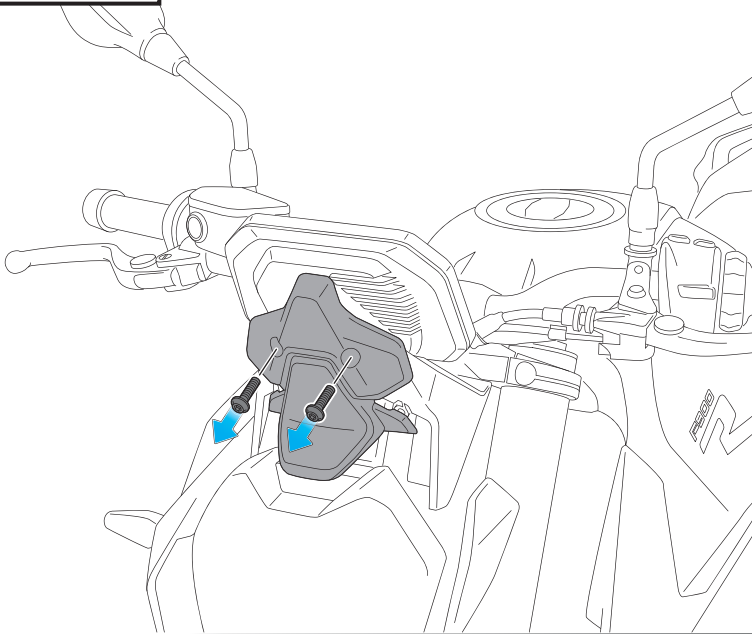


2

ASSEMBLY

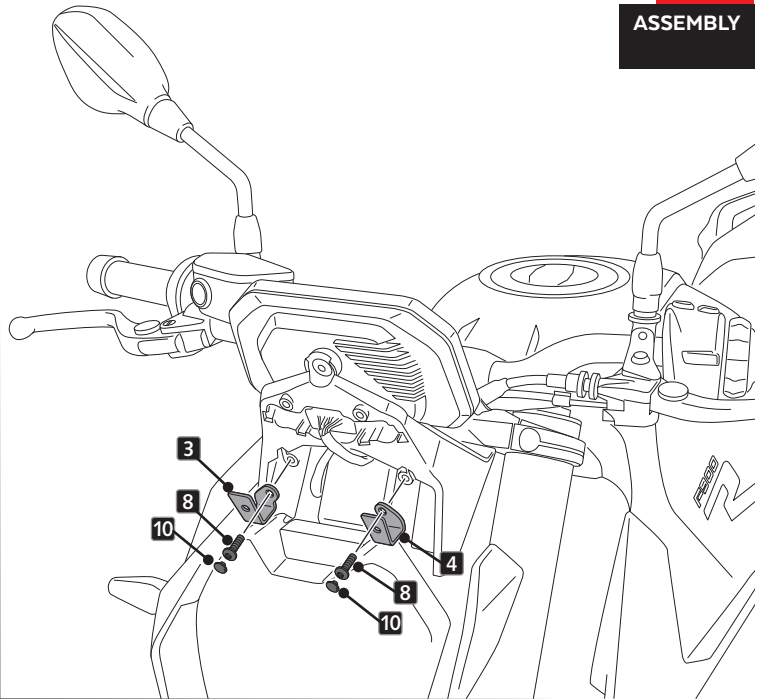


3

ASSEMBLY

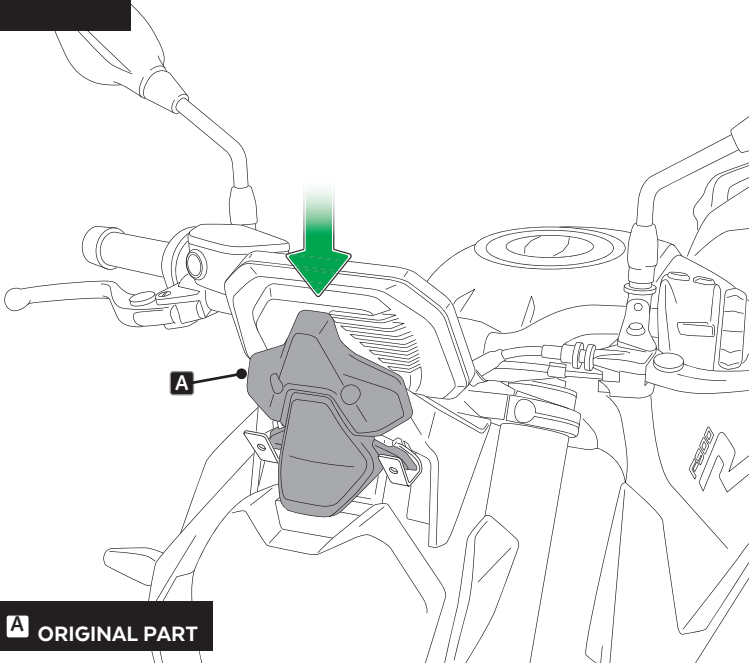

4

ASSEMBLY

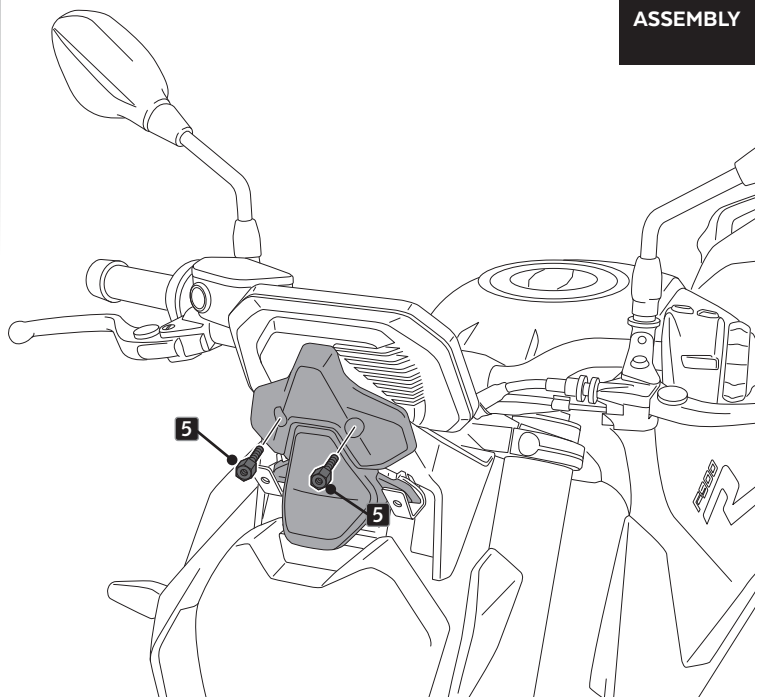


A ORIGINAL PART

BMW F900R '20-

MOUNTING INSTRUCTIONS


5

ASSEMBLY

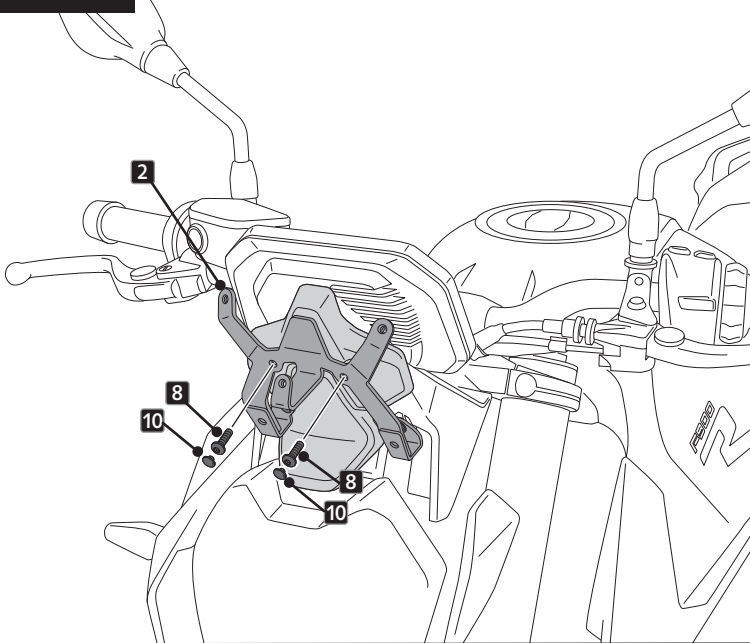


6

ASSEMBLY

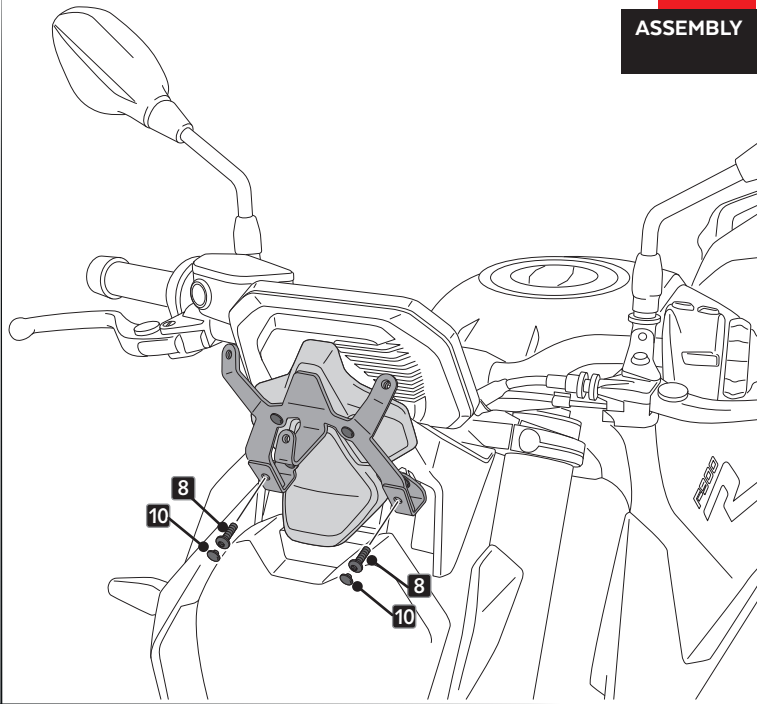

7

ASSEMBLY

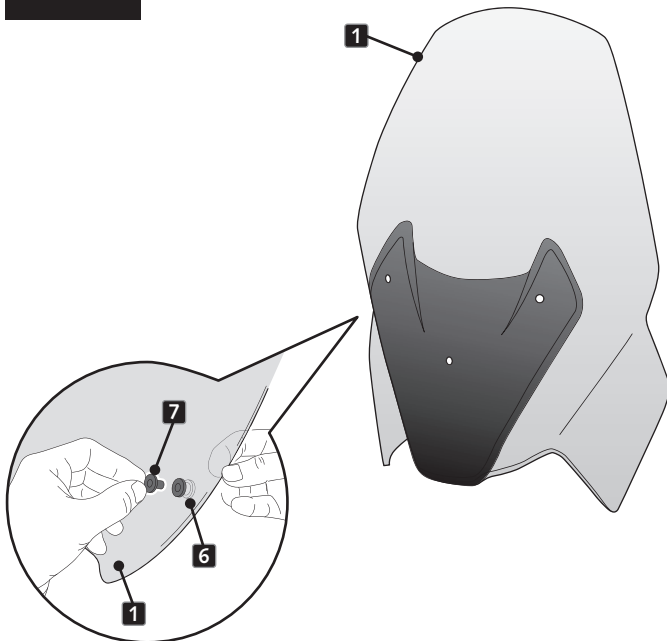

8

ASSEMBLY

