

SUZUKI V-STROM 1000 '14 -'19
SUZUKI V-STROM 1050 '20>

M O U N T I N G I N S T R U C T I O N S

REF 20410N

PHB19 PROTECTOR SWINGARM



1 Person



15 min



EASY



TUBE









Nº 10

RATCHET

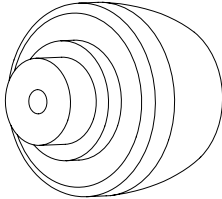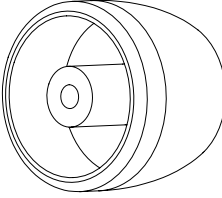

Nº 10

ID.	PART	QTY.	REF.:
1		1	PROBAS64-0-0064
2		1	PROBAS25-2-0025
3		1	VARIFO17-1-0017
4		2	TUZBM6000000024
5		2	ARANDEPD125-054
6		2	TAPAFINAL17-18


SUZUKI V-STROM 1000 '14 -'19
SUZUKI V-STROM 1050 '20>

REF 20410N

MOUNTING INSTRUCTIONS


1

ASSEMBLY

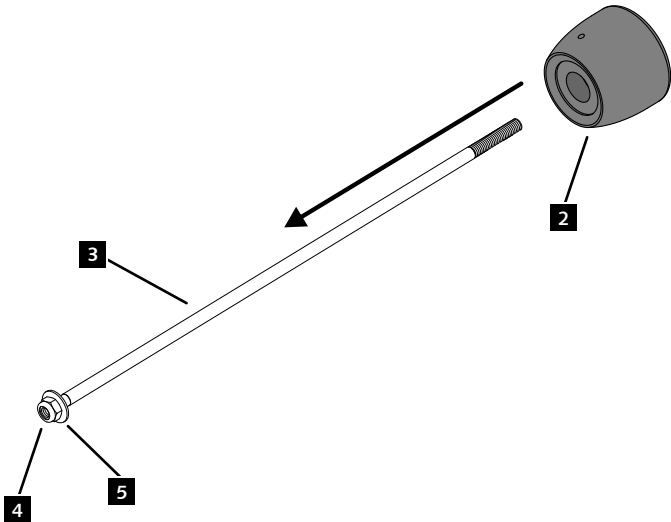



2

ASSEMBLY

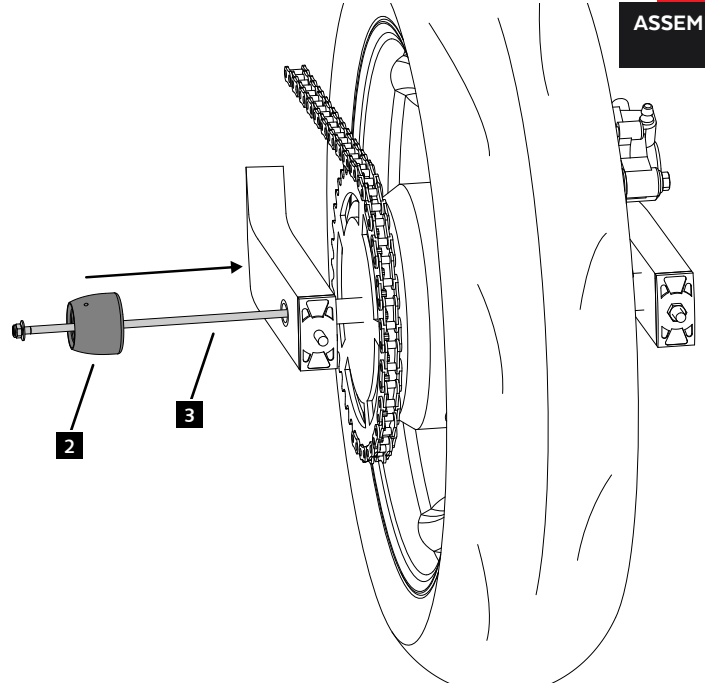

3

ASSEMBLY

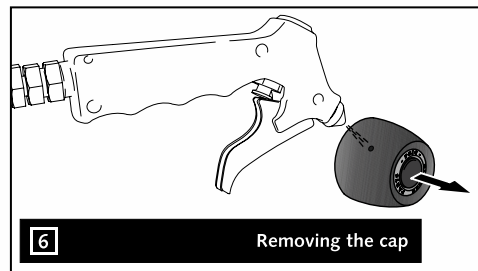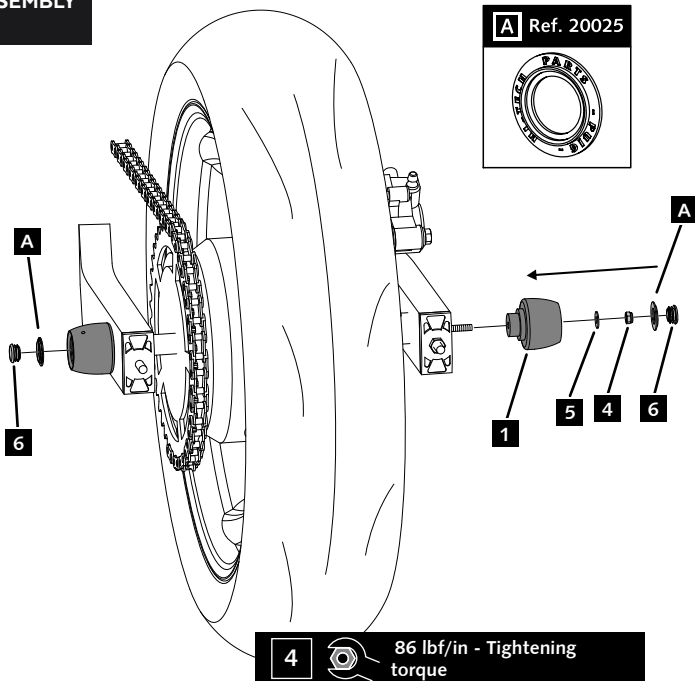

6

Removing the cap