

KAWASAKI Z400 '19-

M O U N T I N G I N S T R U C T I O N S

REF 3548

WINDSHIELD NAKED NEW GENERATON SPORT



1 Person



20 min












EASY

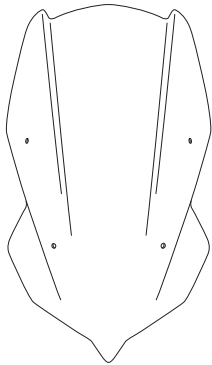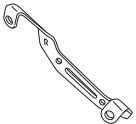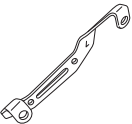

ALLEN

N° 3
N° 4




ID	PART	DESCRIPTION	QTY	REF
1		Sport screen	1	3548C /F/H/N/R/V/WM3
2		Right metal support	1	SOPOR2P3-R-3548
3		Left metal support	1	SOPOR2P3-L-3548
4		M5x20 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-730
5		Ø13x Ø8,5 x3,5 arrowhead	4	CASQUI-----775
6		M5 silentblock	4	SILENBTM5-046/1
7		M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
8		M5x1 Nylon washer	4	ARNV00000000245
9		M5 ISO 7380 Screw cap	4	TAPON-----85

KAWASAKI Z400 '19-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

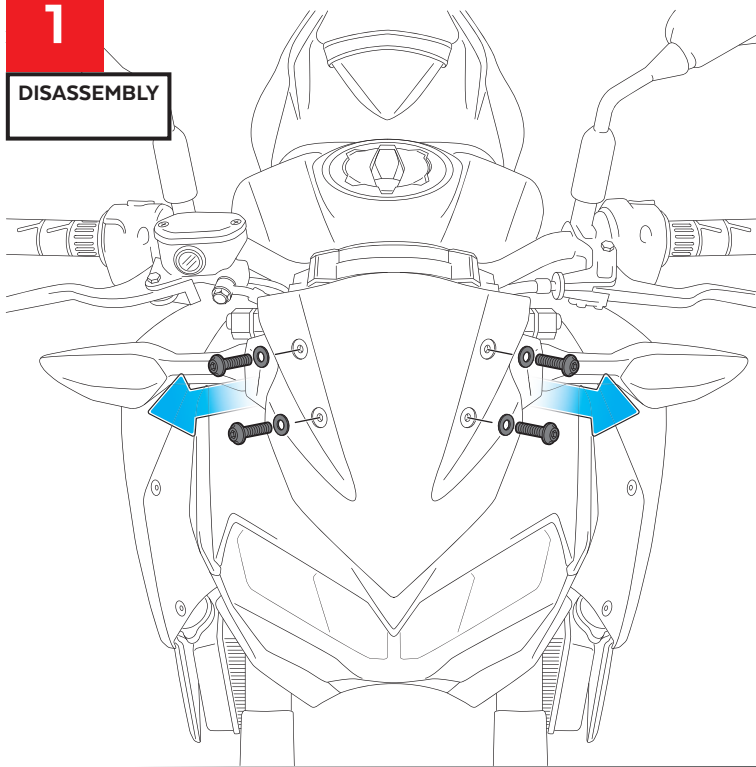

2

ASSEMBLY

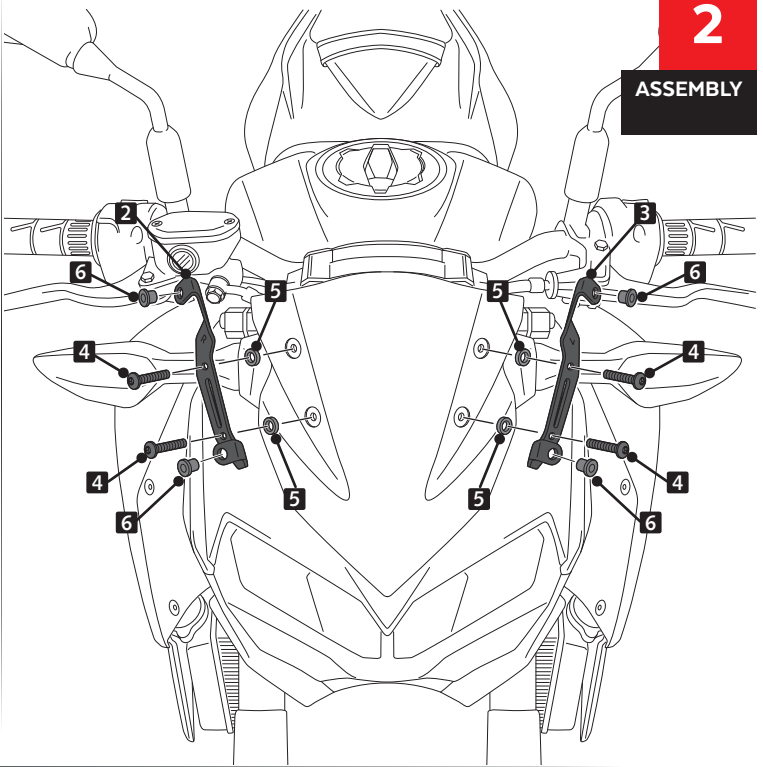

3

ASSEMBLY

