


BMW F850GS ADVENTURE

REF 3596





SIDE COVERS

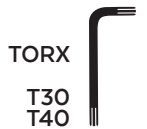

ID	PART	DESCRIPTION	QTY	REF
1		Right side cover	1	3596J/CM3
2		Methacrylate window	1	3596WM3
3		Left side cover	1	3596J/CM3
4		Right metal support (R1)	1	SOPOR4P10R13596
5		Right metal support (R2)	1	SOPOR4P10R23596
6		Left metal support (L1)	1	SOPOR4P10L13596
7		Left metal support (L2)	1	SOPOR4P10L23596
8		M5 silentblocks	4	SILENBTM5-046/1
9		M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493
10		M5x1 nylon washer	8	ARNV00000000245
11		M5 ISO 7380 screw cap	6	TAPON-----85
12		M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
13		M5x11 Ø11 ISO 7380 Allen screw	2	TORNI-AI----520
14		Ø4,5 x Ø11 x 2mm Rubber washer	2	ARAND-EPDM--722
15		M8x25 DIN912 screw	2	TORNI-D912--241
16		M8 special Nut	2	TUERCEG6923-249
17		Silicon separator Ø16 x8 (Supplied already mounted on items 1-3)	2	TOPE-PA-16DX8--

BMW F850GS ADVENTURE

MOUNTING INSTRUCTIONS

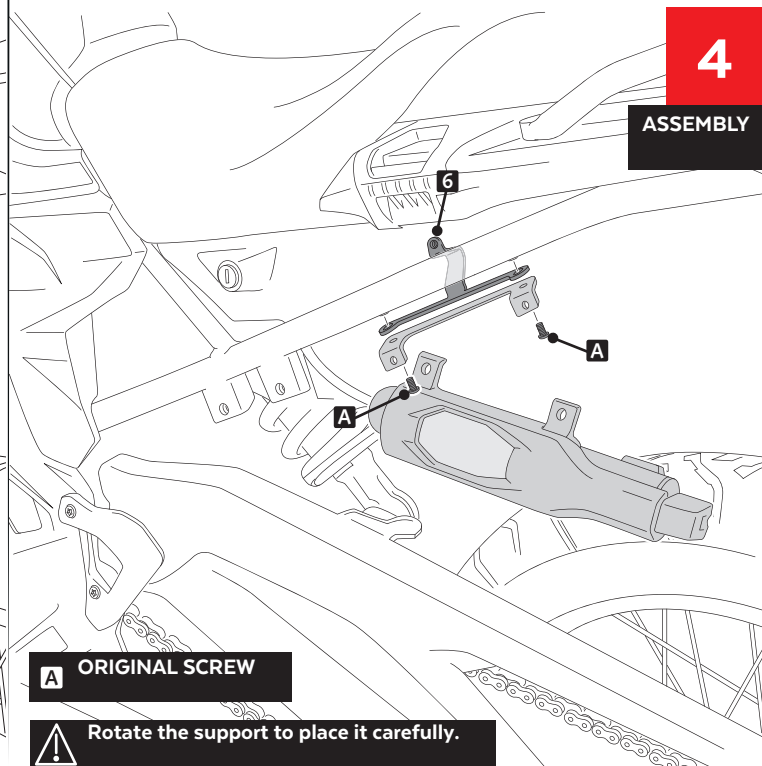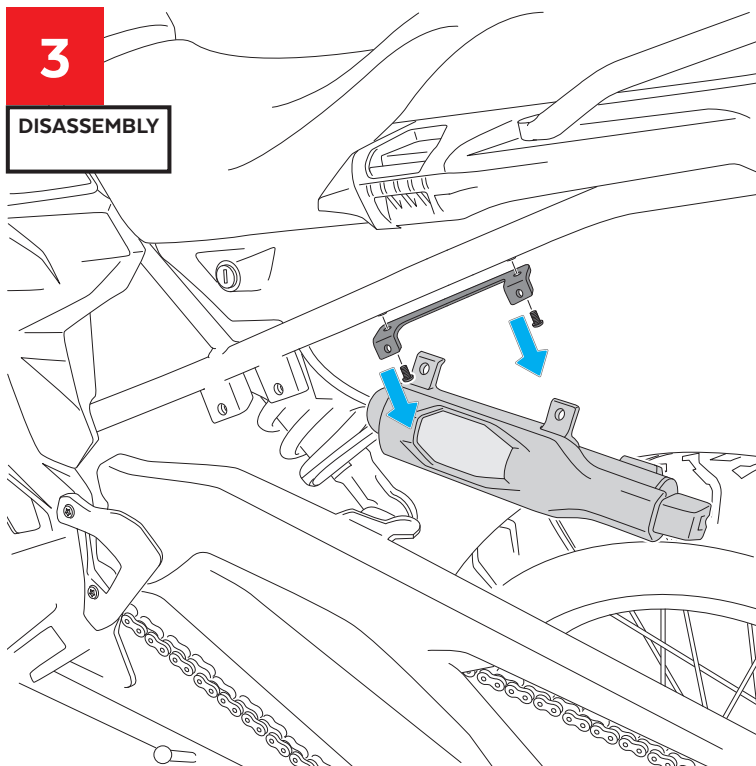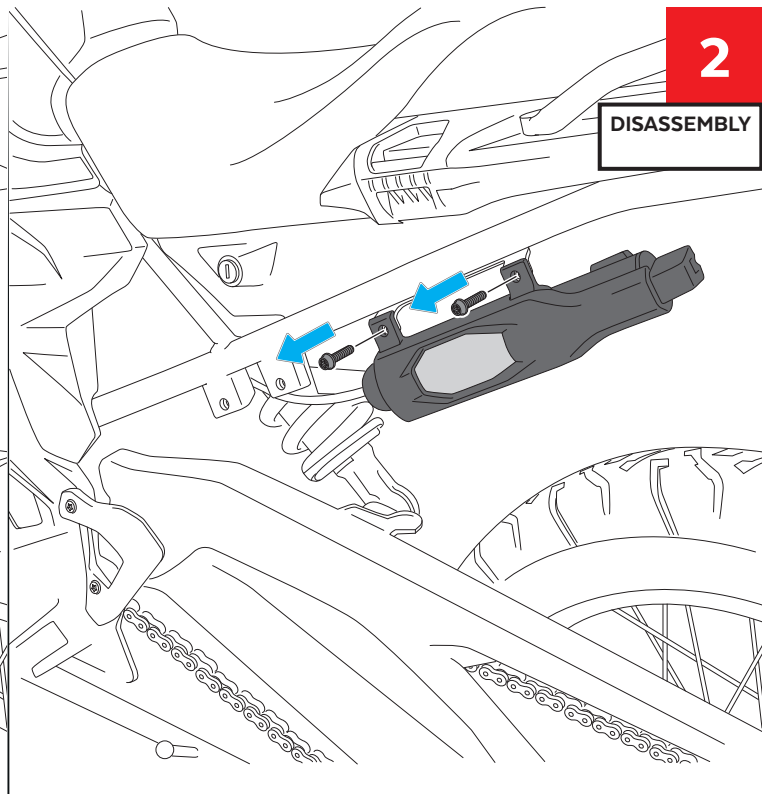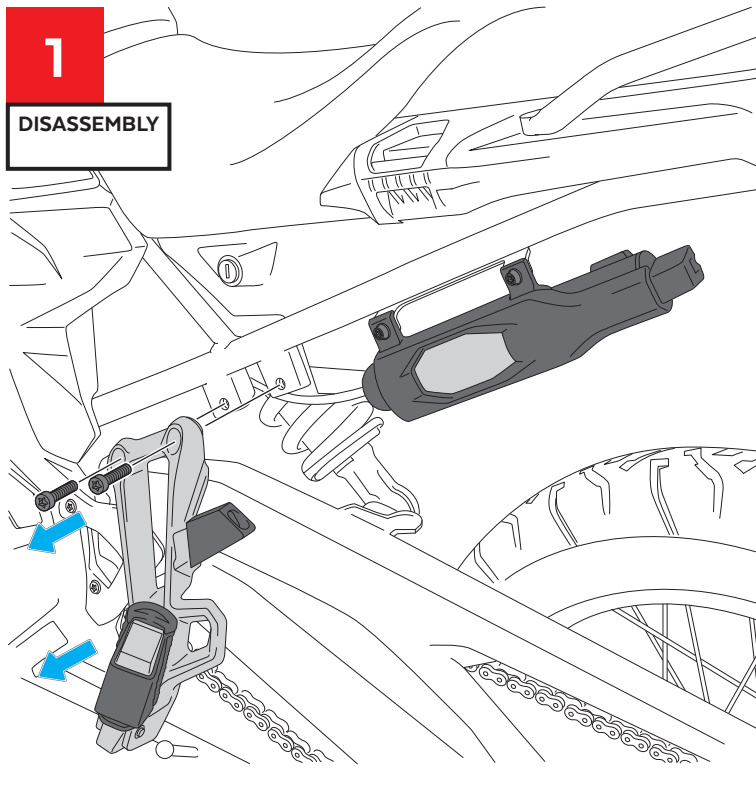

A ORIGINAL SCREW


! Rotate the support to place it carefully.

BMW F850GS ADVENTURE

MOUNTING INSTRUCTIONS

5


ASSEMBLY

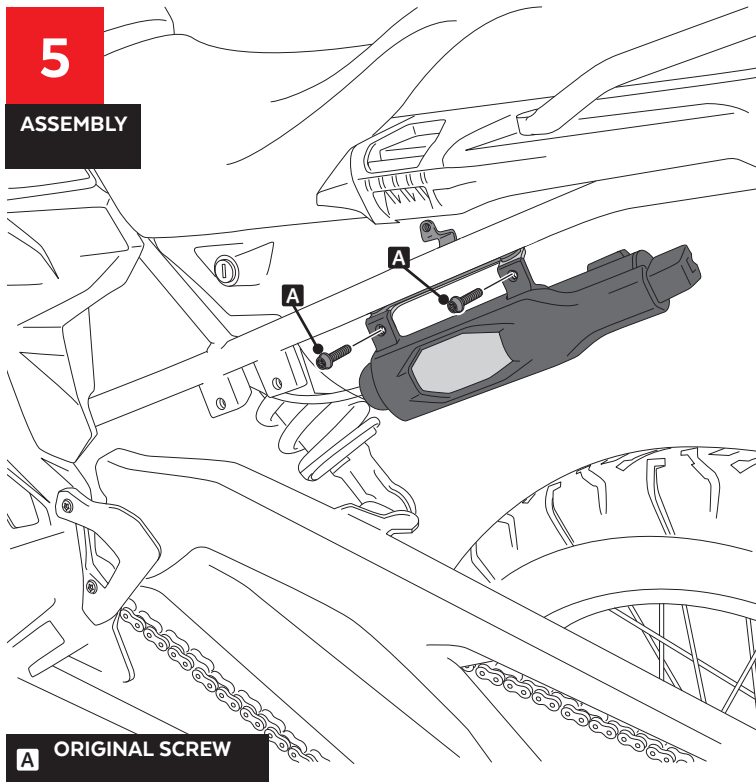

A ORIGINAL SCREW

6

ASSEMBLY

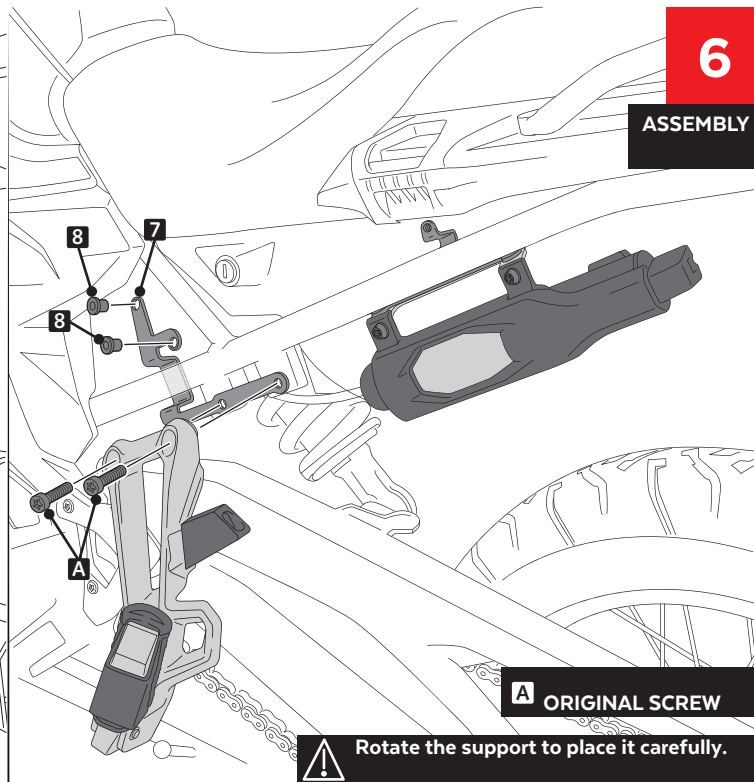


A ORIGINAL SCREW

⚠ Rotate the support to place it carefully.


7

ASSEMBLY

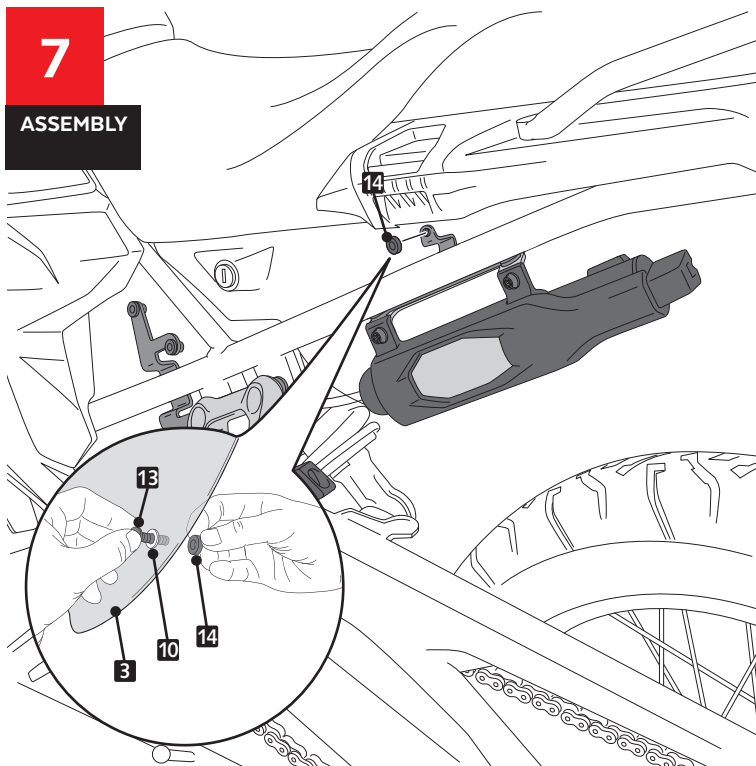

8

ASSEMBLY

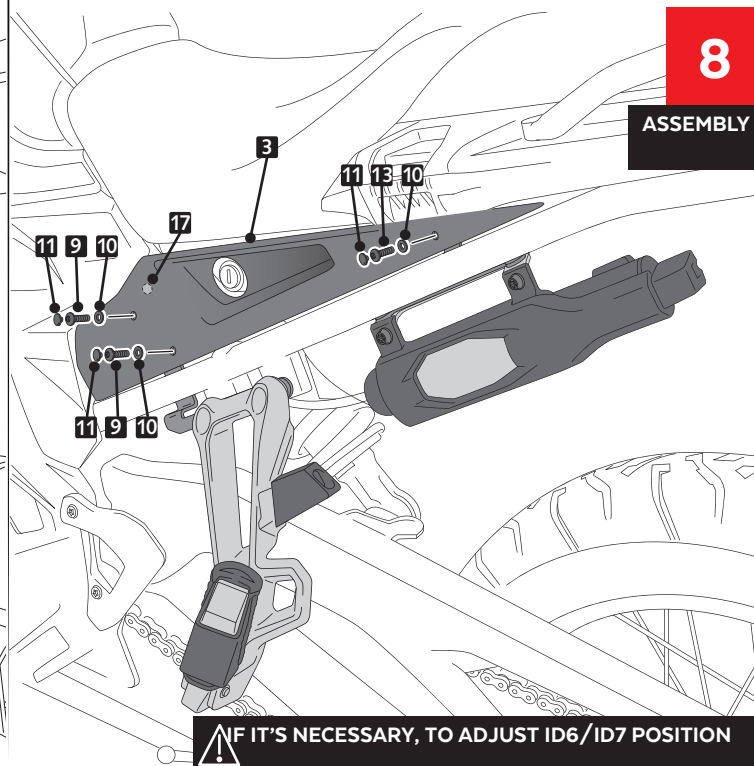

⚠ IF IT'S NECESSARY, TO ADJUST ID6/ID7 POSITION

BMW F850GS ADVENTURE

MOUNTING INSTRUCTIONS

