


BMW R1250R '19-


M O U N T I N G I N S T R U C T I O N S

REF 3623

WINDSHIELD NEW GENERATION SPORT

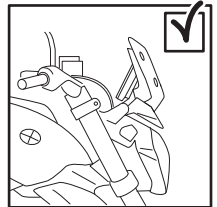

TORX
T25

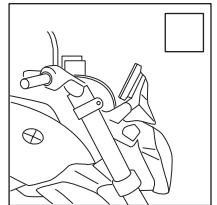

ALLEN
N° 3


ID	PART	DESCRIPTION	QTY	REF
1		SPORT Screen	1	3623F/H/N/WM3
2		Ø9 x Ø6 x8mm silentblock	4	AROPASACABLES-3
3		Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
4		M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
5		M5 ISO 7380 Allen cap screw	4	TAPON-----85

BMW R1250R '19-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

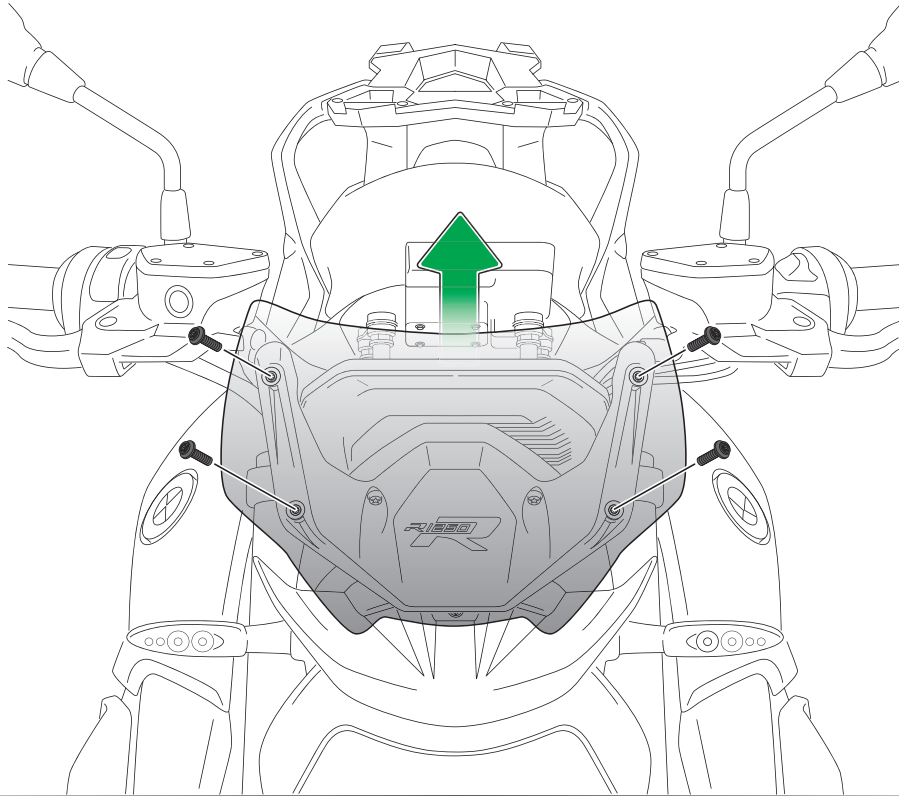

2

ASSEMBLY

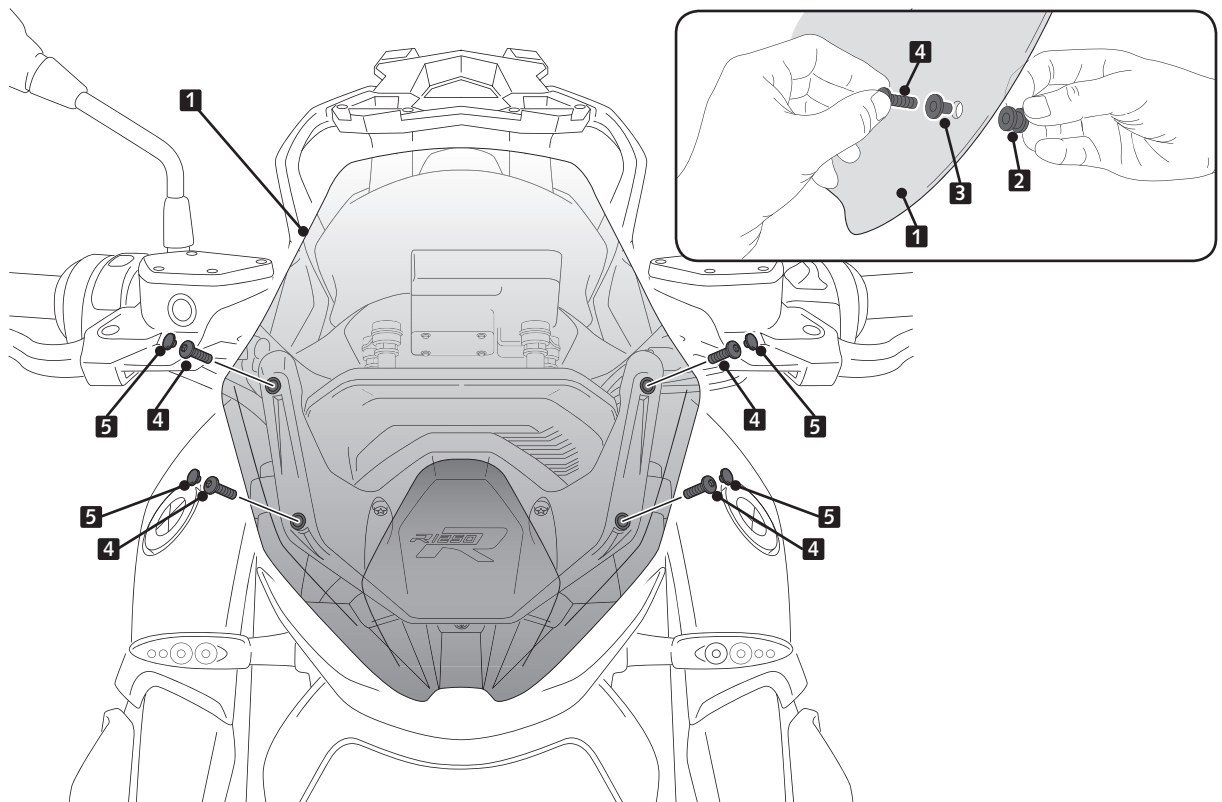


BMW R1250R '19-


M O U N T I N G I N S T R U C T I O N S

REF 3624






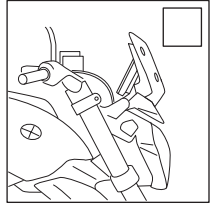

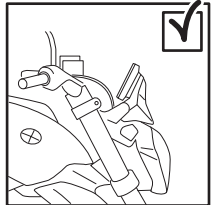

WINDSHIELD NEW GENERATION SPORT

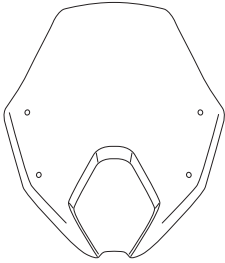

TORX
T25
T40



ALLEN
N° 3
N° 6


ID	PART	DESCRIPTION	QTY	REF
1		Sport Screen	1	3623F/H/N/WM3
2		Right metal support (R)	1	SOPOR2P2-R-3625
3		Left metal support (L)	1	SOPOR2P2-L-3625
4		M8x30 DIN912 Allen screw	2	TORNI-D912-575
5		Ø8,5x Ø14x 12 arrowhead	2	CASQUI-----0083
6		M8x55 DIN912 Allen screw	2	TORNI-D912--631
7		Ø8,5x Ø14x 30 arrowhead	2	CASQUI-----149
8		Ø9 x Ø6 x8mm silentblock	4	AROPASACABLES-3
9		Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
10		M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
11		M5 ISO 7380 Allen cap screw	4	TAPON-----85

BMW R1250R '19-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

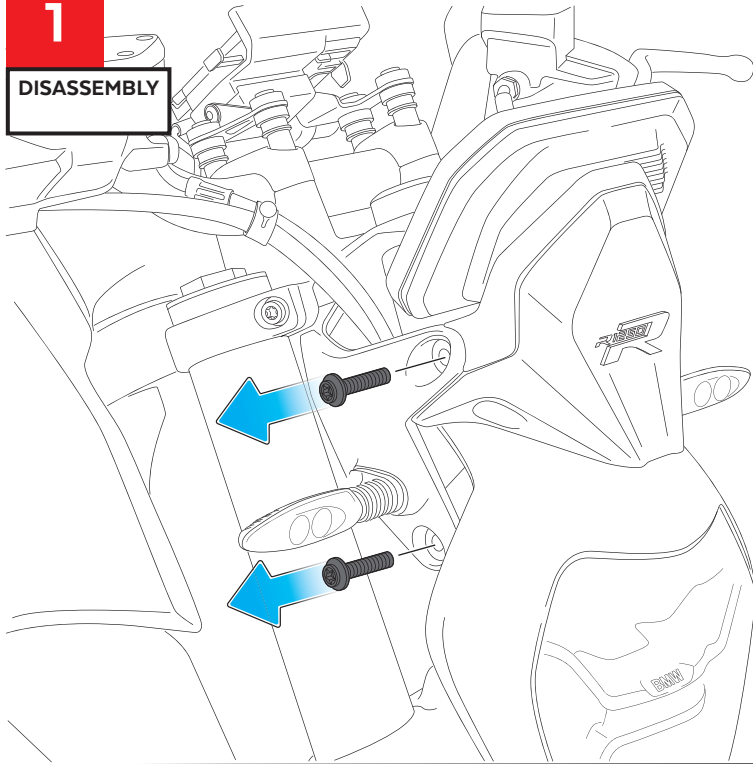


2

ASSEMBLY

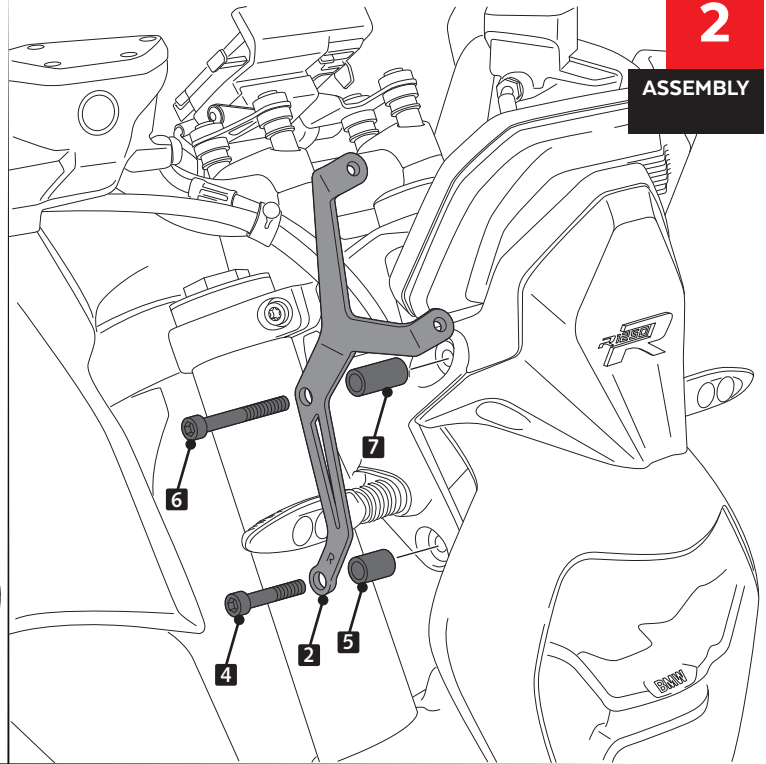


3

DISASSEMBLY

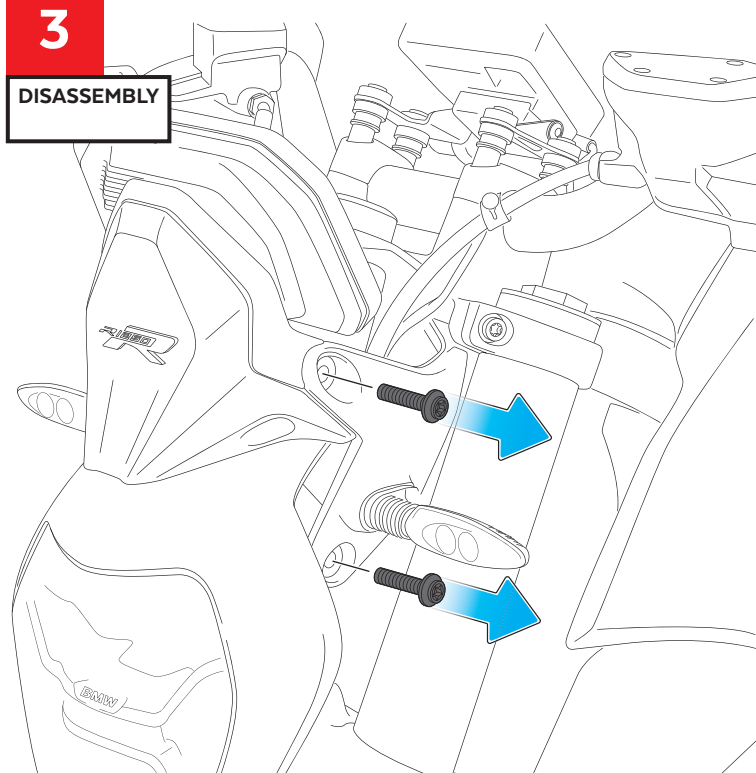

4

ASSEMBLY

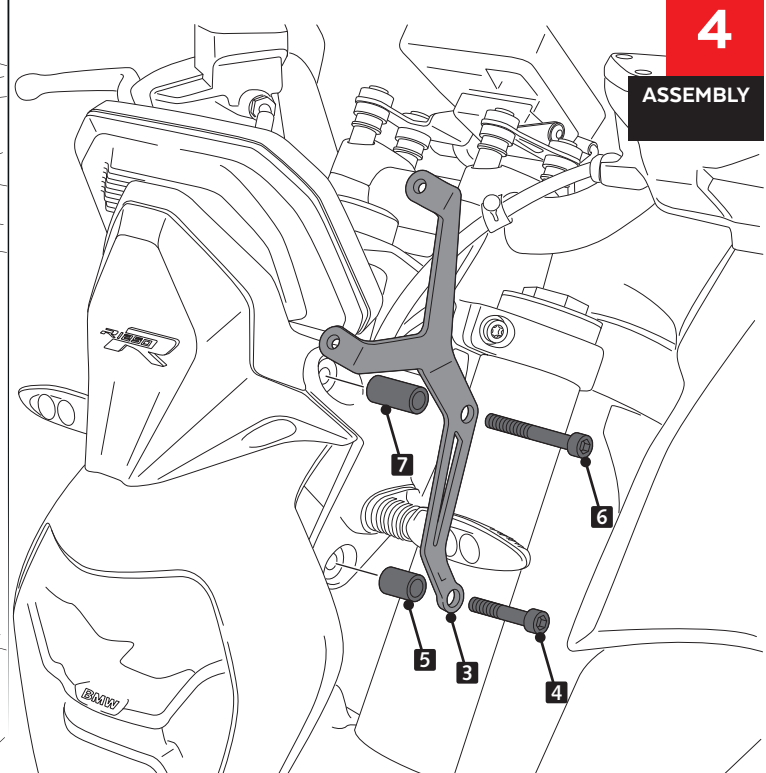

BMW R1250R '19-

MOUNTING INSTRUCTIONS

5

ASSEMBLY

