

HONDA CB500F '16-

M O U N T I N G I N S T R U C T I O N S

REF 3657

WINDSHIELD NEW GENERATION SPORT



1 Person



15 min










EASY



ALLEN

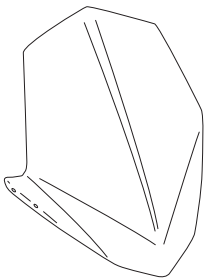Nº 3
Nº 5




ID	PART	DESCRIPTION	QTY	REF
1		Screen	1	3657F/H/N/WM3
2		Right metal support (R)	1	SOPOR2P1-R-3657
3		Left metal support (L)	1	SOPOR2P1-L-3657
4		M5 silentblock	4	SILENBTM5-046/1
5		M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
6		M5x1 Nylon washer	4	ARNV00000000245
7		M5 ISO 7380 Screw cap	4	TAPON-----85

HONDA CB500F '16-

MOUNTING INSTRUCTIONS


1

DISASSEMBLY

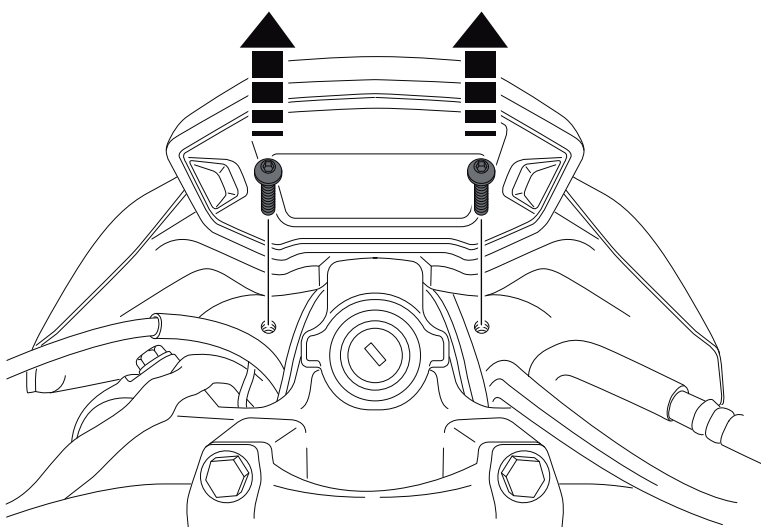

2


ASSEMBLY

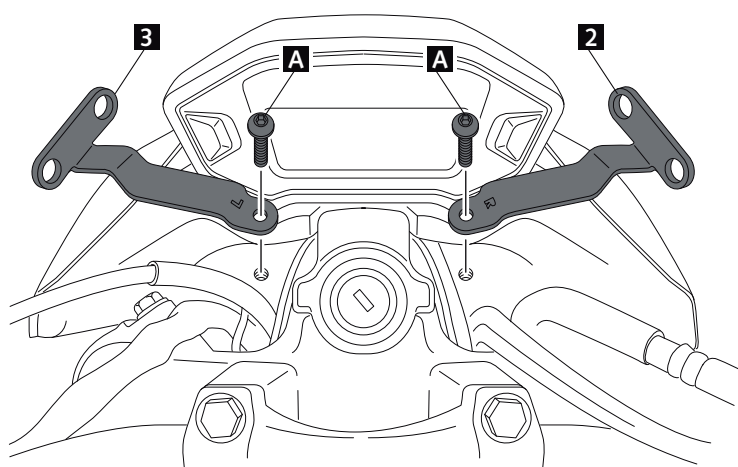

A Original screws

3

ASSEMBLY

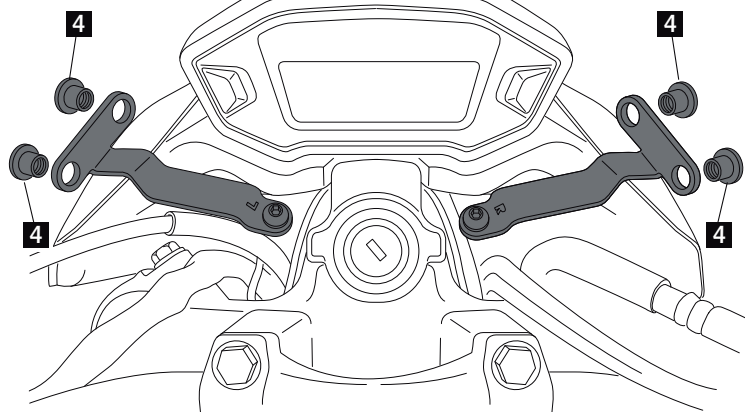

4

ASSEMBLY

