





R I S E R S

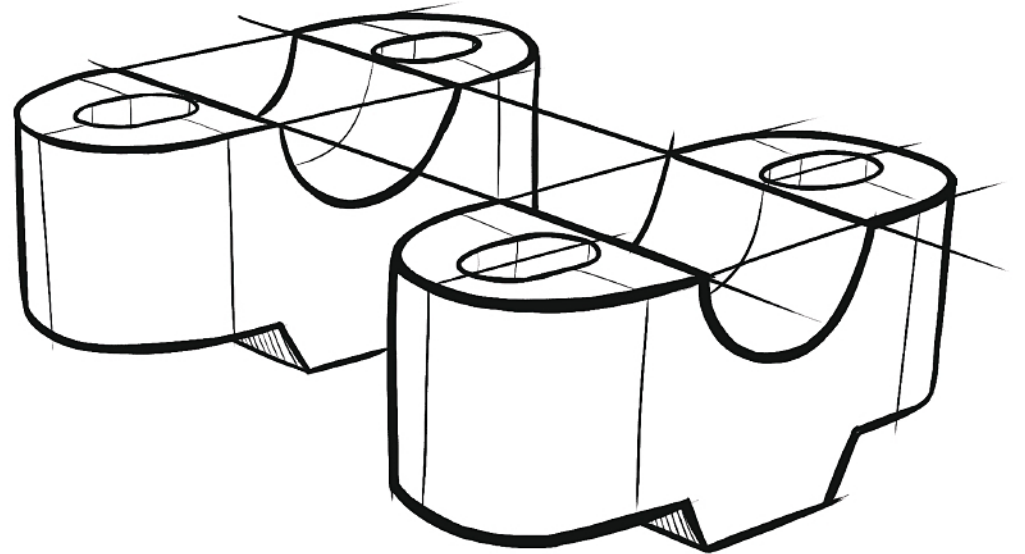


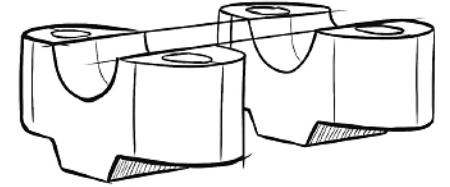


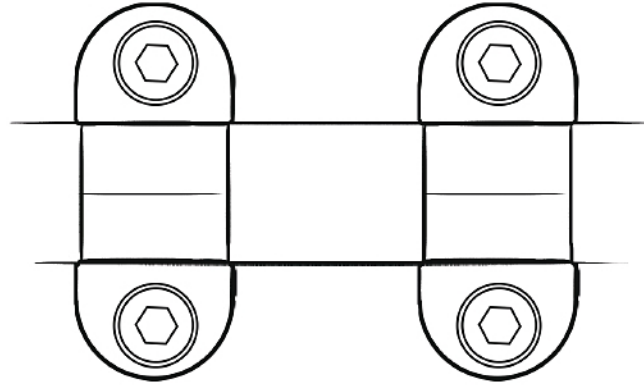

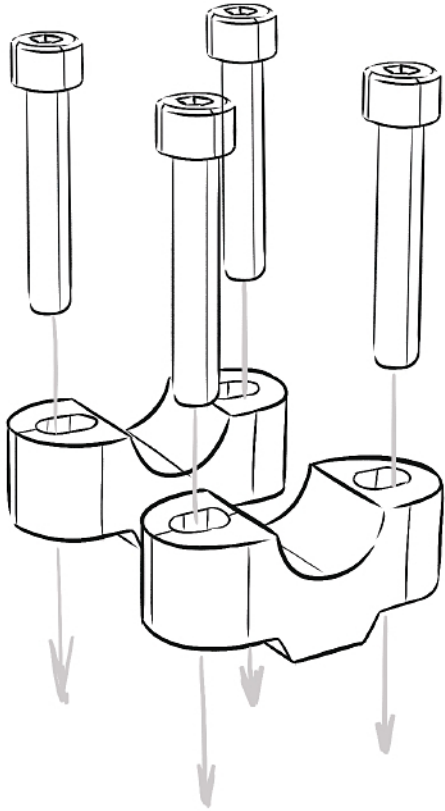

ACHTUNG
Lesen Sie vor der ersten Fahrt das Handbuchs
des jeweiligen Fahrzeugherstellers sorgfältig durch.
IMPORTANT
Please read the entire manual carefully before
riding the vehicle for the first time.
ATTENZIONE
Prima della messa in moto leggere attentamente il
manuale dell'utente.
ATENCIÓN
Leer atentamente el manual de usuario
antes de conducir el vehículo por primera vez.
Puig
Hi-Tech Parts

UNIVERSAL RISERS / TORRETAS UNIVERSALES

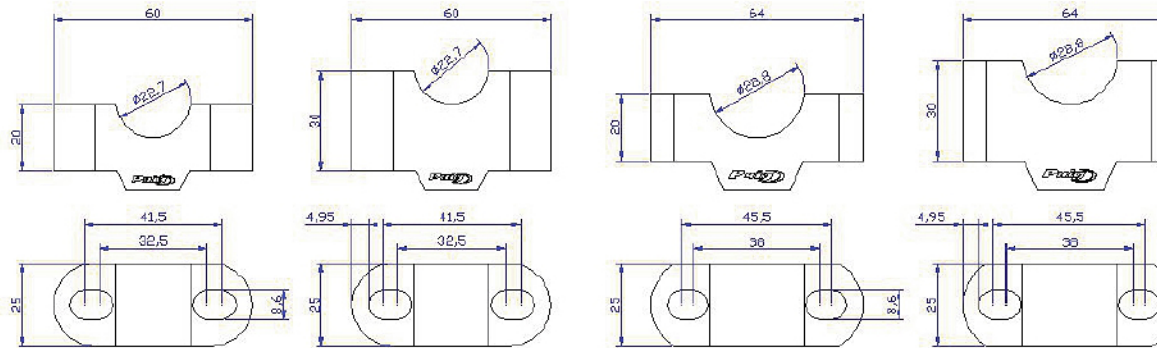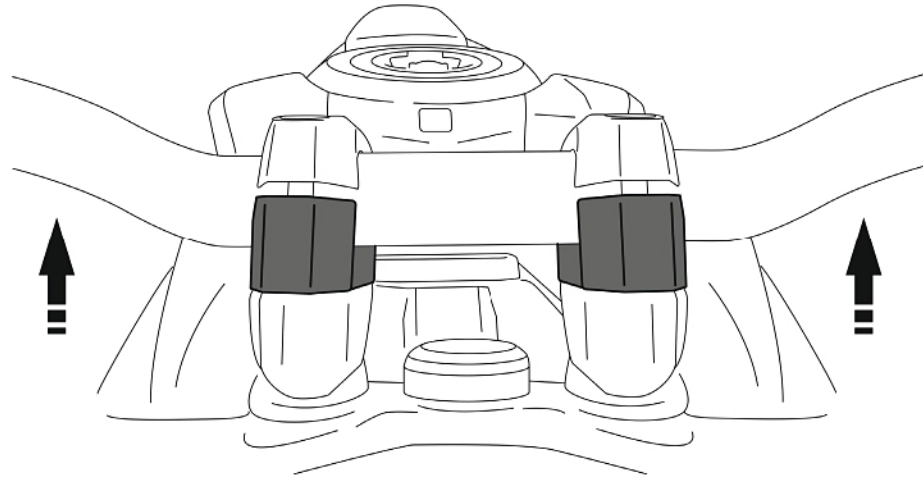


Ref. 3671P

Ref. 3672P

Ref. 3740P

Ref. 3741P

REF:	TORNILLERÍA	SCREWS	QTY.
3671P	Tornillos M8x45 + M8x55	M8x45 + M8x55 screws	4+4
3672P	Tornillos M8x55 + M8x65	M8x55 + M8x65 screws	4+4
3740P	Tornillos M8x45 + M8x55	M8x45 + M8x55 screws	4+4
3741P	Tornillos M8x55 + M8x65	M8x55 + M8x65 screws	4+4

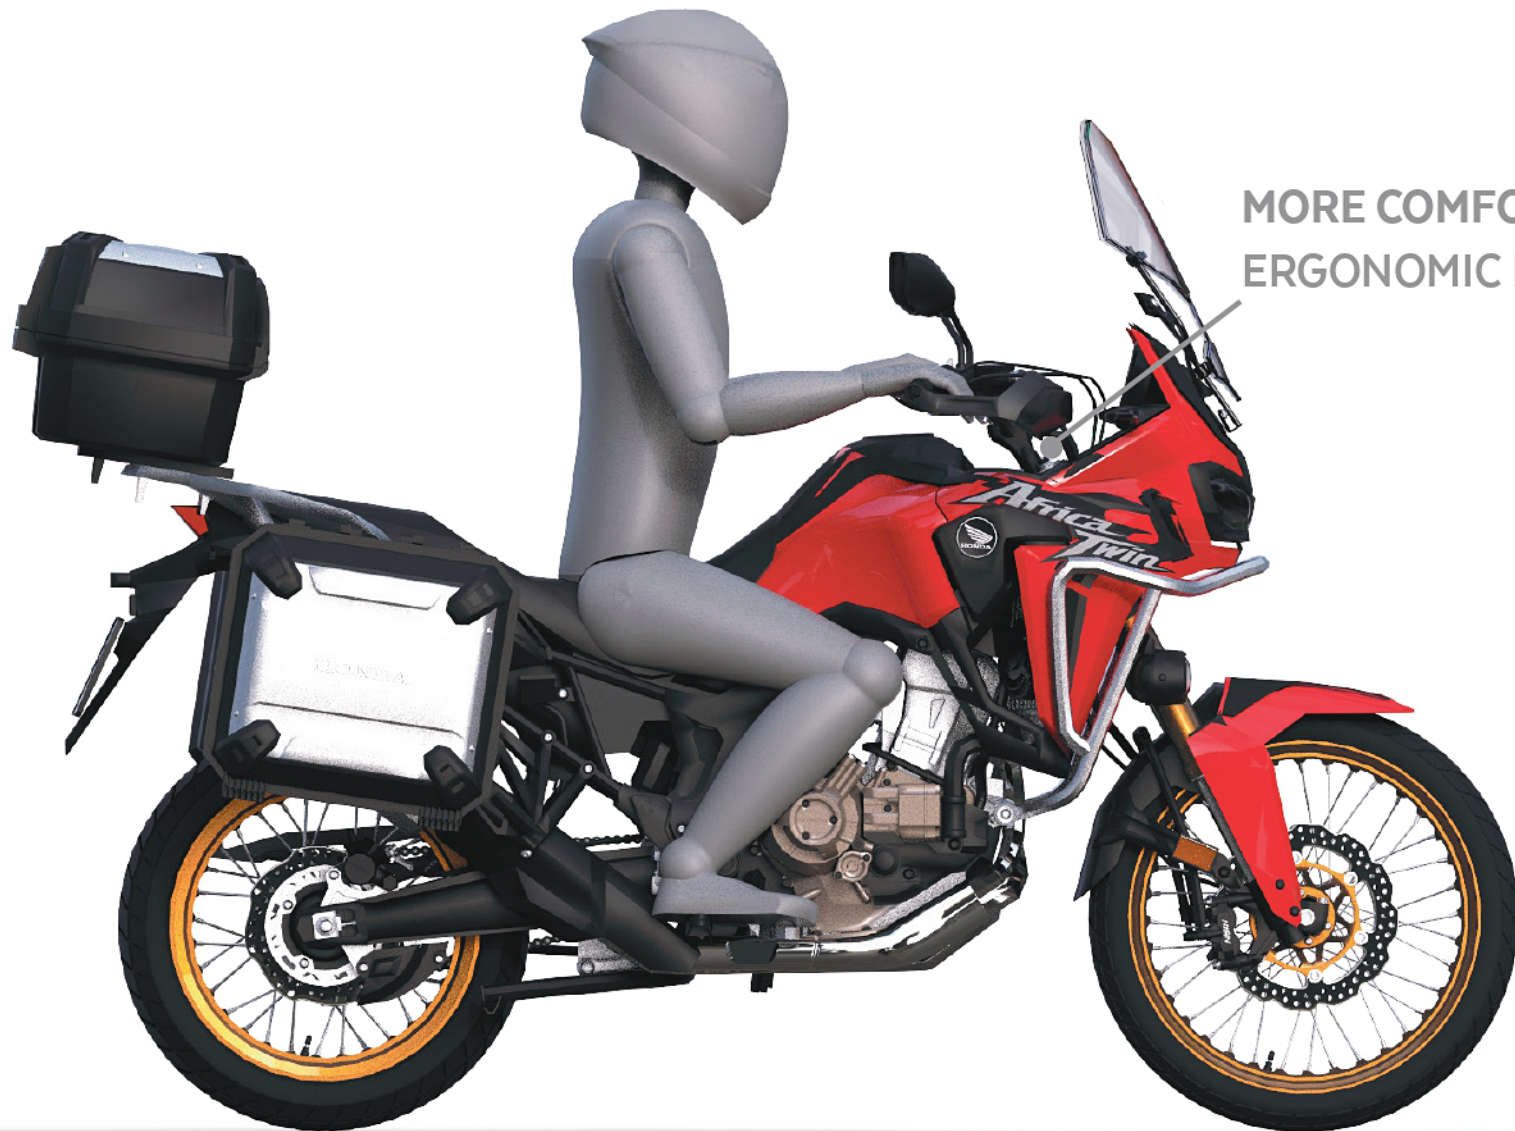

MORE COMFORT
ERGONOMIC POSITION

On our website you can discover more about motorcycle handlebars & controls.