

REF. 4852N





INSTRUCTIONS TO ASSEMBLE

- 1- Remove the original set license support-undertail. Cut off all the undertail area that sticks out (see figure below).
- 2- Mounting process of the license support: Insert the M6x35 fasteners (2) with the M6 washers in the interior part of the cowl. Thread the cylinders (4) through the exterior part. Next, tight the license support (1) with the M6 washers (5) and M6 nuts (6).
- 3- Bridles are supplied to tight the license light cable into the slot of the support.

Material supplied to assemble the license support:

POS	DENOMINACIÓN	CANTIDAD
1	License support	1
2	M6x35 DIN933	4
3/5	M6 DIN9021 washer	8
4	Aluminium cylinders Ø18x11	4
6	M6 Nut DIN6923	4
7	Plastic Bridle	2
8	License light	1
9	Reflector support	1
10	Reflector	1

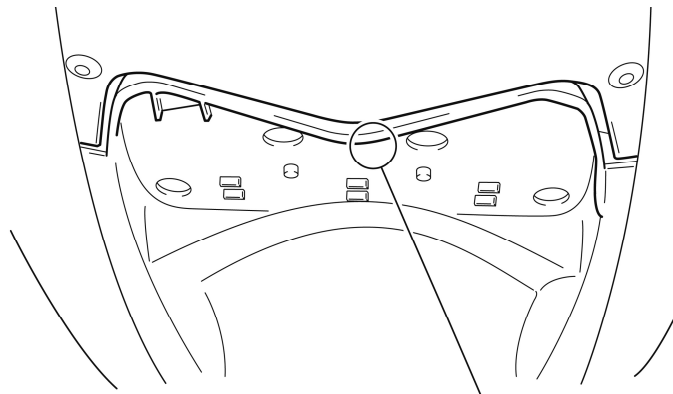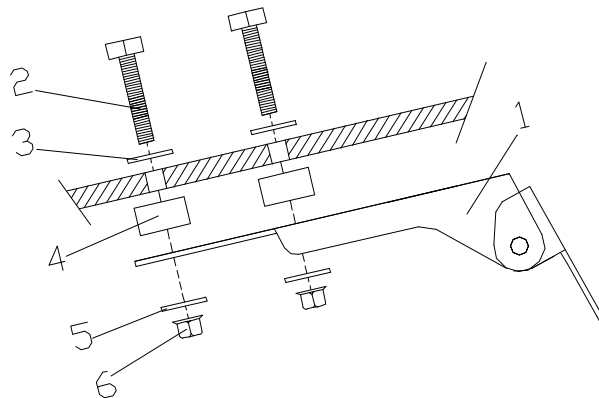

CUTTING AREA