
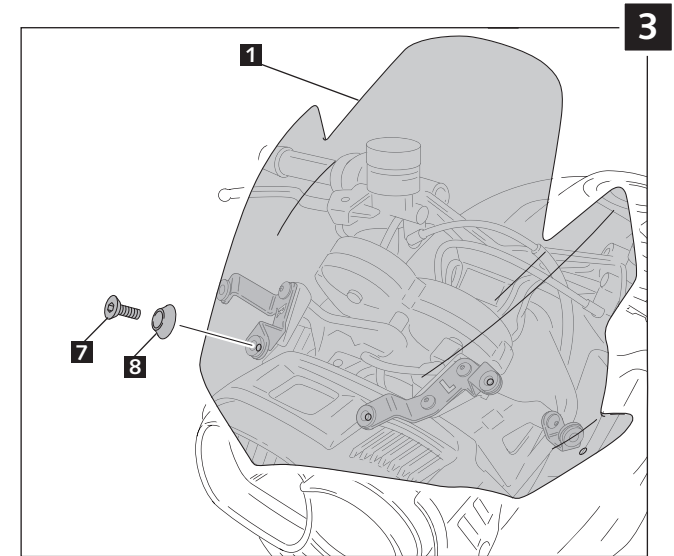
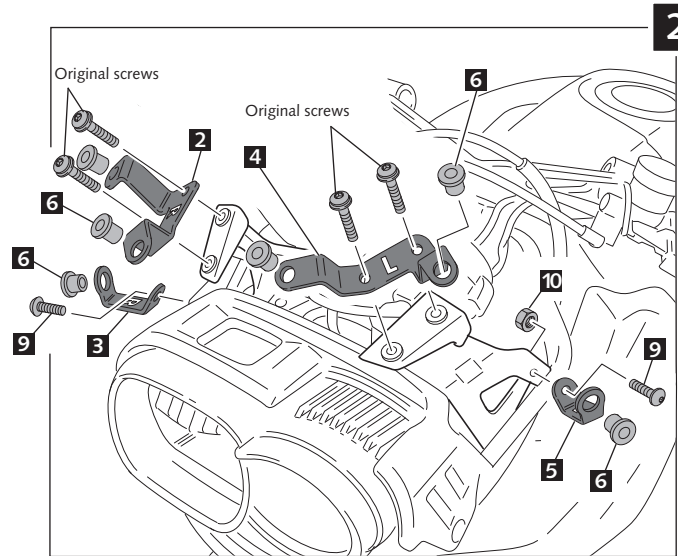


MOUNTING INSTRUCTIONS

WINDSHIELD ADAPTABLE TO
BMW K1300 R '09 -

Ref.: 4940

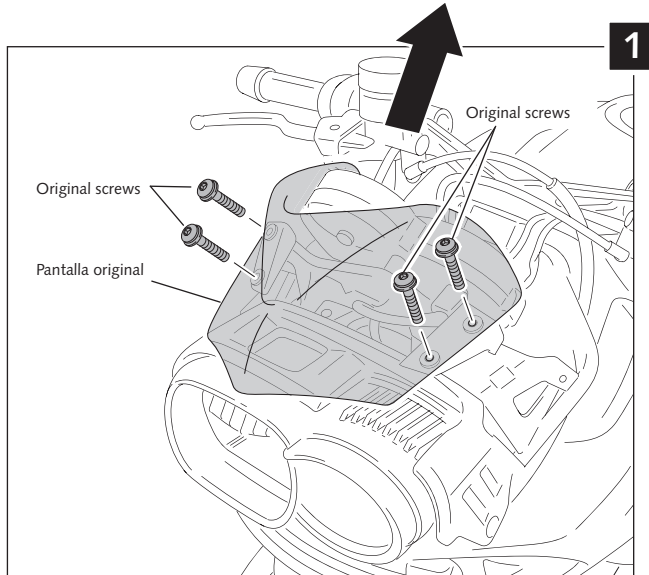

ID.		DESCRIPTION	QTY.
1		Screen	1
2		Right metal support A	1
3		Right metal support B	1
4		Left metal support A	1
5		Left metal support B	1
6		M6 well nut (supplied already mounted on the piece nº2-3-4-5)	6
7		M6x20 ISO 7991 allen screw	6
8		Ø20 plastic washer	6
9		M5x16 ISO 7380 Allen screw	2
10		Special M5 nut	2