

INSTRUCTIONS TO ASSEMBLE

Remove the fasteners that subject the chassis to the engine, on the point marked below (and the opposite side). Mount the protectors on each own side as the fi gure below shows. Tight the set, and place the caps. All the screws replaced, should be tightened to the torque specifi ed in the oem maintenance manual for your motorcycle. If no torque specifi cations are provided in the oem maintenance manual, may be used 54Nm for all M10 screws.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

ID.	DESCRIPTION	REF.	QTY.
Ι	Covers set	CONGOMANPRO-R12	2
2	M10/150x70 D1N912 screw	TORNIAD912-0347	2
3	Ø20ext. Ø10int. x2 D1N125/A washer	M2AM10DIN125AZB	2
4	Nylon protector	PROTECNLR12-145	2
5	Black aluminium spacer	CASQU109-1-1409	2
6	Left steel plate	PLATIN56-1-0712	I
7	Right steel plate	PLATIN57-I-0723	I
8	MIO/I50 DIN982 nut	TUERCAE985-0132	2
9	Right aluminium spacer	CASQU149-1-1449	I
10	Left aluminium spacer	CASQU150-0-1450	I
П	M10/125x100 D1N912 screw	TORNIAD912-0329	I
12	M10/125x60 DIN912 screw	TORNIA1060333	I

FOR TO ASSEMBLE THE CRASH PADS, IF YOU ARE NOT A TRAINED MECHANIC, PLEASE CONTACT A SPECIALIST. MOTOPLASTIC, S.A. TAKES NO RESPONSIBILITY FOR DAMAGES CAUSED BY IMPROPER INSTALLATION. THE USE OF CRASH PADS DO NOT GUARANTEE A FULL PROTECTION IN CASE OF ACCIDENT. MOTOPLASTIC-PUIG DECLINE ANY RESPONSIBILITY IN CASE OF MOTORCYCLE DAMAGE.

MOUNTING INSTRUCTIONS

CRASH PADS FOR


SFV650 GLADIUS '09-'16


SUZUKI SV650 '16-'18

SV650X '18


Ref.: 4962

RIGHT SIDE

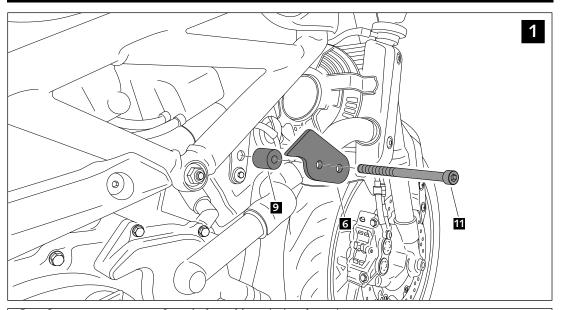

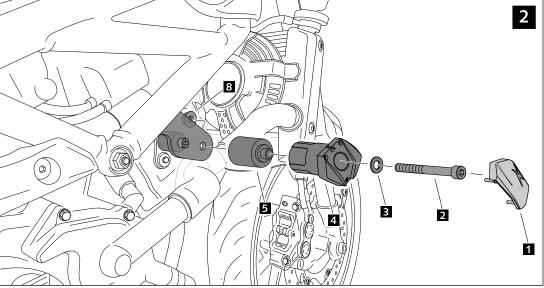



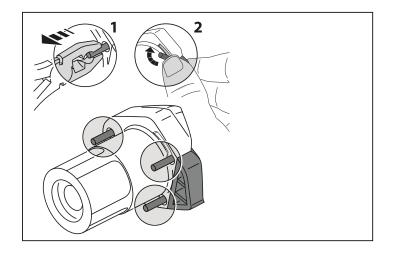


MOUNTING INSTRUCTIONS


CRASH PADS FOR

SUZUKI SA

SFV650 GLADIUS '09-'16 SV650 '16-'18 SV650X '18 Ref.: 4962

LEFT SIDE

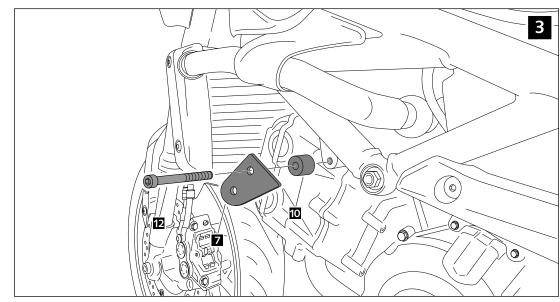

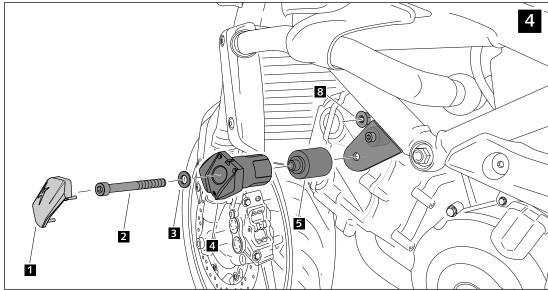

Learn more about motorcycle frame and body we have.