


INSTRUCTIONS TO ASSEMBLE

- 1- Dismount the original chainguard.
- 2- Mount the hardware (1) supplied as the figure below shows.
- 3- Mount the wellnuts (4) on the rear hugger.
- 4- Tight the rear hugger using the M6x15 screws supplied. Adjust it through the regulation that the inserted nuts (2) on the hardware offer.
- 5- Check them periodically, and tighten the fixations.
- 6- In case your motorcycle has other accessories, observe that it does not interfere with the hugger.

Material supplied to assemble the hugger:

POS.	DESCRIPTION	QTT.
1	Hardware	1
2	M6 insidenuts	2
3	Black M6x15 screw DIN1001	4
4	Wellnuts	4

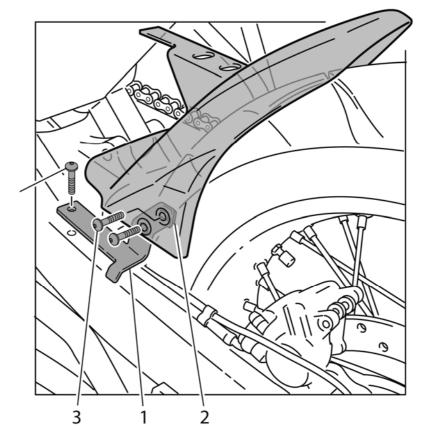

Original screw