

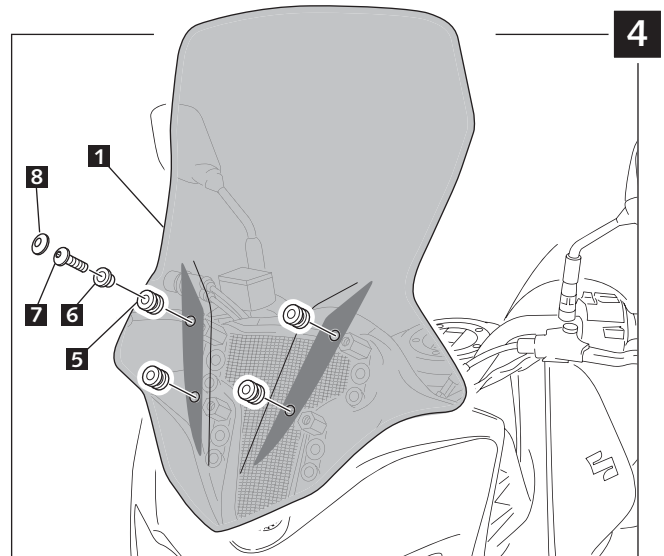
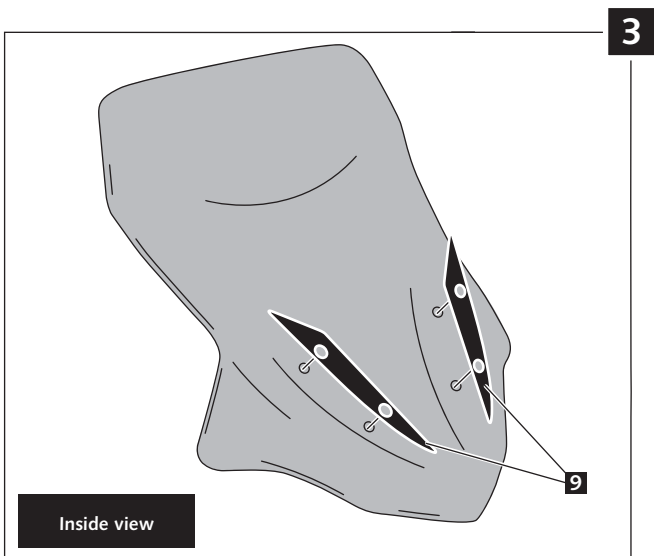


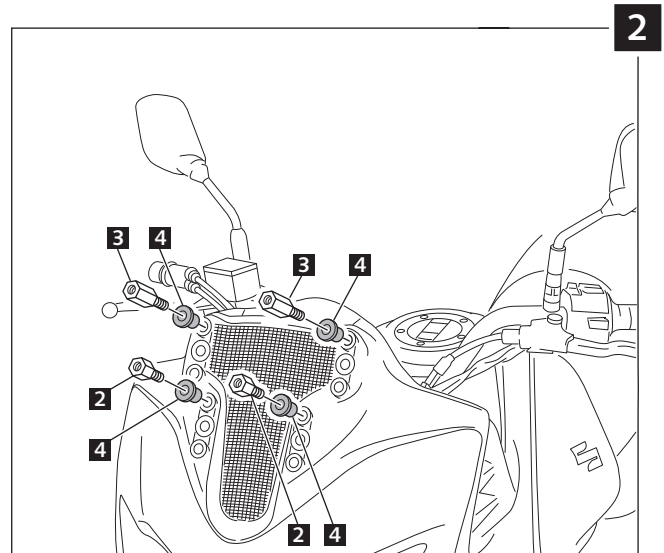


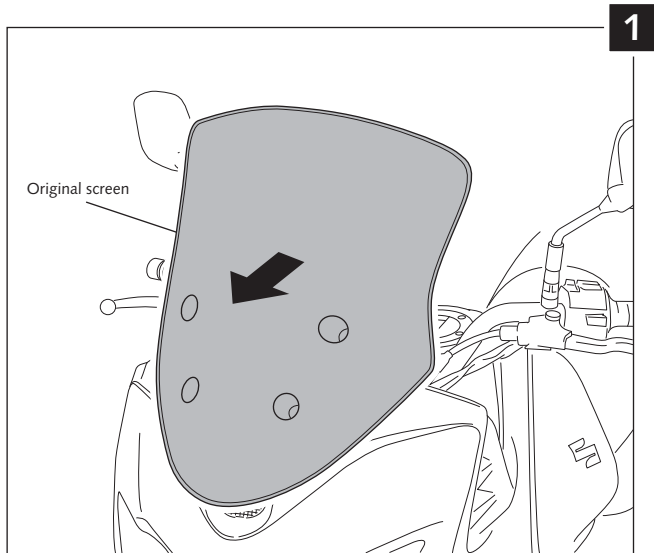





## MOUNTING INSTRUCTIONS

SCREEN ADAPTABLE TO  
SUZUKI DL 650A V-STROM 12'-/XT 15'

Ref.: 5895



ID.		DESCRIPTION	QTY.
1		Screen	1
2		Especial nut M5x13 + hexagonal length 10	2
3		Especial nut M5x17 + hexagonal length 14	2
4		M5 well nut	4
5		Well nut	4
6		Bush with flange	4
7		M5x16 ISO 7380 Allen screw	4
8		M5 ISO7380 screw cap	4
9		Stickers set	1

## TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

