

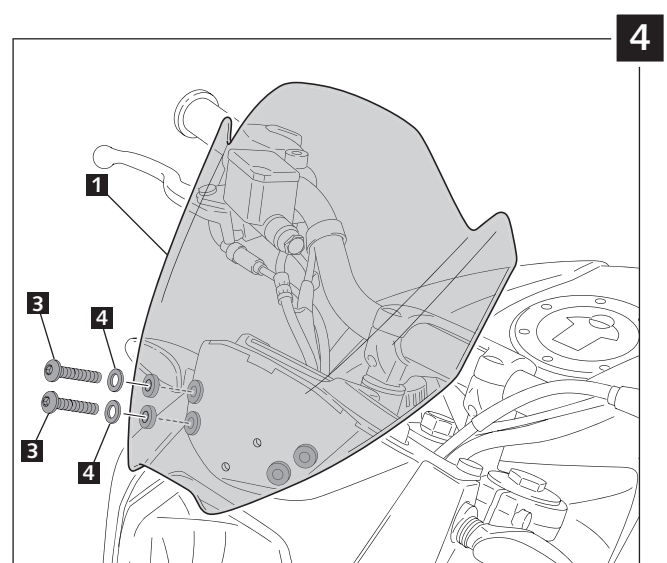
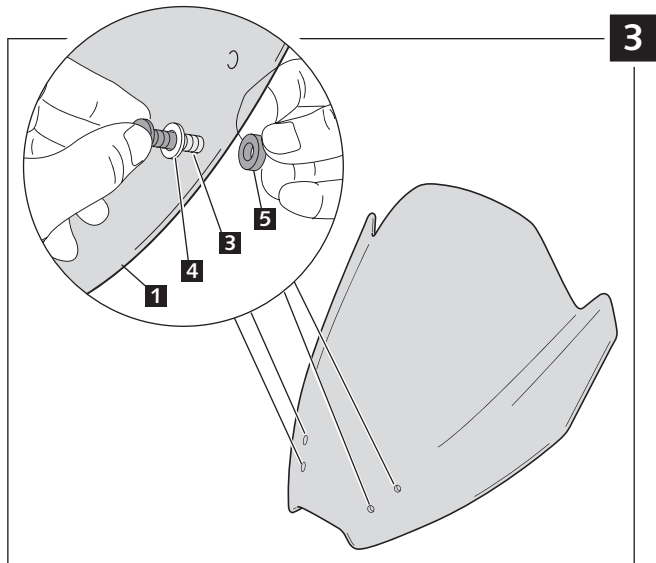
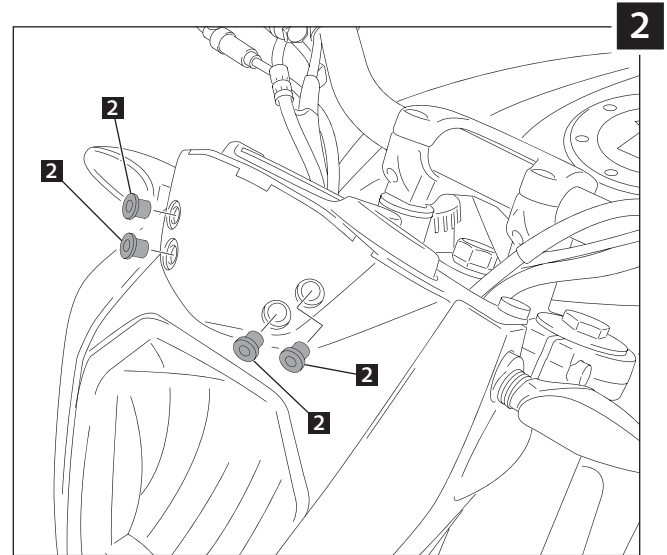


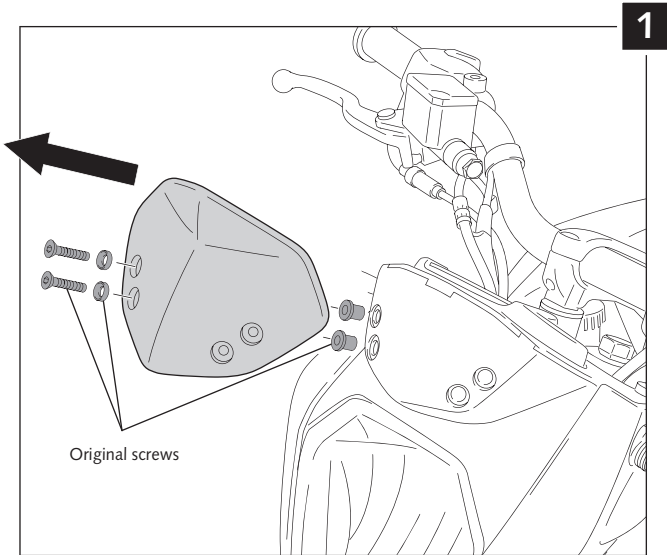

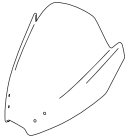

MOUNTING INSTRUCTIONS

WINDSHIELD ADAPTABLE A
KTM 125-200-300 DUKE

Ref.: 6275



ID.		DESCRIPTION	QTY.
1		Screen	1
2		M5 silemblock nut	4
3		M5x20 ISO 7380 allen screw	4
4		Ø5xØ11x1 nylon washer	4
5		Øouter 13 x Øinner 5x4 washer	4

TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

