
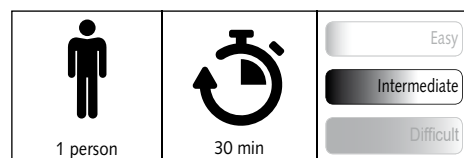


SCREEN FOR HONDA CBR 500R '13-





Ref.: 6479

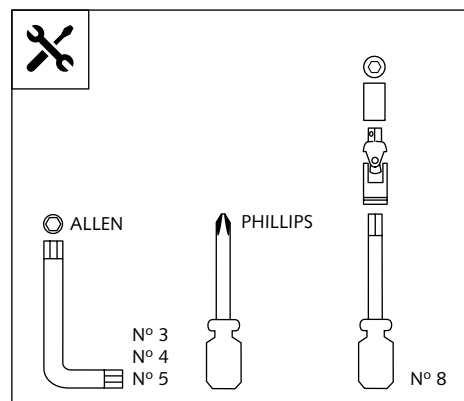

ID	PART	DESCRIPTION	QTY	REF.
1		Screen	1	6479A/C/F/H/N/R/V/NM3
2		M5x16 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-493





SCREEN FOR HONDA CBR 500R '13-

MOUNTING INSTRUCTIONS

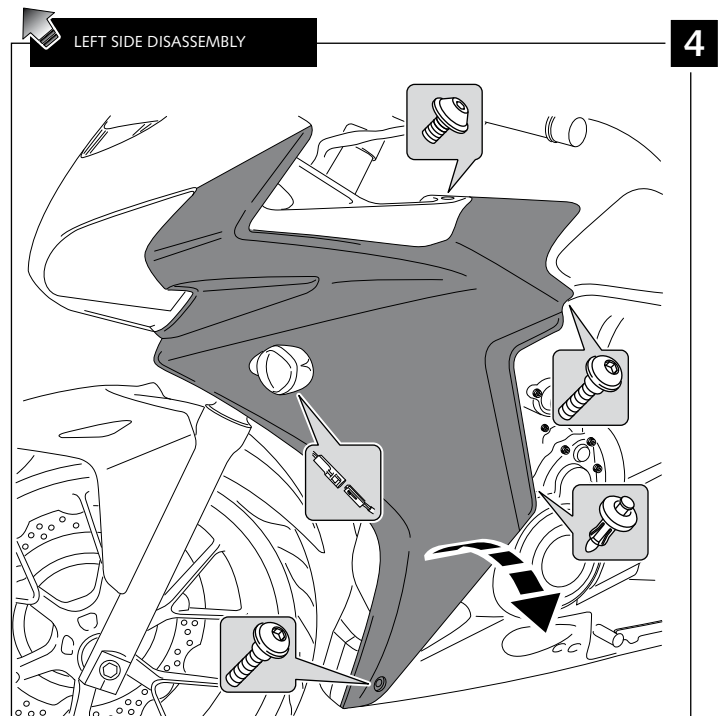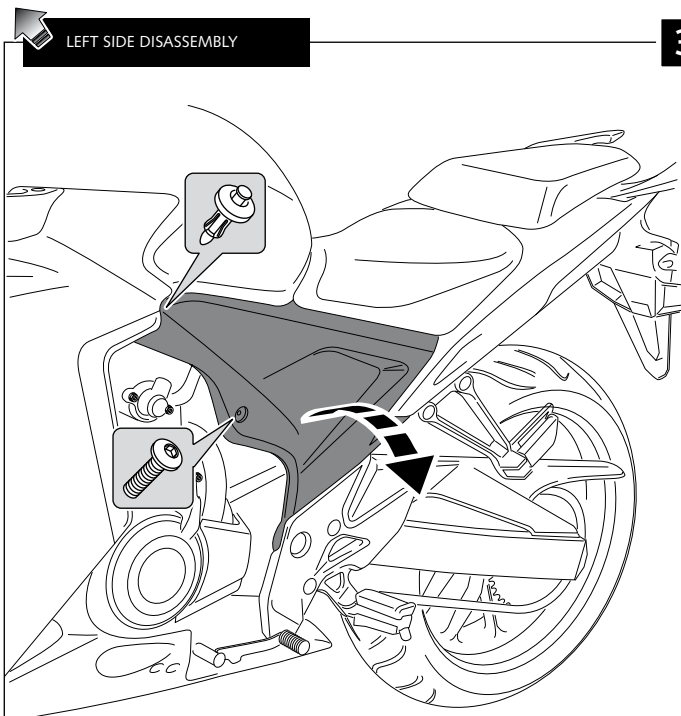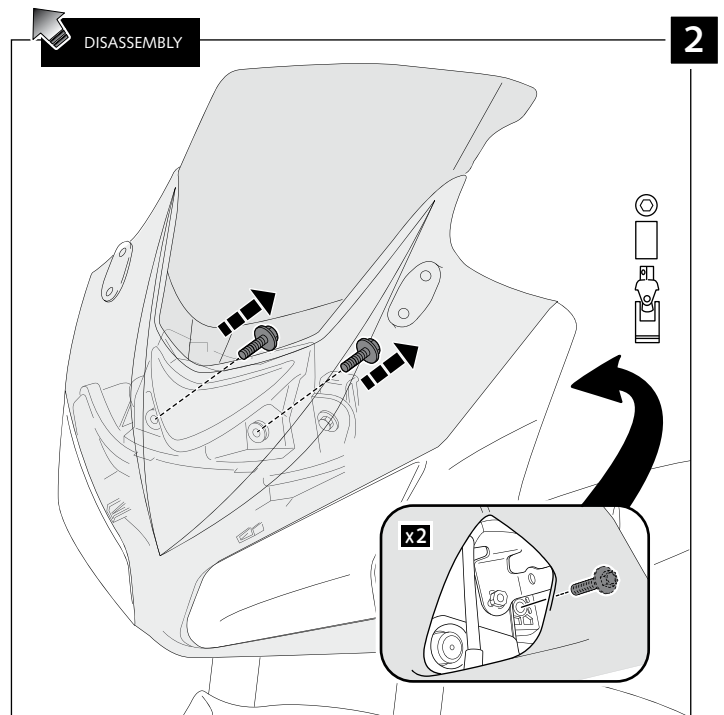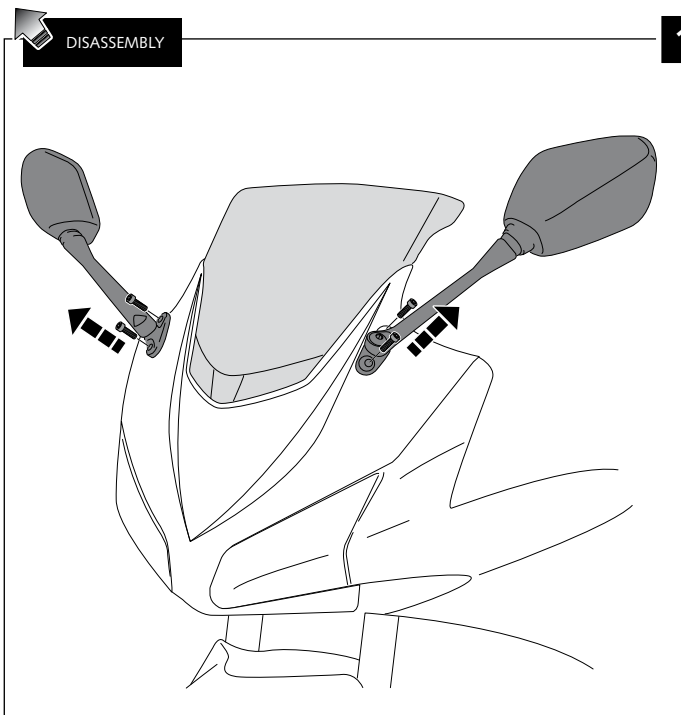





SCREEN FOR HONDA CBR 500R '13-

MOUNTING INSTRUCTIONS

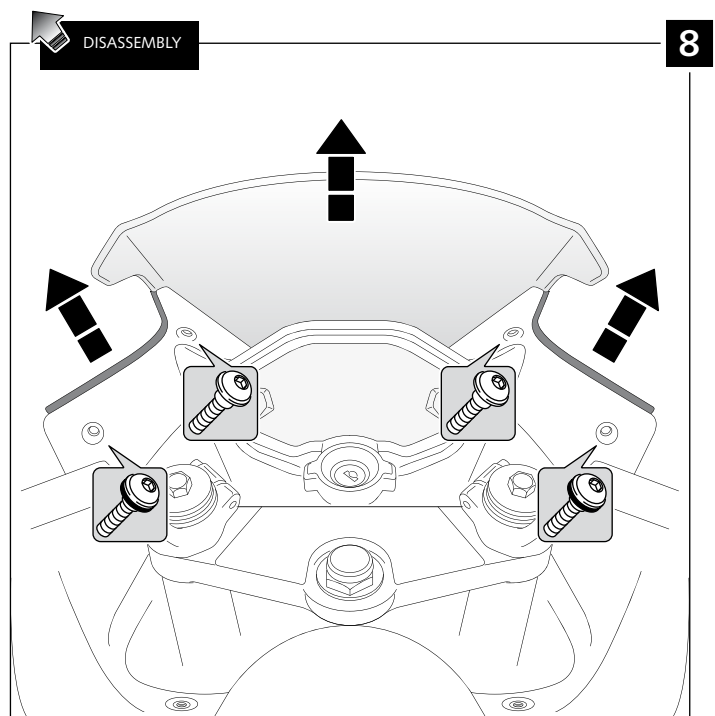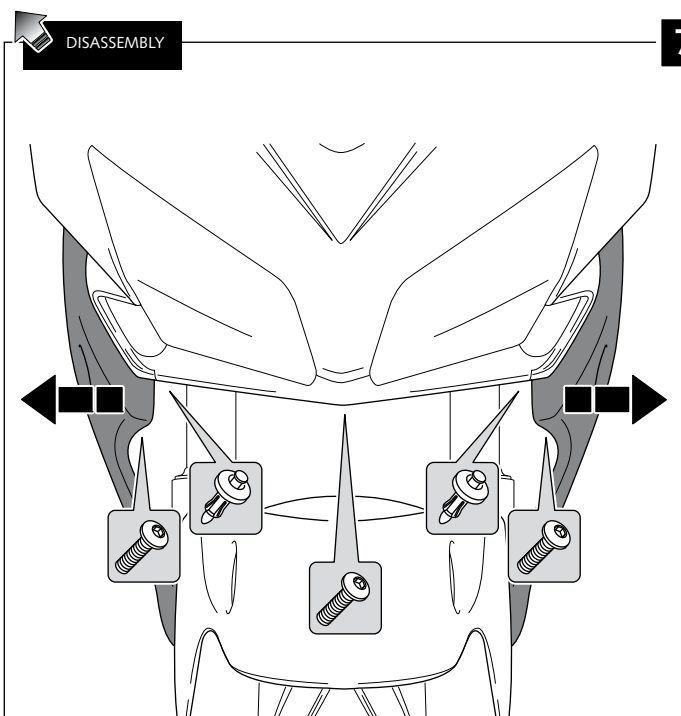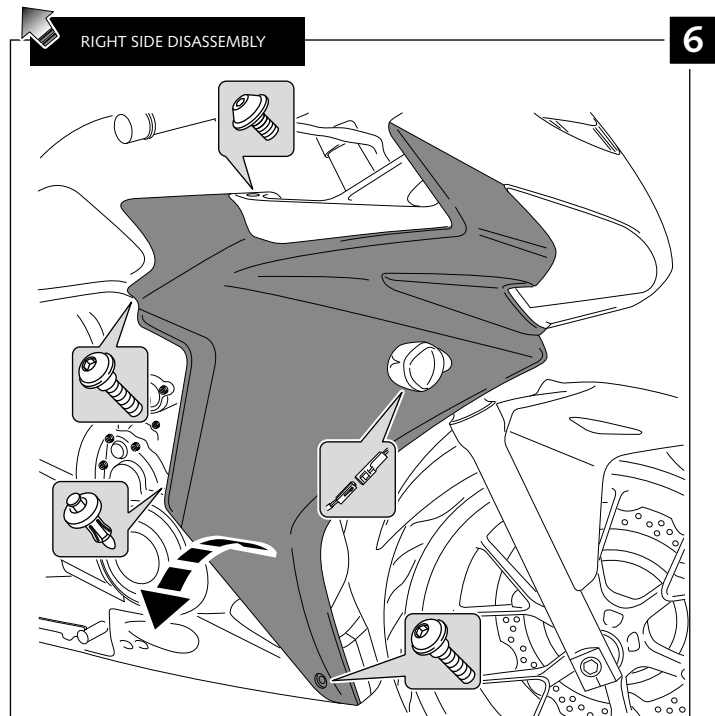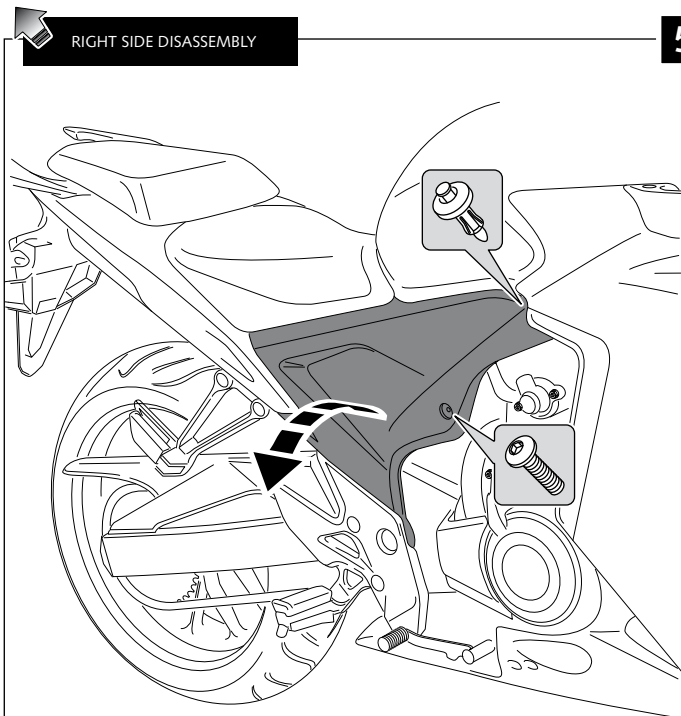

SCREEN FOR HONDA CBR 500R '13-

MOUNTING INSTRUCTIONS

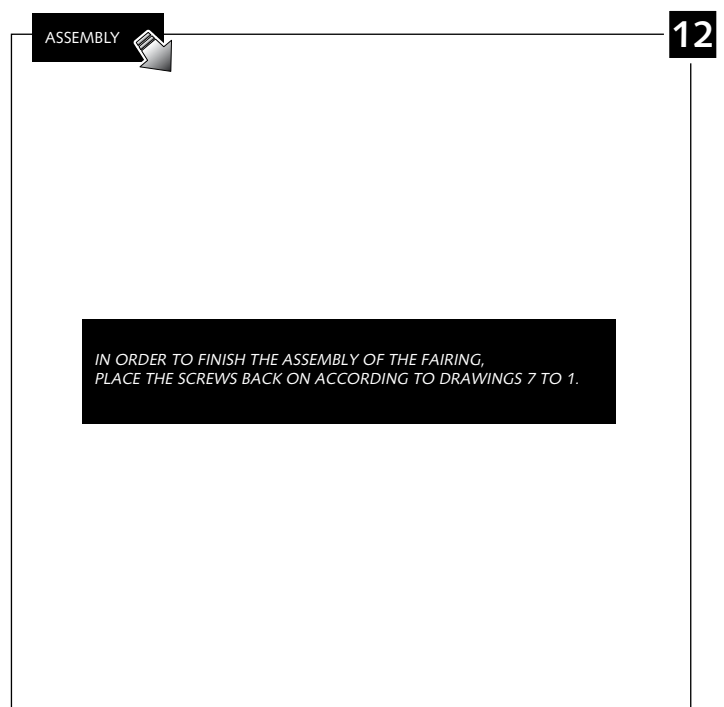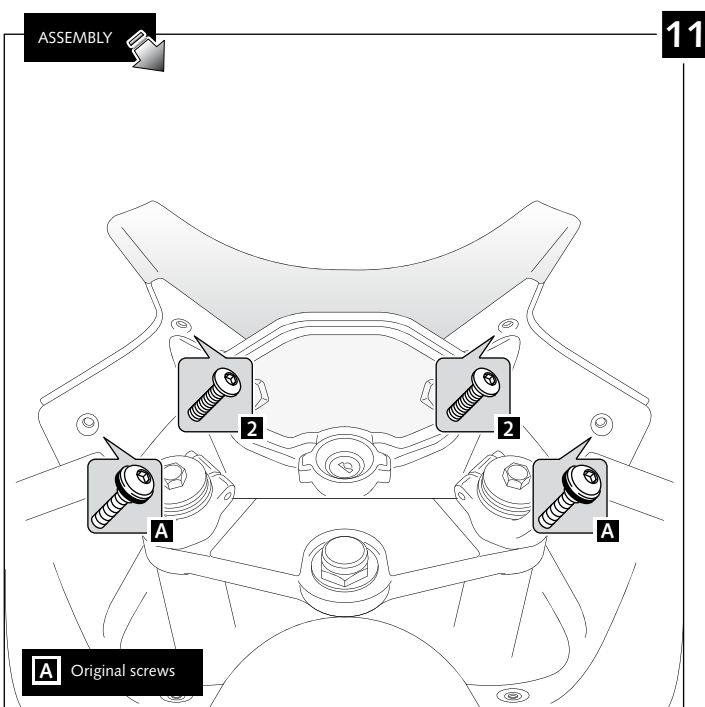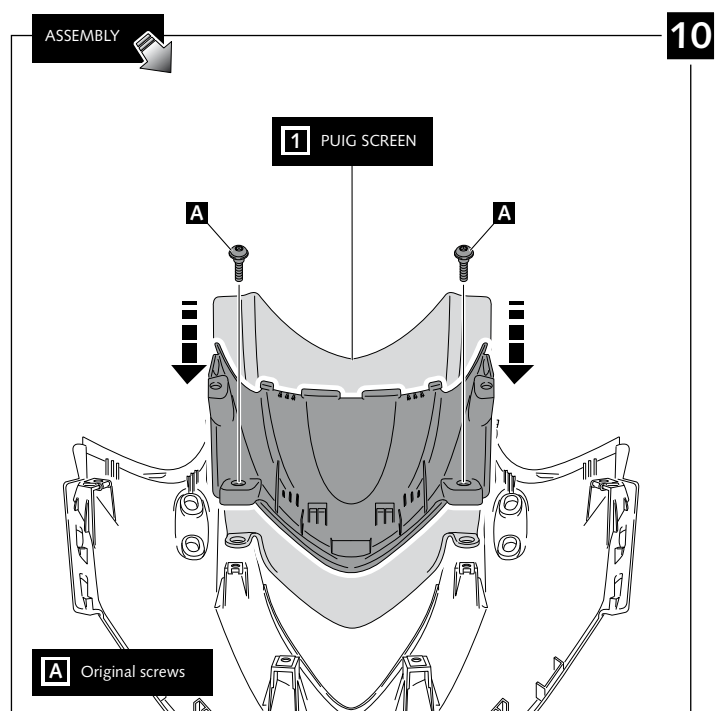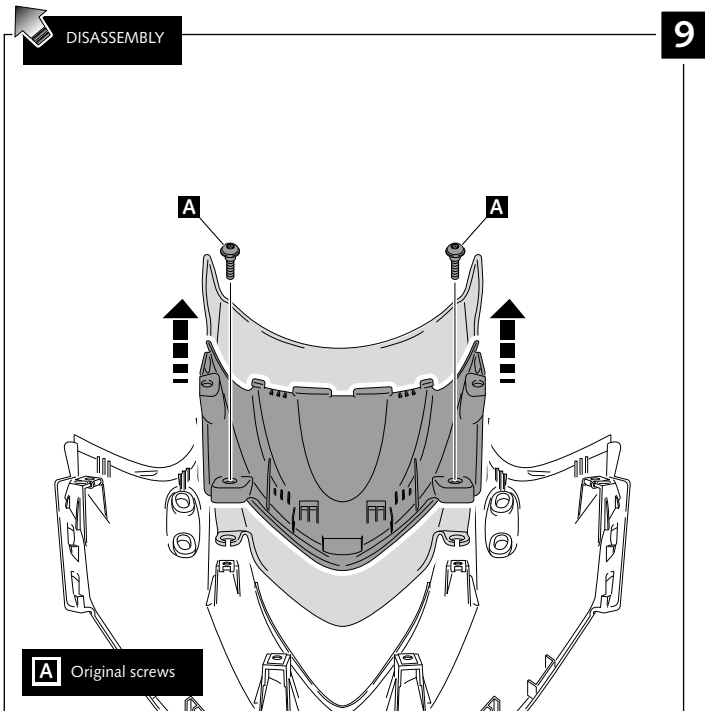

TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

