
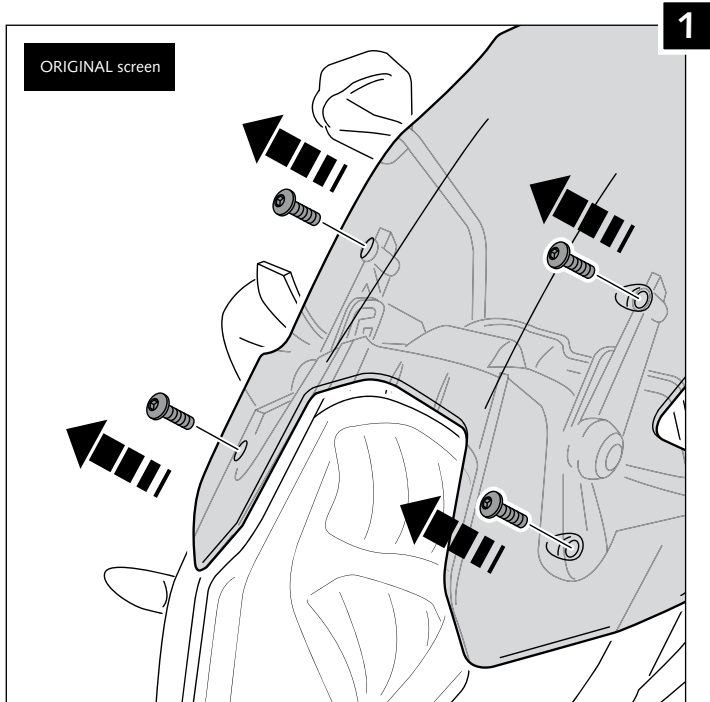


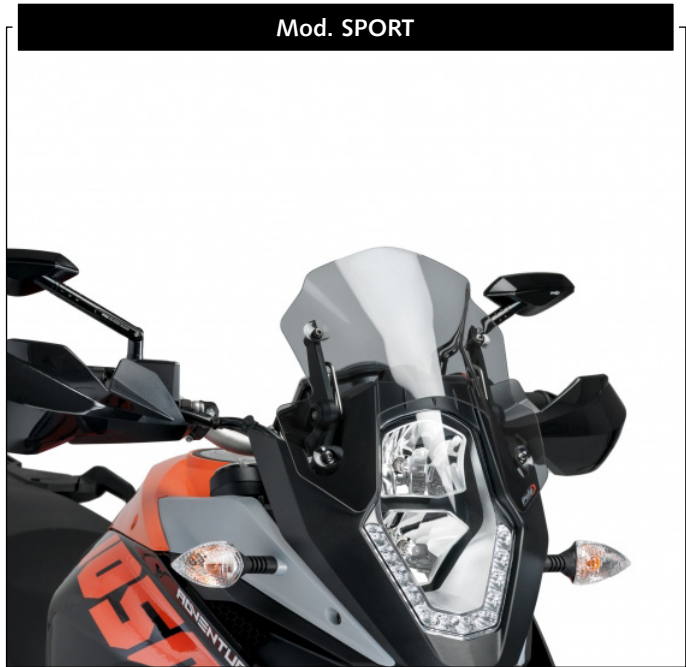



MOUNTING INSTRUCTIONS

Ref.: 6494  
 (Mod. TOURING)

Ref.: 6847  
 (Mod. SPORT)

SCREEN FOR  
**1050/1090/1190 ADVENTURE**  
**KTM 1290 SUPERADVENTURE**  
**1290 SUPERADVENTURE T**

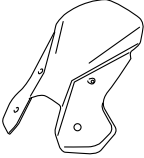


ID.	PART	DESCRIP.	QTY.
1		TOURING screen	1
1		SPORT screen	1
2		Special screw M5x9 + Hexagonal Length 14mm	4
3		Ø outer 15 x Ø inner 5x4 rubber washer	4


SCREEN FOR  
**1050/1090/1190 ADVENTURE**  
**KTM 1290 SUPERADVENTURE**  
**1290 SUPERADVENTURE T**

2

1050 / 1090 / 1190 ADVENTURE

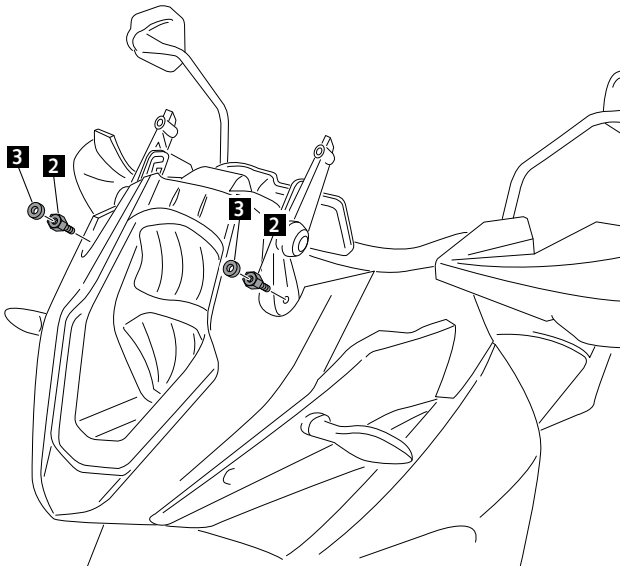


1290 SUPER ADVENTURE

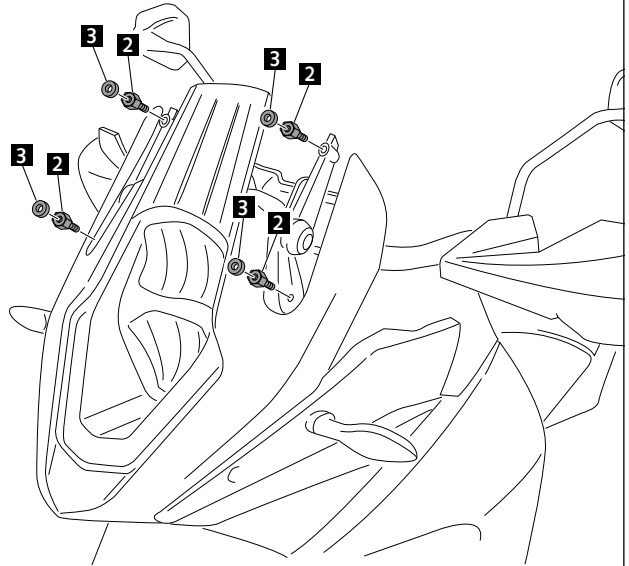


3

TOURING screen

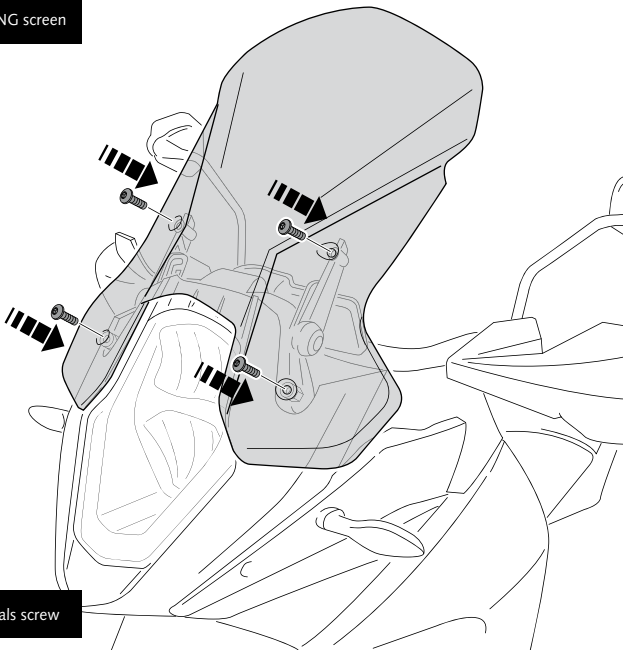

SPORT screen

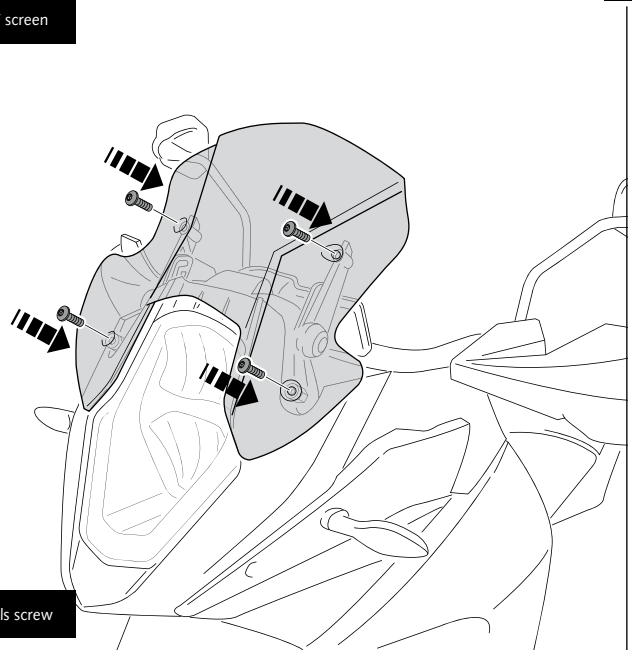

## TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

