





#### MOUNTING INSTRUCTIONS

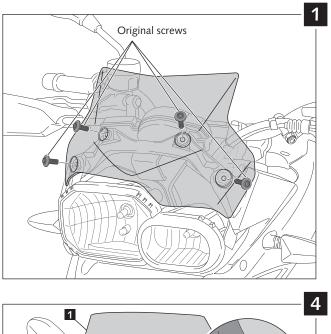

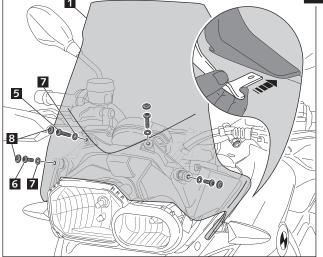

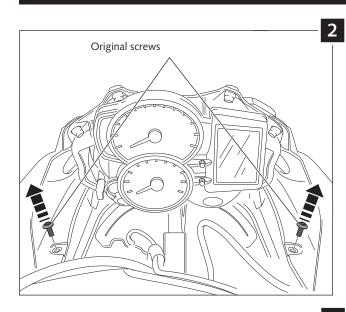

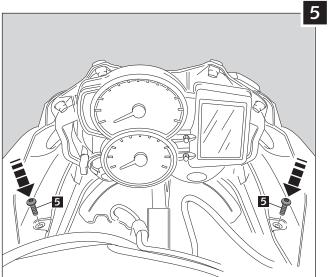

# 

ID.		DESCRIPTION	QTY.
1	,,	Windshield	1
2	Ø.,	Special screw M5x13 $+$ interior thread M5x8	2
3	Ø	Ø outer 15 x Ø inner 5x4 rubber washer	2
4	0	Ø outer 18 x Ø inner 6,5x1,5 metal washer	2
5	Q	M5x16 ISO 7380 Allen screw	4
6	Q	M5x12 ISO 7380 Allen screw	2
7	0	M5x0,5 Nylon washer	4
8	0	M5 ISO 7380 Screw cap	6

#### SCREEN ADAPTABLE A BMW F700GS 12'-14'


Ref.: 6365





Note:

If the visor is supplied along with the windscreen, the windscreen will come factory-drilled so no drilling is necessary.

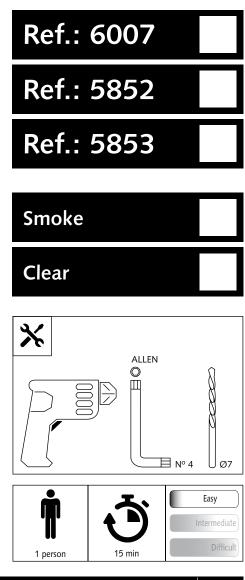


ID.	PART	DESCRIPTION	QTY.
1	00000	Visor	1
2		Template	1
3		Multi-adjustable mechanism	2
4	Ø	Сар	4
5	J.	Plastic thread fastener M6x12	8



#### MOUNTING INSTRUCTIONS


### TYPE **A**

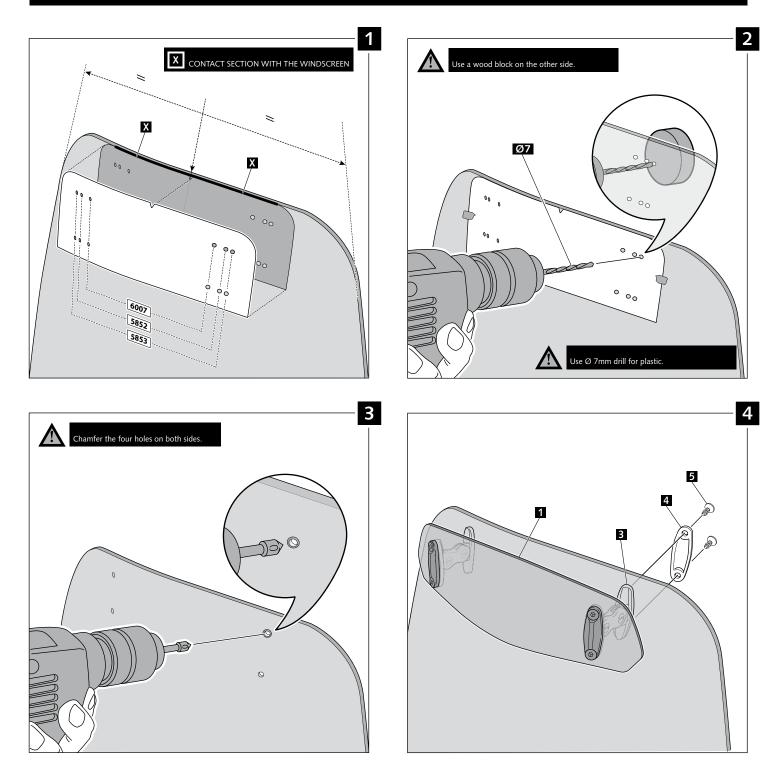




### MOUNTING INSTRUCTIONS

#### ΤΥΡΕ**Β**

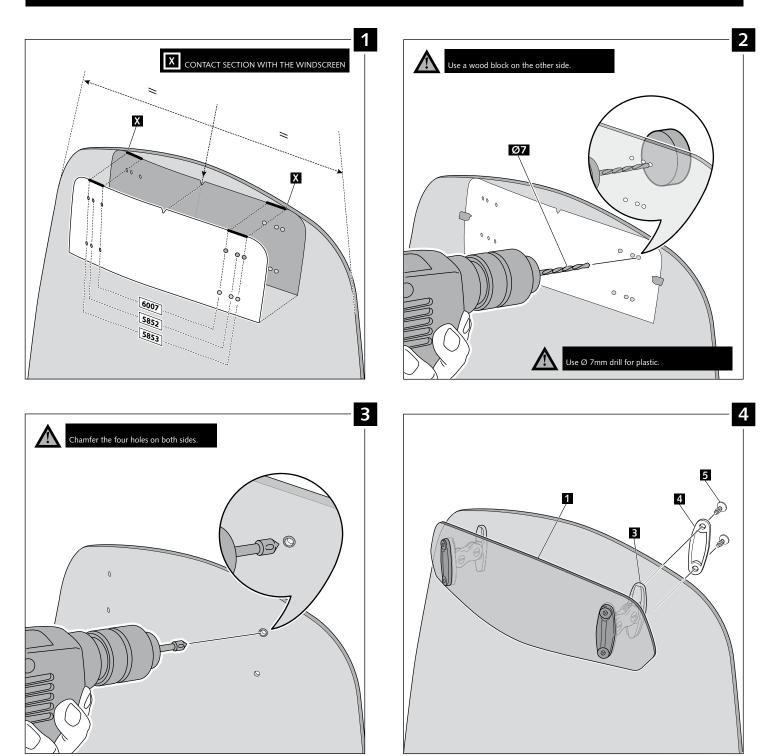



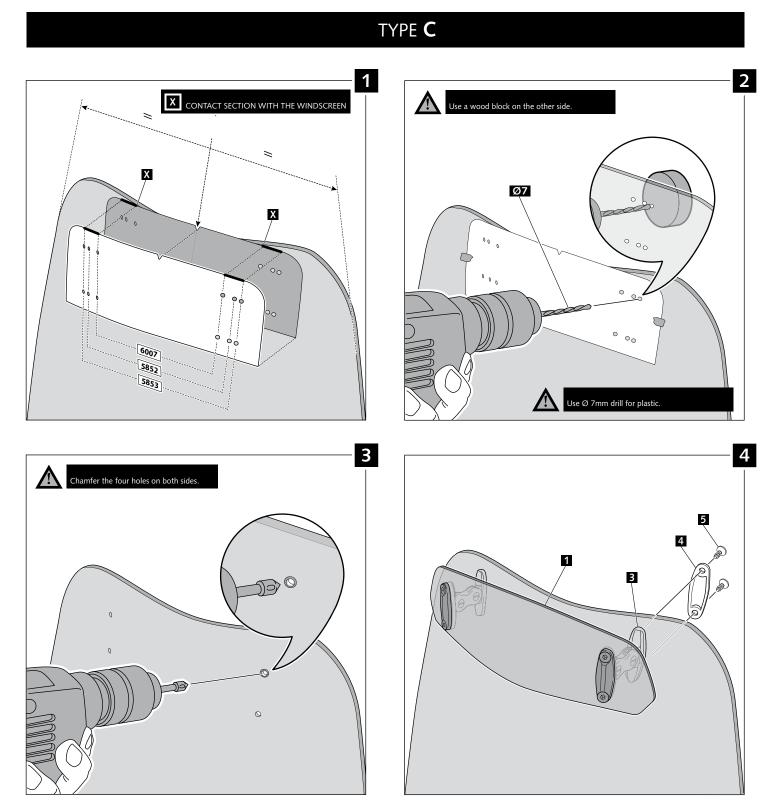

Looking for dependable motorcycle windshields & fairings? Rely on Puig for quality and long-lasting products.