


MOUNTING INSTRUCTIONS






SCREEN FOR BMW R NINE T / BMW R NINE T PURE

Mod. BLACK FAIRING
Ref.: 7012

Mod. CARBON FAIRING
Ref.: 7559

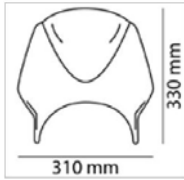

2 fixing points

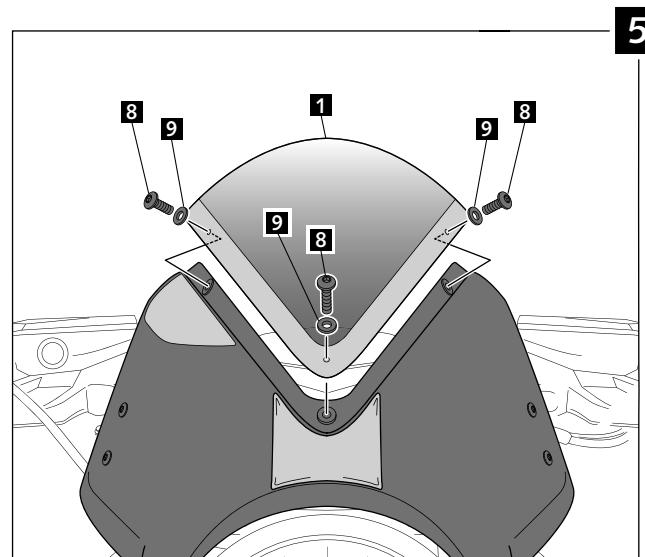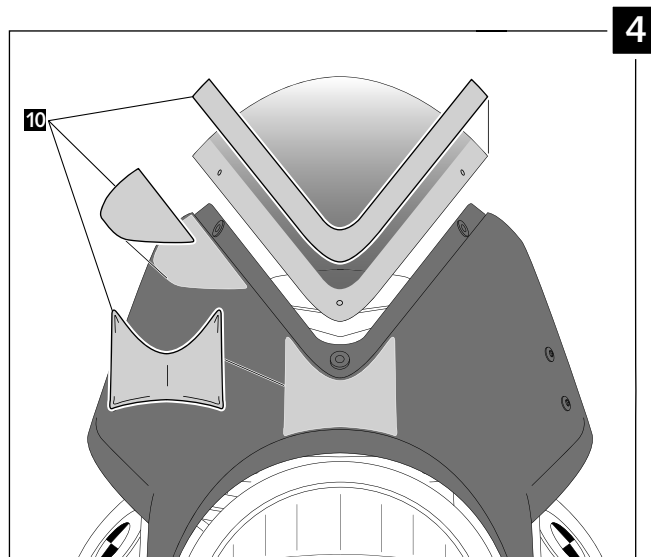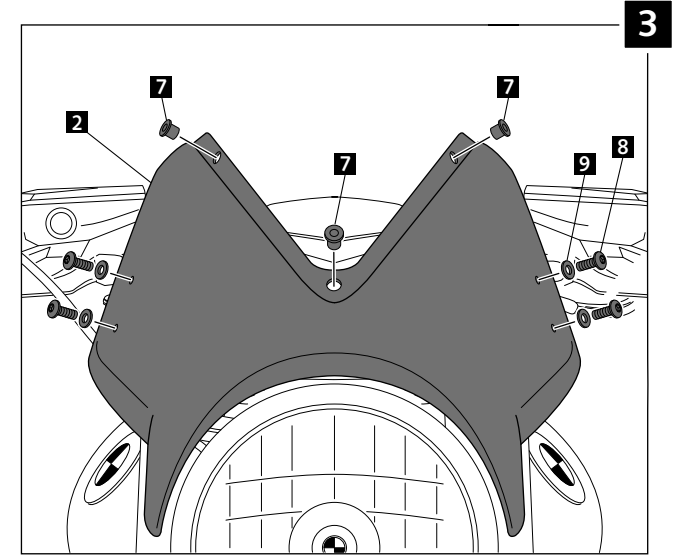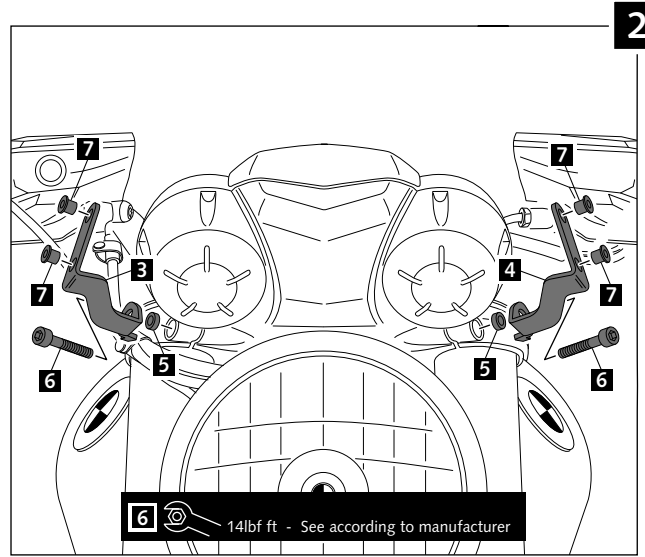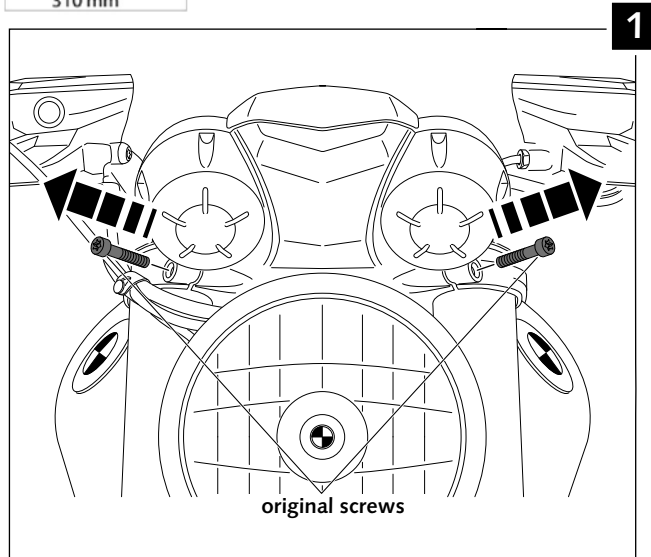

ID.	DESCRIPTION	QTY.
1	Screen	1
2	Fairing	1
3	Right support	1
4	Left support	1
5	Øinner 8,5 x Øouter 14x12 Arrowhead	2
6	M8x40 DIN 912 Allen screw	2
7	M5 Silemblock	7
8	M5x16 ISO 7380 Allen screw	7
9	M5x0,5 Nylon washer	7
10	Stikers	1