

Ref.: 7570 (Mod. TOURING)

Ref.: 7592 (Mod. SPORT)

MOUNTING INSTRUCTIONS WINDSHIELD WITH SELF-ADJUSTING INCLINATION SYSTEM DUCATI DIAVEL / CARBON '14 -





ID.	PIEZA / PART	DESCRIPTION	QTY.
1		Screen TOURING (7570)	1
1		Screen SPORT (7592)	
2	357	Fixed metal support	1
3		Mobile right metal support	1
4		Mobile left metal support	1
5		Locking handle	1
6	0	Ø int. 8,5 x Ø ext. 17 x 1,5 rubber washer	2
7	0	Ø int. 8,5 x Ø ext. 17 x 1 (black) metal washer	2
8	O	M5 x 16 ISO 7380 (black) Allen screw	4
9	0	M5 x 0,5 nylon washer	4
10	2	Silentblock M5	4
11	O	M6 x 10 ISO 7380 (black) Allen screw	2
12	0	Ø int. 6 x Ø ext. 8 x 5,5 arrowhead	2
13	0	Ø8 x 1 nylon washer	2
14	@	M6 blind nut	2
15		Sticker (served mounted)	1





MOUNTING INSTRUCTIONS

WINDSHIELD WITH SELF-ADJUSTING INCLINATION SYSTEM **DUCATI DIAVEL / CARBON '14 -**

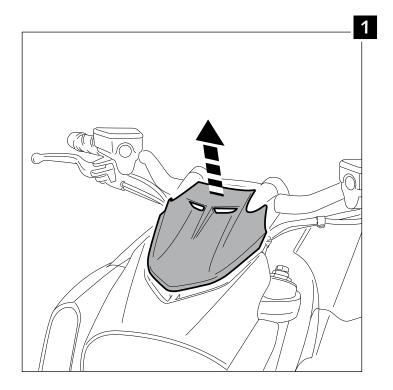

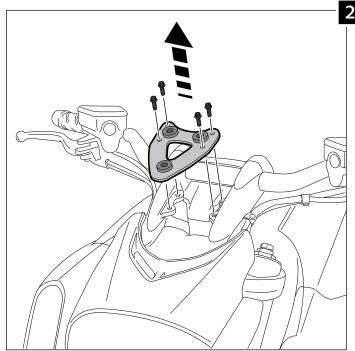

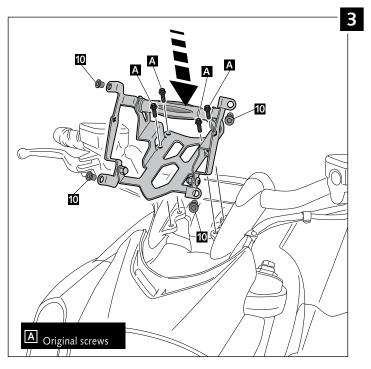


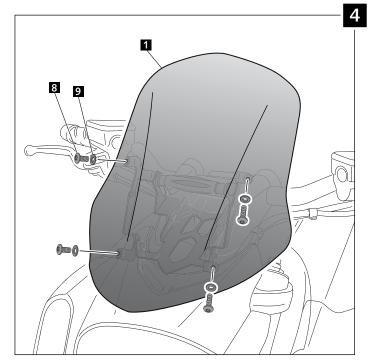



MOUNTING INSTRUCTIONS

WINDSHIELD WITH SELF-ADJUSTING INCLINATION SYSTEM DUCATI DIAVEL / CARBON '14 -

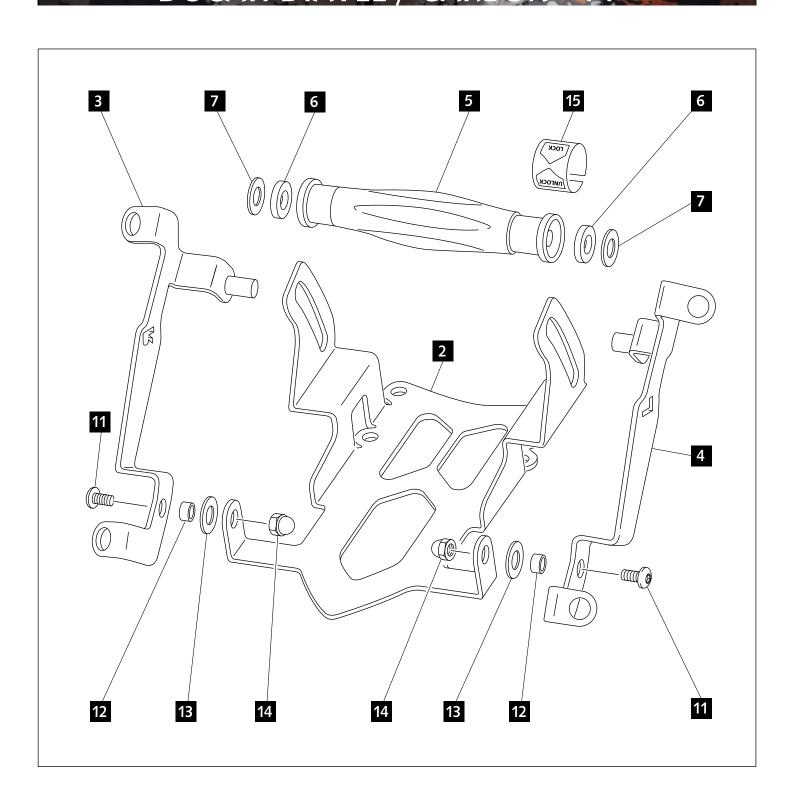





TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws withouth tighting all the way.
- 4- Tighten progressively all the screws.

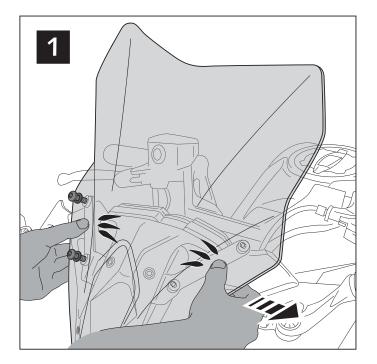

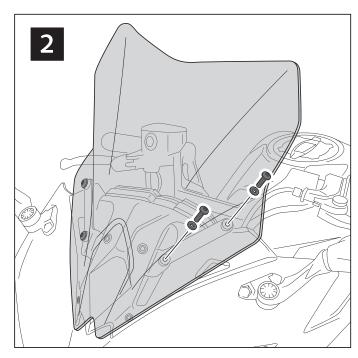

Windshield Self-Adjustable

for **DUCATI DIAVEL 15-**





Ref. 7592N

Original

Quick-lock system to self-adjust in 1 second!









Quick-lock system available for: Touring version - part# 7570 Sport version – part# 7592

Step 2 Step 3

