


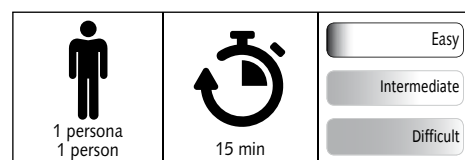
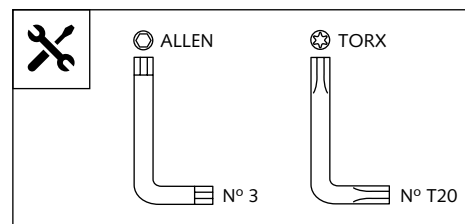


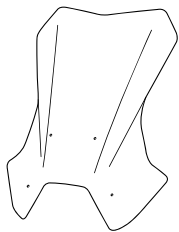




SCREEN FOR
KTM SUPERDUKE 1290 GT





Ref.: 8913



ID.	PART	DESCRIPTION	QTY.
1		Touring Screen	1
2		Special screw M5x8 + interior thread M5x17,5 + Hexagon lenght 25mm	2
3		Special screw M5x8 + interior thread M5x8 + Hexagon lenght 10mm	2
4		M5X11 ISO 7380 Allen screw	2
5		M5X16 ISO 7380 Allen screw	2
6		M5x1 nylon washer	4
7		Ø inner 4 x Ø outer 14 x 4 rubber washer	4
8		M5 ISO 7380 screw cap	4

KTM SUPERDUKE 1290 GT

MOUNTING INSTRUCTIONS

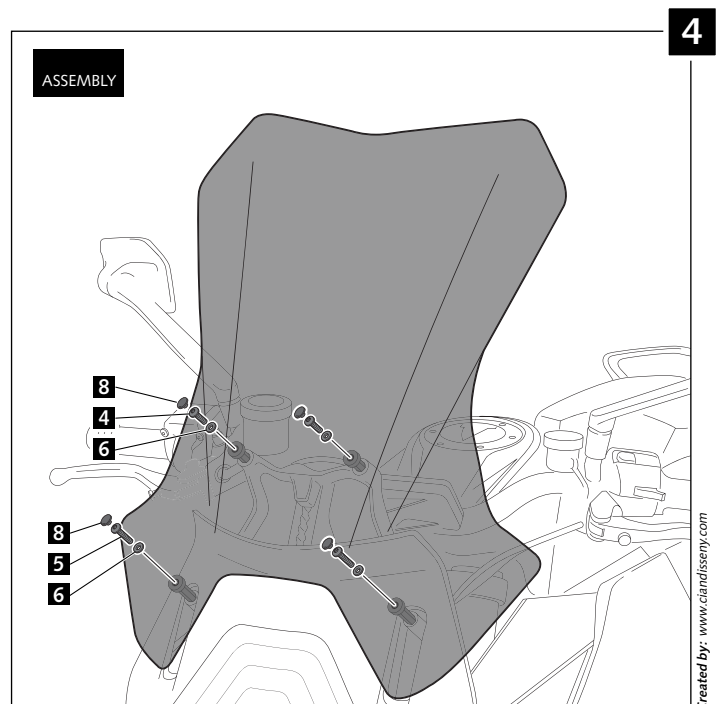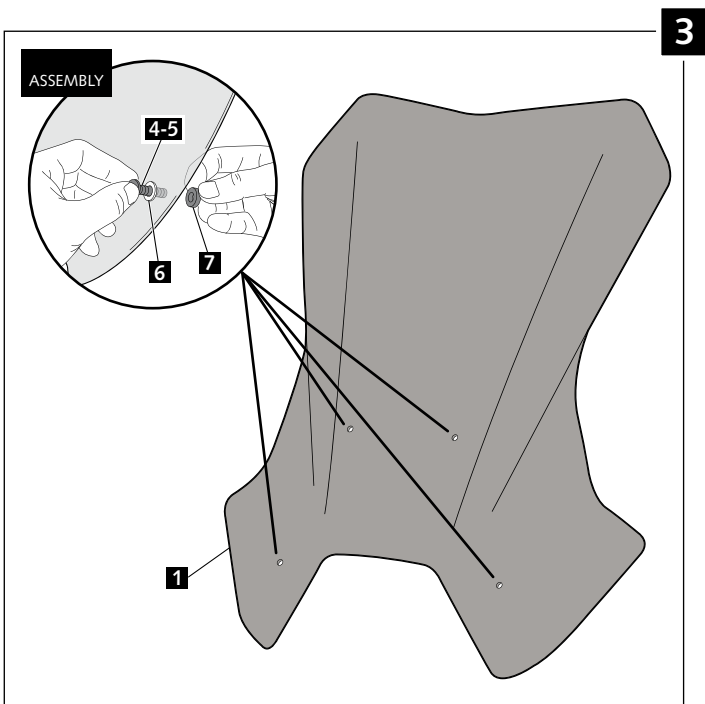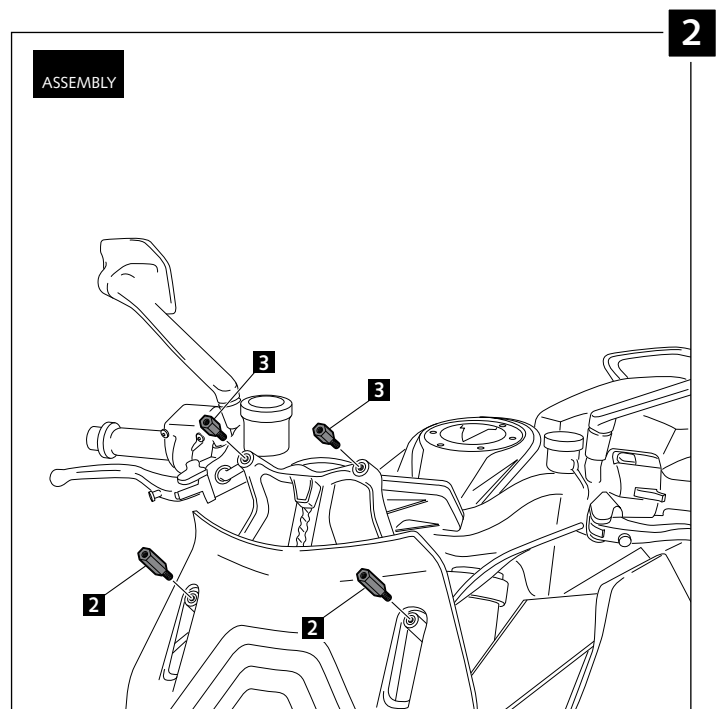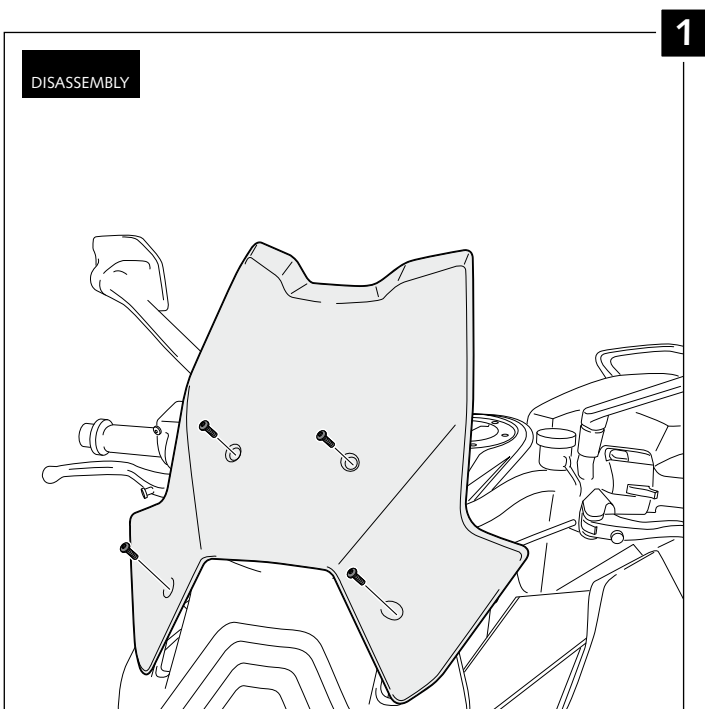

TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

