

MOUNTING INSTRUCTIONS


7-

CRASH PADS FOR

Ref.: 9000N

S	UZU	KI	GSX	-R1	00	0/R	

RIGHT SIDE

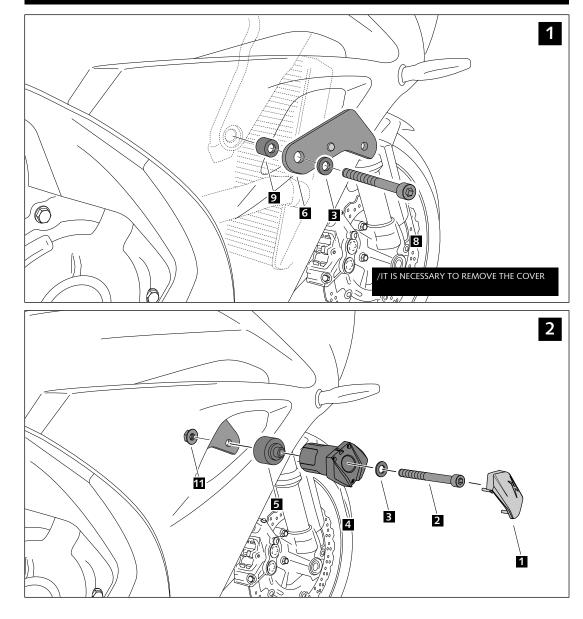

ID.	DESCRIPTION	QTY.
1	Plastic cap	2
2	MI0/I50x55 DIN912 screw	2
3	MIO DINI25/A washer	4
4	Nylon protector 85mm	2
5	Aluminium metal spacer	2
6	Right plate	1
7	Left plate	1
8	M10/125X60 DIN912 screw	2
9	Right metal spacer (Ø20x10)	1
10	Left metal spacer (Ø20x4)	1
11	MIO DIN6923 nut	2

INSTRUCTIONS TO ASSEMBLE

Remove the fasteners that subject the chassis to the engine, on the point marked below (and the opposite side). Mount the protectors on each own side as the fi gure below shows. Tight the set, and place the caps. All the screws replaced, should be tightened to the torque specifi ed in the oem maintenance manual for your motorcycle. if no torque specifi cations are provided in the oem maintenance manual, may be used 54Nm for all M10 screws. Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.



