

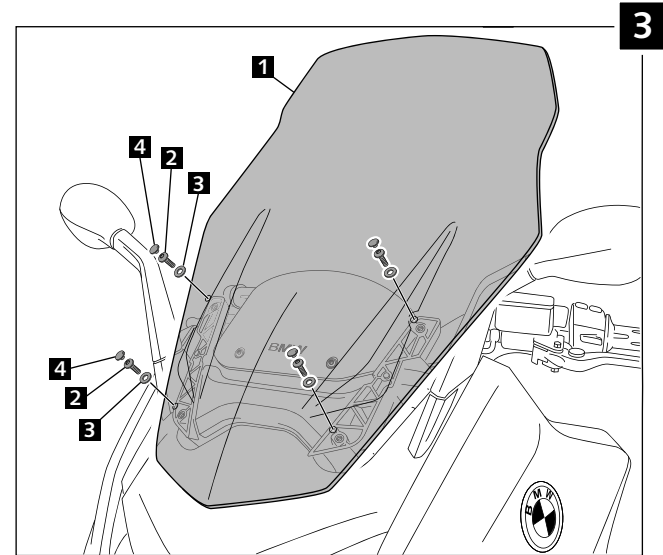


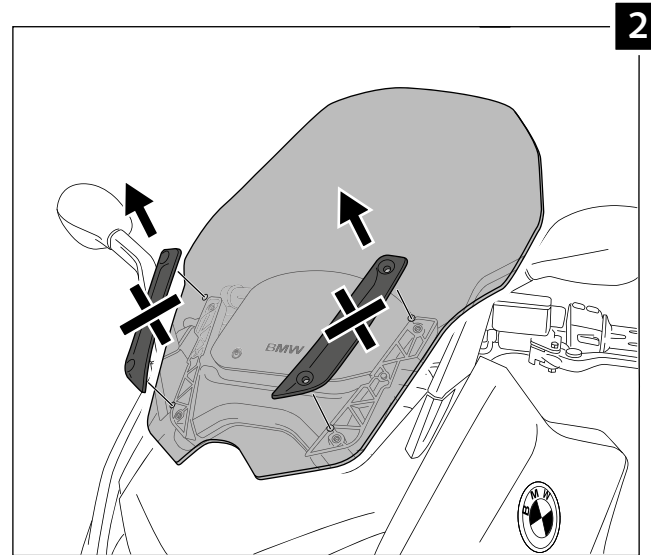

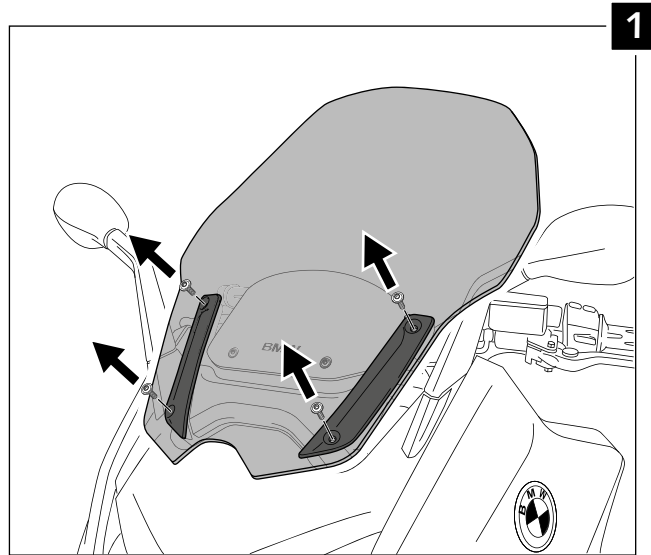

MOUNTING INSTRUCTIONS

WINDSCREEN ADAPTABLE TO
V-TECH TOURING BMW C600S '16-

Ref.: 9015



ID.		DESCRIPTION	QTY.
1		Windscreen	1
2		M5x16 7380 Allen screw	4
3		M5 x 0,5 nylon washer	4
4		M5 ISO 7380 Allen screw cap	4