

FRONT-AXLE SLIDER ADAPTABLE TO HONDA CBR600F 2011

REF.9148N




MOUNTING INSTRUCTIONS

- 1) Remove the original fastener from the left side of the fork.
- 2) Remove the slider (7), fastener (1), and washer (2) off the set supplied.
- 3) Mount the fastener (1) and the washer (2) on the left side of the wheel axle.
- 4) Without removing the slider (6), place the rod (3) through the axle from the left side.
- 5) Mount the slider (7), fastening the set with the washer (5) and nut (4)

Material supplied:

POSICIÓN	DENOMINACIÓN	CANTIDAD
1	M14x20 fastener DIN933	1
2	M14 DIN125 washer	1
3	Rod	1
4	M6 nut DIN985	2
5	M6 washers DIN125	2
6	Left Slider	1
7	Right Slider	1

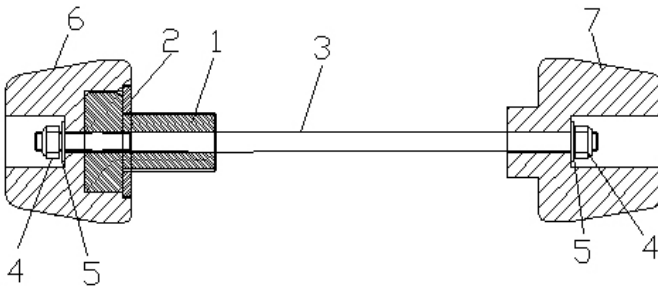

Rely only on high-grade motorcycle guards and protection offered on our virtual shelves.