


## RETRO WINDSCREEN FOR TRIUMPH BONNEVILLE T100/T120











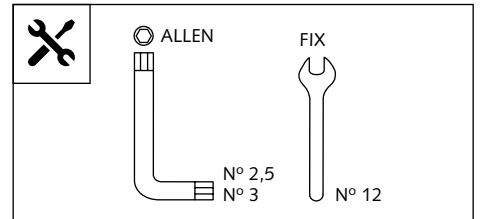


**Ref.: 9176**  
(black colour)



**Ref.: 9195**  
(carbon look)







ID.	PART	DESCRIPTION	QTY.
1		Screen	1
2		ABS fairing	1
3		Right metal support	1
4		Left metal support	1
5		M4 silentblock	5
6		M5 silentblock	4
7		M4x16 ISO 7380 allen screw	5
8		M5x16 Ø9 ISO 7380 allen screw	4
9		M4x0,5 nylon washer	5
10		M5x1 nylon washer	4
11		Stickers set	1

- RETRO WINDSCREEN FOR -

## TRIUMPH BONNEVILLE T100/T120





- MOUNTING INSTRUCTIONS -

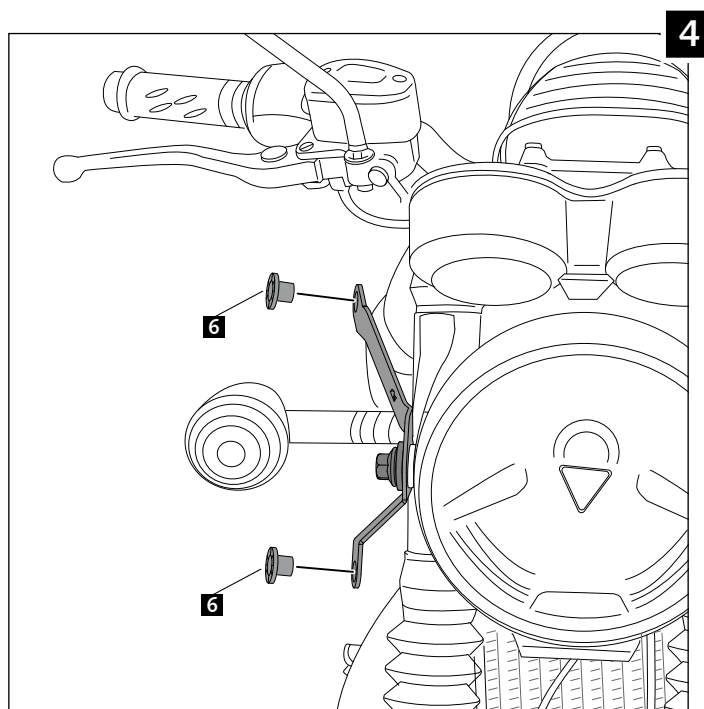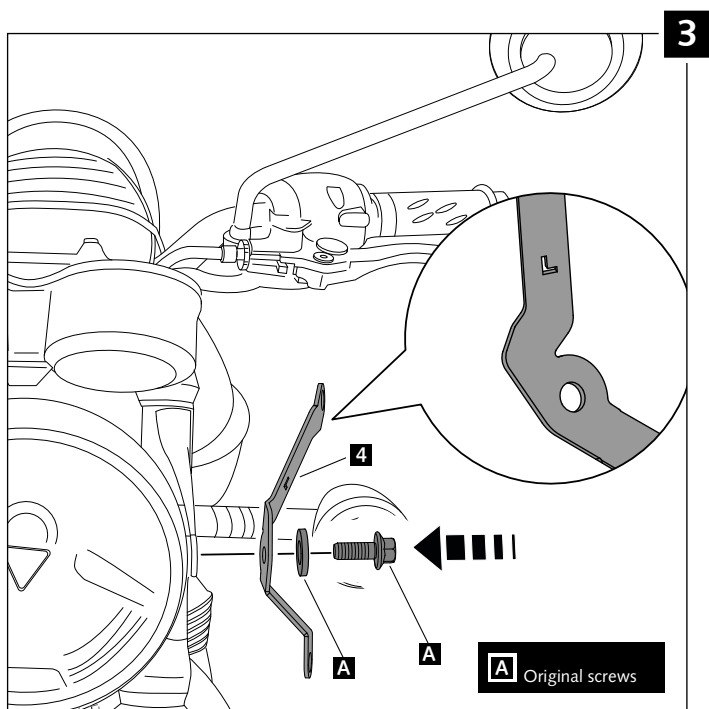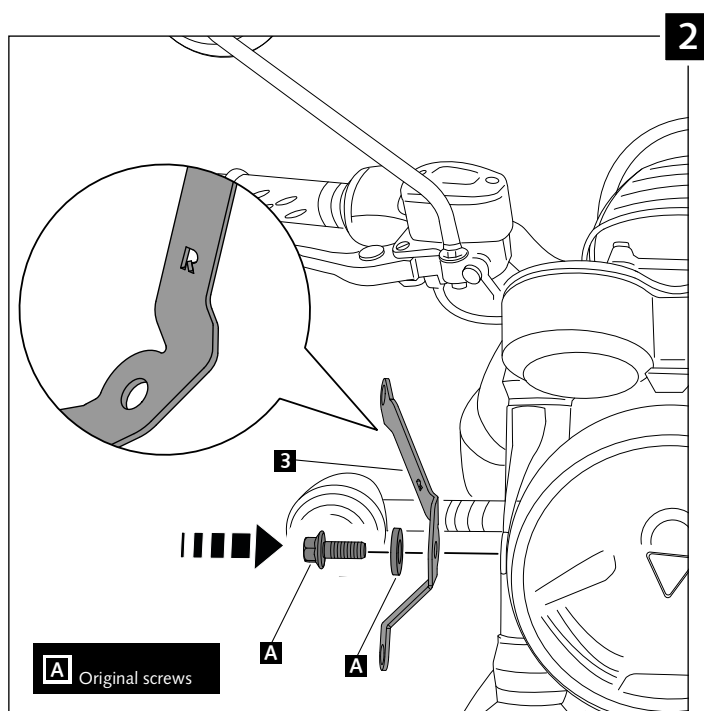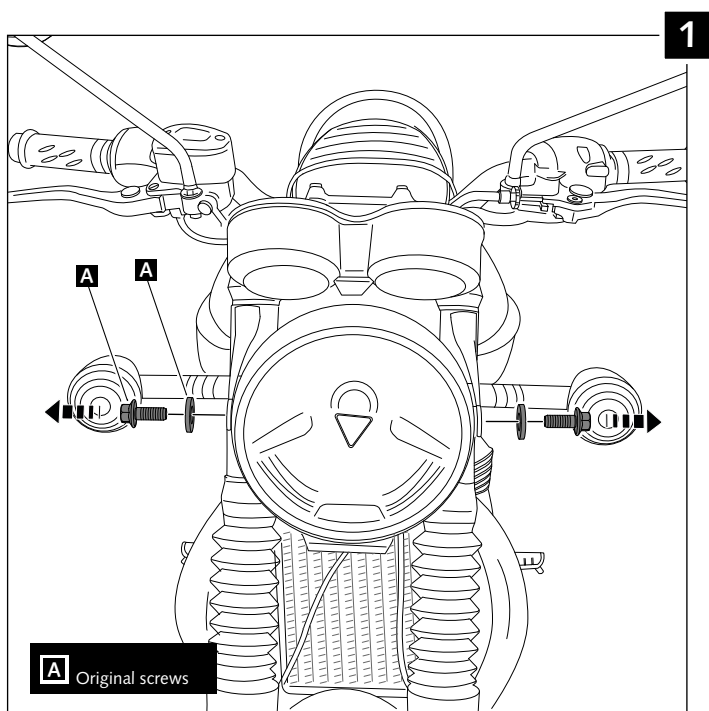

- RETRO WINDSCREEN FOR -

## TRIUMPH BONNEVILLE T100/T120


- MOUNTING INSTRUCTIONS -

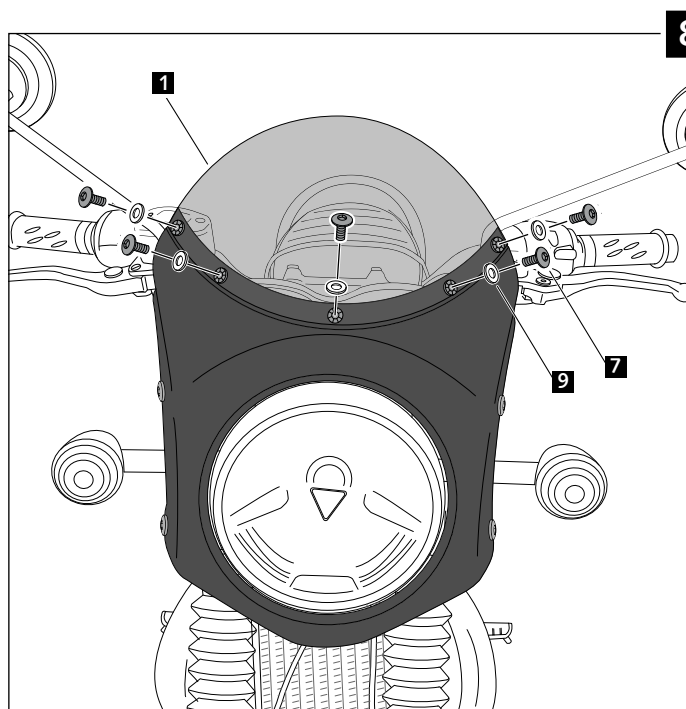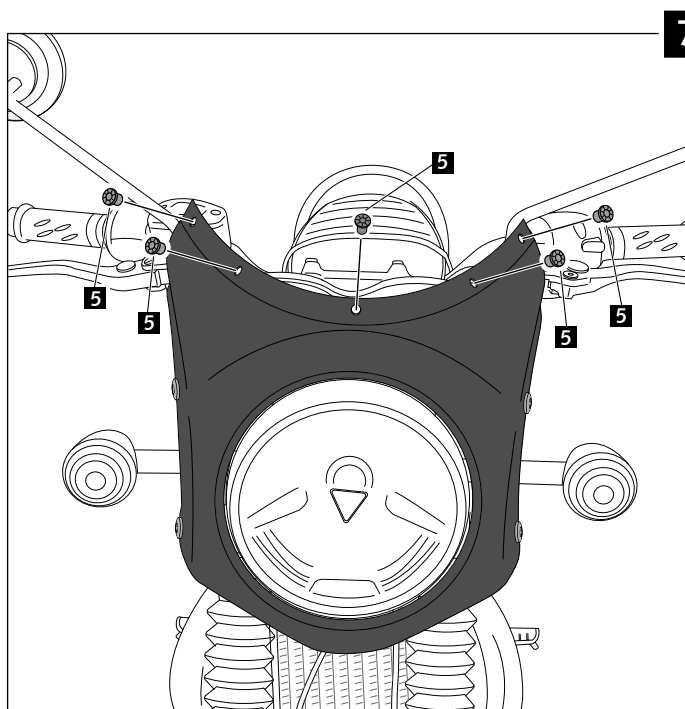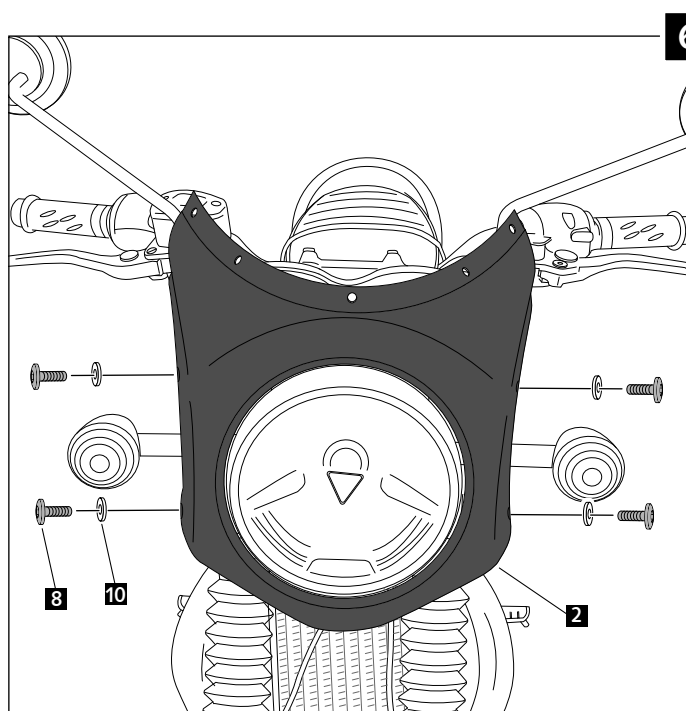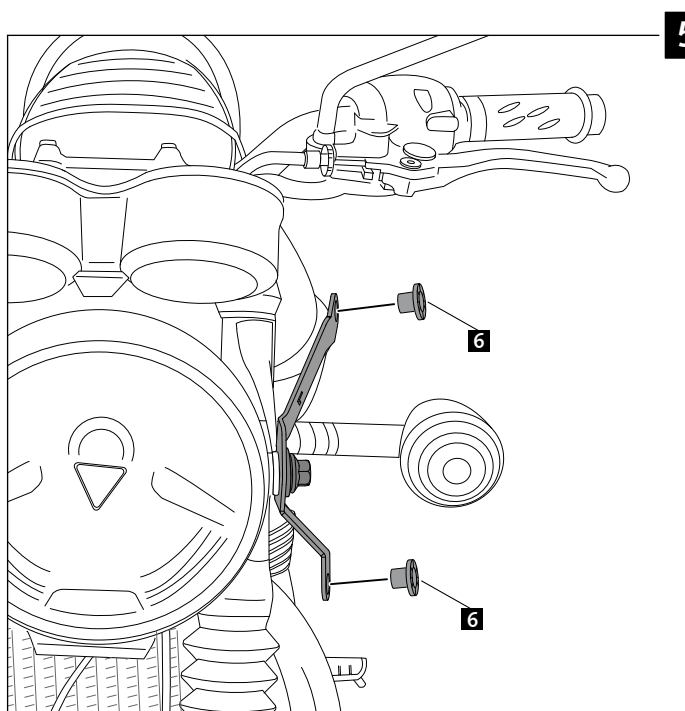

- RETRO WINDSCREEN FOR -  
**TRIUMPH BONNEVILLE T100/T120**


- MOUNTING INSTRUCTIONS -

6

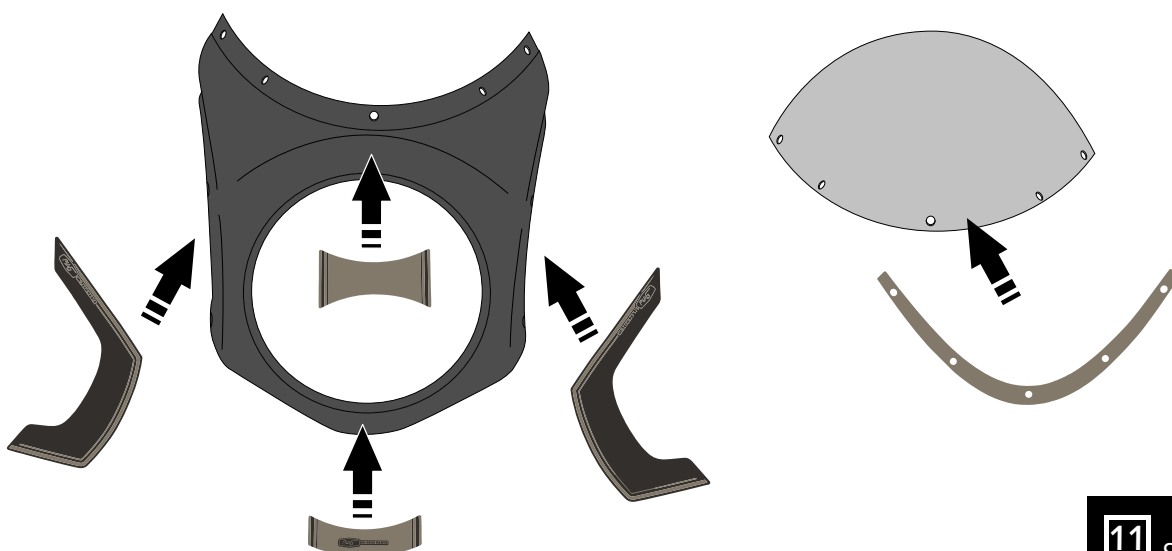

11 Stickers set

8

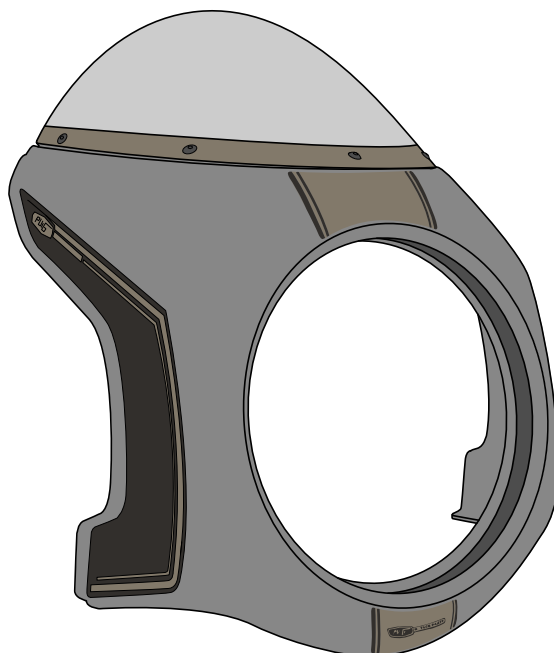

11 Stickers set