



- RETRO WINDSCREEN FOR -

## BMW R NINE T SCRAMBLER



**Ref.: 9253**  
( Black fairing )

**Ref.: 9254**  
( Carbon look fairing )



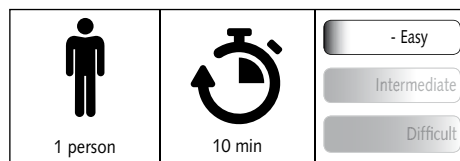
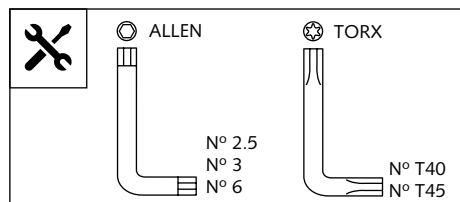


ID	PART	DESCRIPTION	QTY	REF.
1		Screen	1	9196 F/H/N/WM3
2		ABS fairing	1	10534 JM3 10534 CM3
3		Right superior metal support ( R )	1	SOPOR-4P-3-9253
4		Left superior metal support ( L )	1	SOPOR-4P-3-9253
5		Right inferior metal support ( R )	1	SOPOR-4P-3-9253
6		Left inferior metal support ( L )	1	SOPOR-4P-3-9253
7		M4x16 ISO 7380 Allen screw	5	TORNIAI7380_310
8		Silentblock M4	5	SILENBTM4__062
9		M4x0,5 Nylon washer	5	ARNV00000000311
10		M5x16 ISO 7380 Allen screw	4	TORNI-I7380-493
11		Silentblock M5	4	SILENBTM5-046/1
12		M5x1 Nylon washer	4	ARNV00000000245
13		M8x35 DIN 912 Allen screw	2	TORNI-AD912-196
14		Ø inner 8,5 x Ø outer 14x9 Arrowhead	2	CASQUI__0100
15		M8x45 DIN 912 Allen screw	2	TORNI-AD912-508
16		Ø inner 8,5 x Ø outer 14x10 Arrowhead	2	CASQUI__576
17		M5 ISO 7380 Allen screw cap	4	TAPON__85
18		Stikers set	1	ADHESI__249

- RETRO WINDSCREEN FOR -

# BMW R NINE T SCRAMBLER

- MOUNTING INSTRUCTIONS -

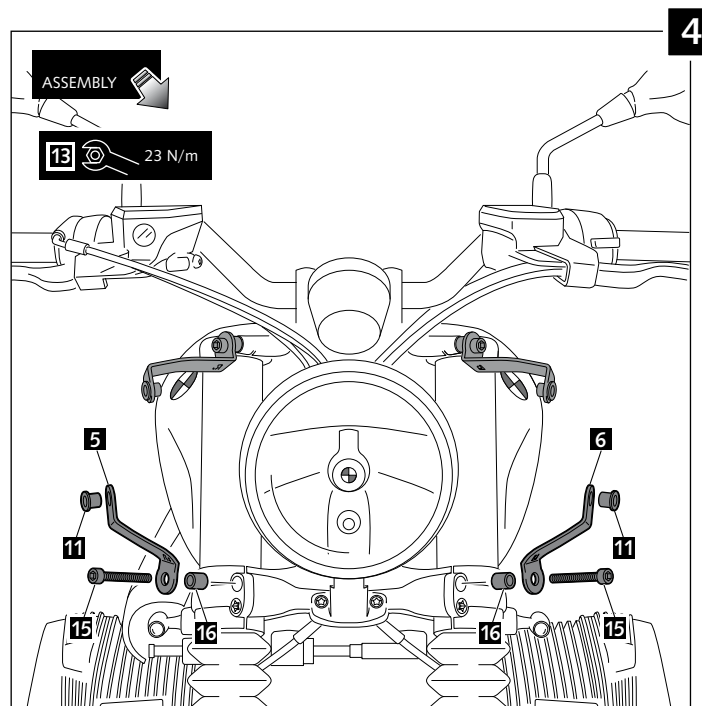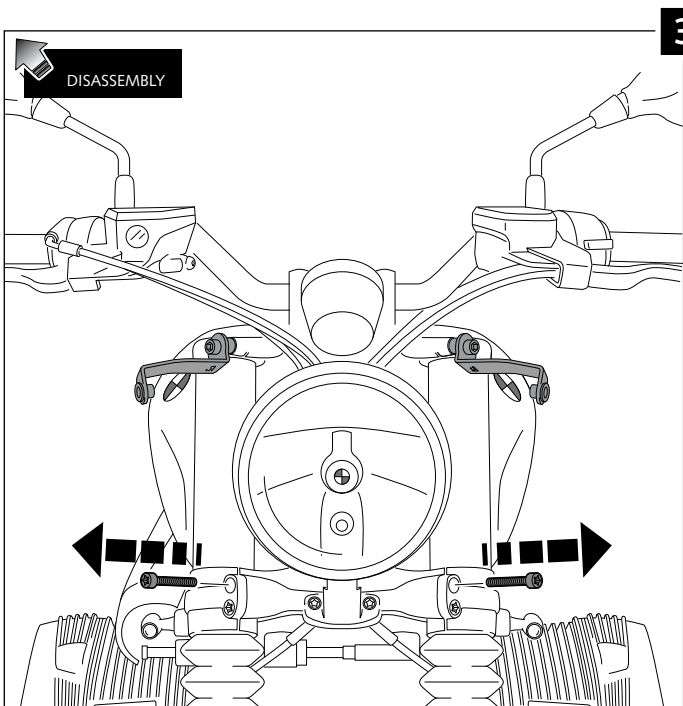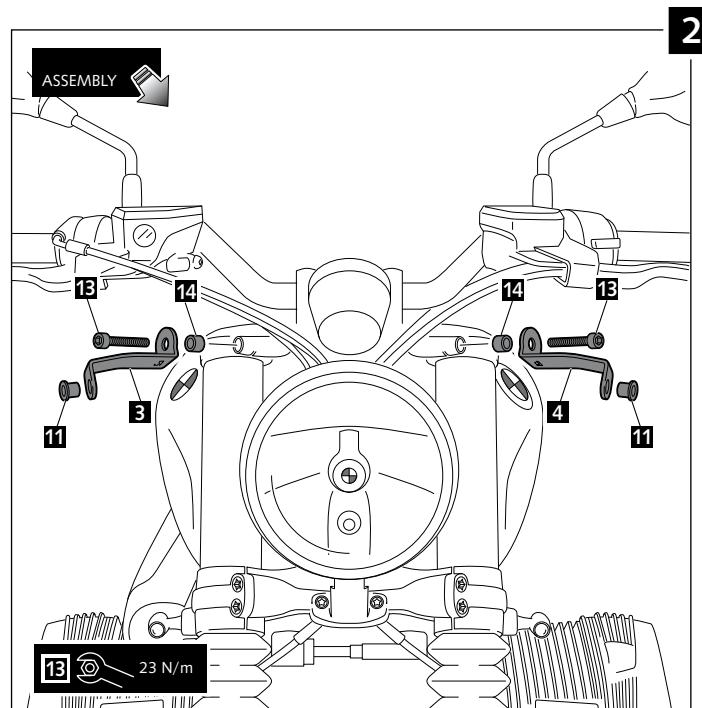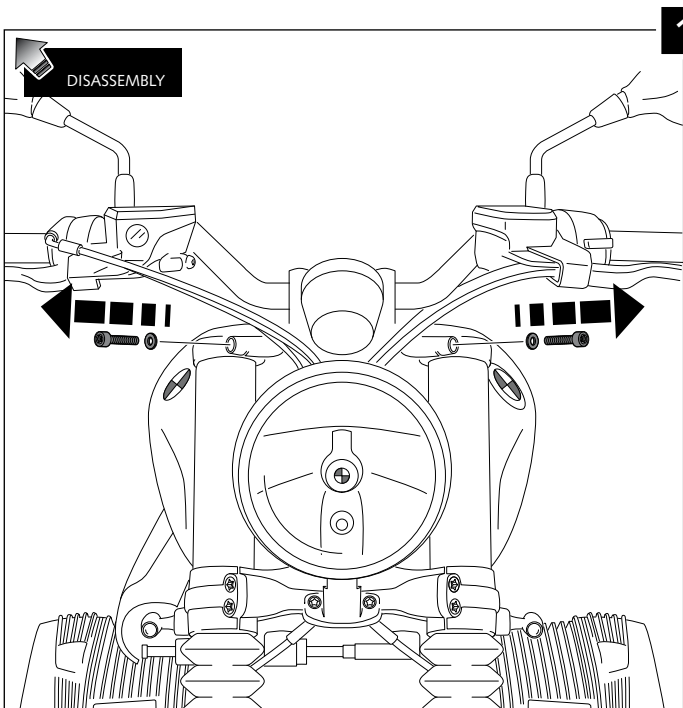

- RETRO WINDSCREEN FOR -

# BMW R NINE T SCRAMBLER

- MOUNTING INSTRUCTIONS -

