











SPORT SCREEN FOR
HARLEY DAVIDSON SPORTSTER
 CUSTOM (XL1200C) 2004- / 883 IRON (XL883N) 2009- / 883R (XL883R) 2002- /
 NIGHTSER (XL1200N) 2008- / SUPERLOW (XL883L) 2011-

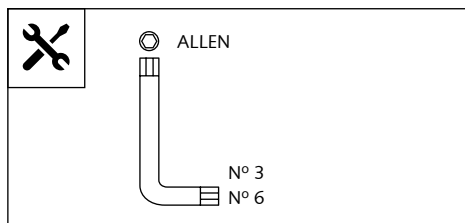

Ref.: 9283




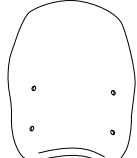


 1 persona 1 person	 15 min	<div style="border: 1px solid black; padding: 2px; text-align: center;">Easy</div>
--	---	--

ID.	PIEZA / PART	DESCRIPTION	QTY.
1		Sport screen	1
2		Right metal support	1
3		Left metal support	1
4		M5x16 Ø11 ISO7380 allen screw	4
5		M5x1 nylon washer	4
6		M5 silentblock	4
7		M5 ISO7380 screw cap	4

SPORT SCREEN FOR
HARLEY DAVIDSON SPORTSTER
CUSTOM (XL1200C) 2004- / 883 IRON (XL883N) 2009- / 883R (XL883R) 2002- /
NIGHTSER (XL1200N) 2008- / SUPERLOW (XL883L) 2011-

MOUNTING INSTRUCTIONS

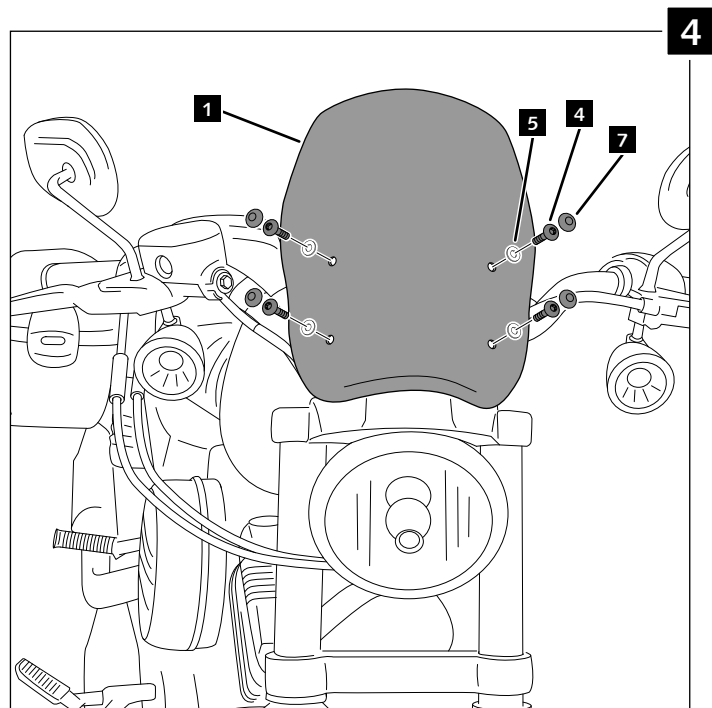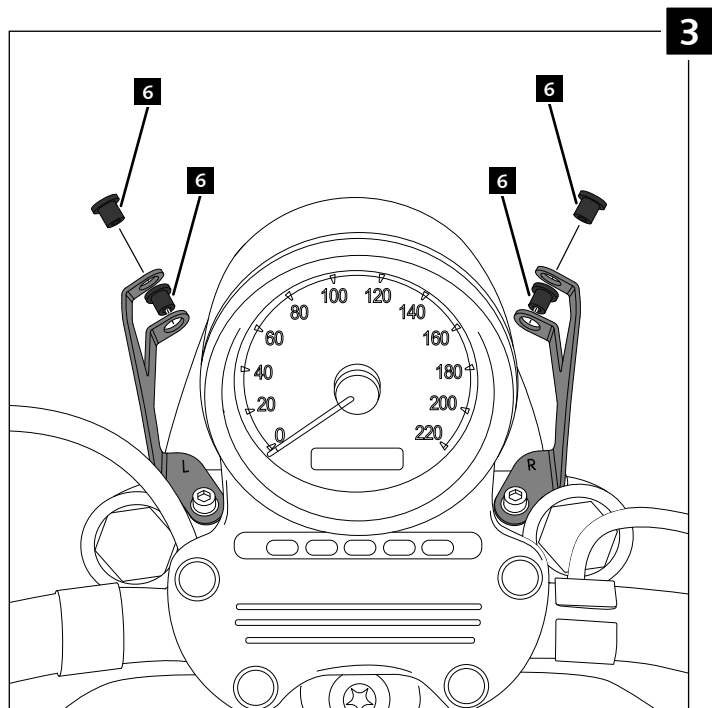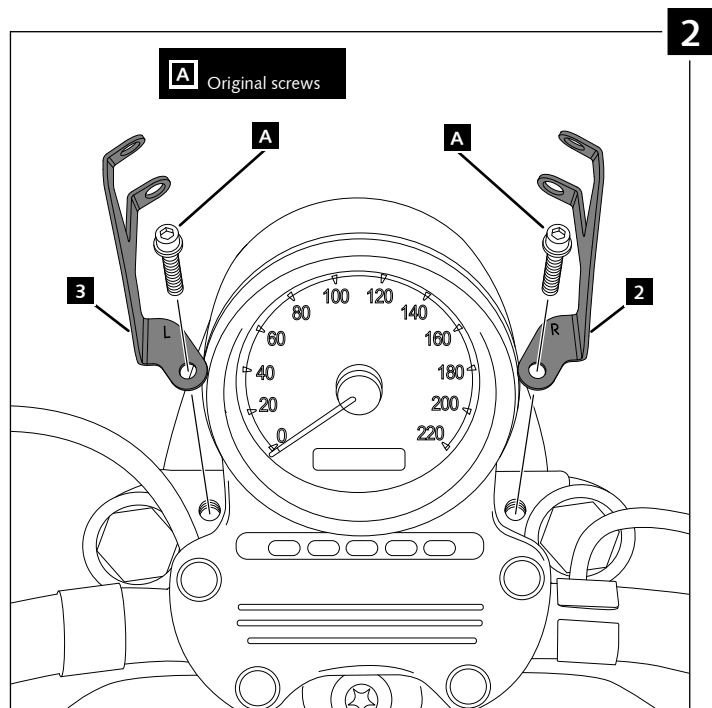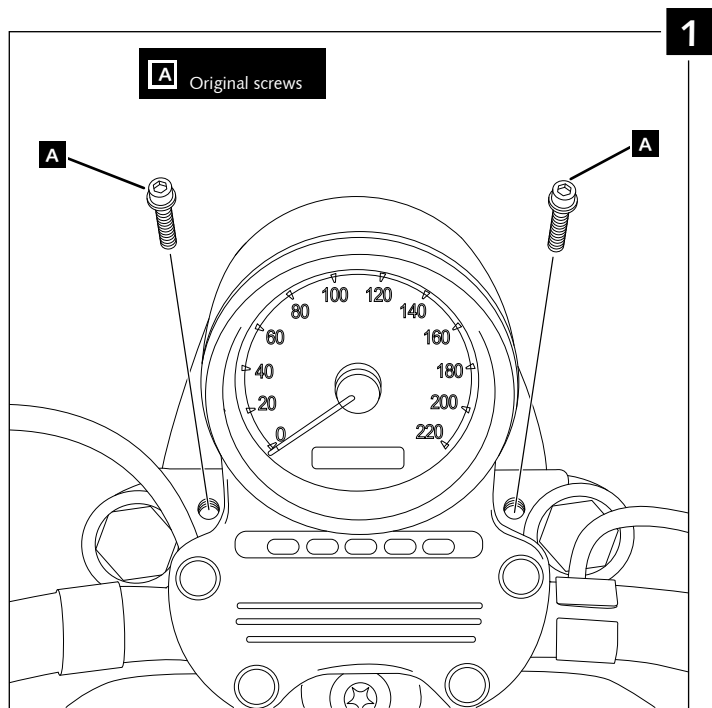

TIPS FOR A CORRECT WINDSCREEN ASSEMBLY

Due to storage and transport processes of the windscreens, which are subjected to positions and temperature changes out of our control, this may produce small deformations on the material causing some difficulties on the mounting process. It is recommended to:

- 1- Place the screws on one side without tighten all the way.
- 2- Stretch the windscreen to the other side (see Fig. 1). The flexibility of the material allows this stretch with no risk of breaking or cracking.
- 3- Place the screws without tightening all the way.
- 4- Tighten progressively all the screws.

