






Ref.: **9378** 

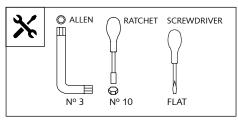





ID.	PART	DESCRIPTION	QTY.	REF.:
1		Left radiator side cover	1	9378J/CM3
2		Right radiator side cover	1	9378J/CM3
3		Left aluminum support 2mm	1	SOPOR-6P-11-9378
4		Right aluminum support 2mm	1	SOPOR-6P-11-9378
5		Left iron support 2mm original turn signal (optional homologated)	1	SOPOR-6P-11-9378
6	Q.j.	Right iron support 2mm original turn signal (optional homologated)	1	SOPOR-6P-11-9378
7	Ö	Subjection plates for original turn signal 3mm	2	SOPOR-6P-11-9378
8		Left acrylic turn signal (Supplied already mounted)	1	MET9378HM3
9		Right acrylic turn signal (Supplied already mounted)	1	MET9378HM3
10		Left turn signal (Supplied already mounted)	1	6475N
11		Right turn signal (Supplied already mounted)	1	6475N
12		Yamaya turn signals adapter (Supplied alre- ady mounted on Puig item)	1	4863N
13		M5x16 Ø11 ISO 7380 Allen Screw	6	TORNI-17380-493
14	٨	M5 silentblock	6	SILENTBTM5-046/1
15	<b>(</b> )	M5x1 nylon washer	6	ARNV00000000245
16	0	M5 ISO 7380 Allen screw cap	6	TAPON85
17	0	Ø12,5x4 silicon adhesive spacer (Supplied already mounted)	2	TOPE-PA12,7X3,5
18		M5x16 Ø11 ISO 7380 Allen Screw	2	TORNI-AI520
19		Stickers set	1	ADHESI254







**PROTECTION**Protects the rider from inclement weather

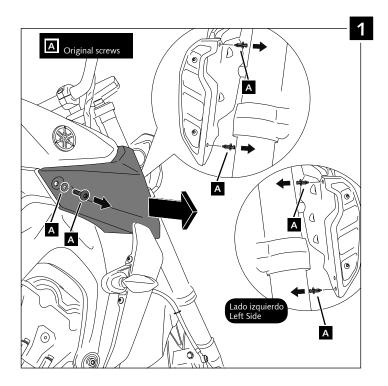

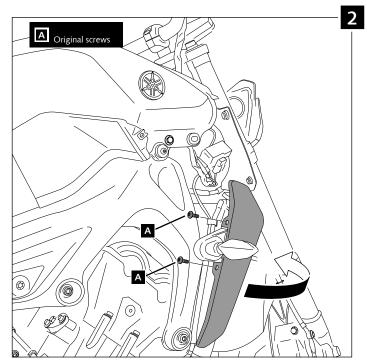

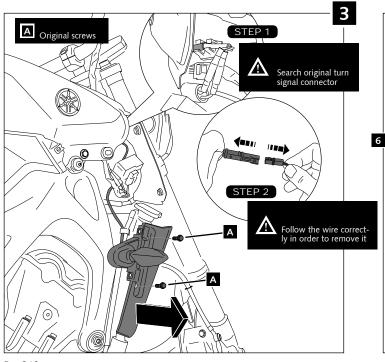


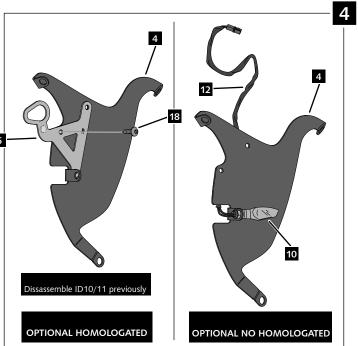



Pg. 2/6





## ASSEMBLY NO HOMOLOGATED

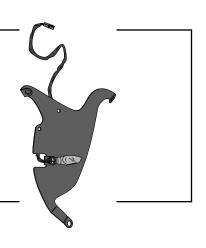

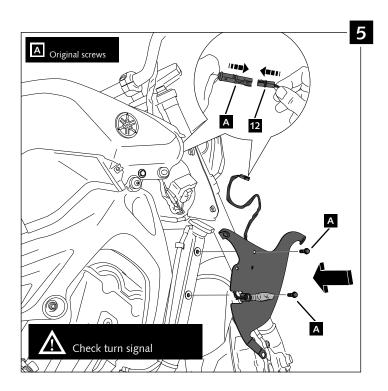

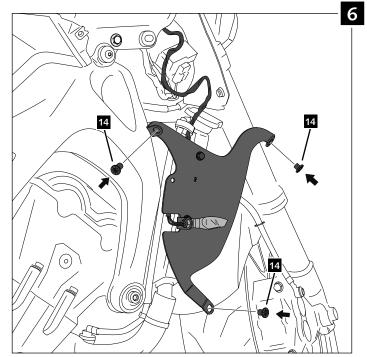

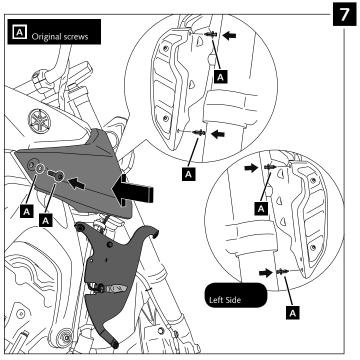


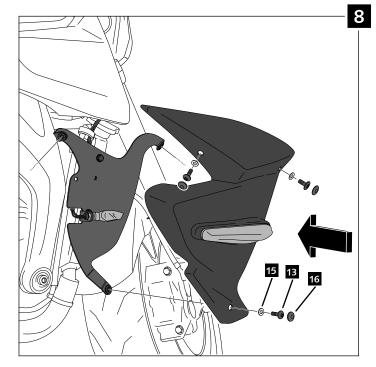



Pg. 3/6




## ASSEMBLY HOMOLOGATED

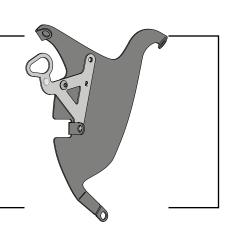

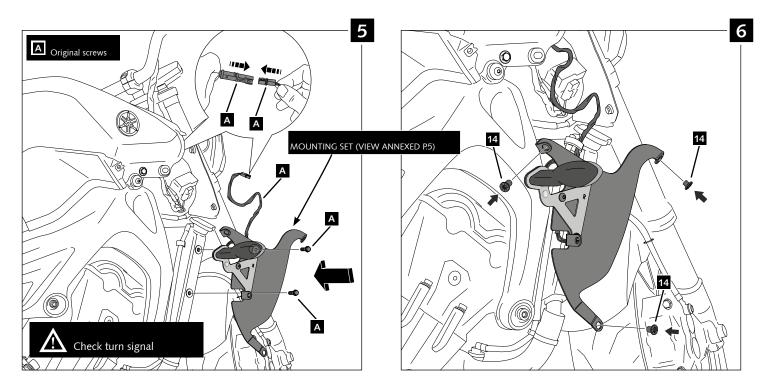

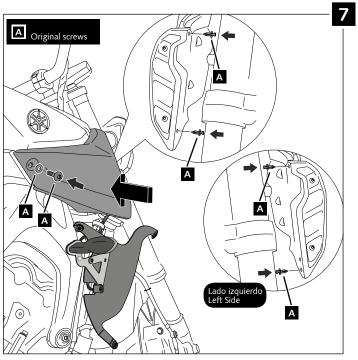

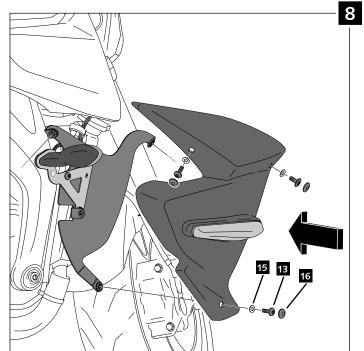



Pg. 4/6





## ANNEXED OEM TURN SIGNALS

## - MOUNTING INSTRUCTIONS -

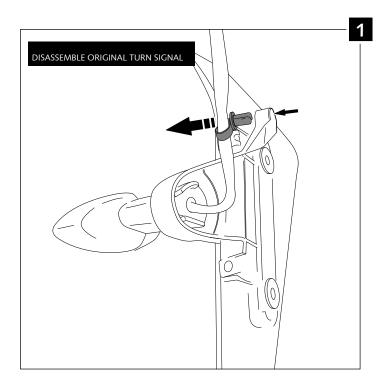

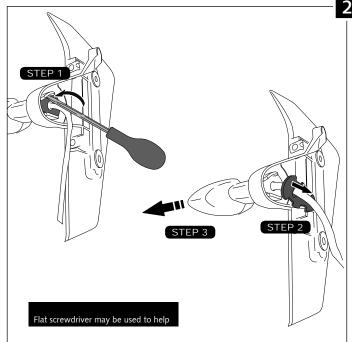

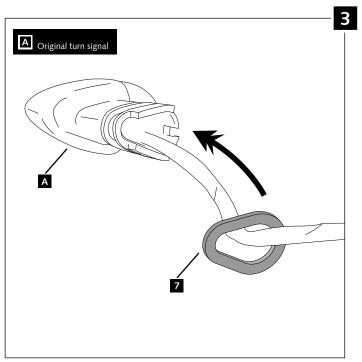

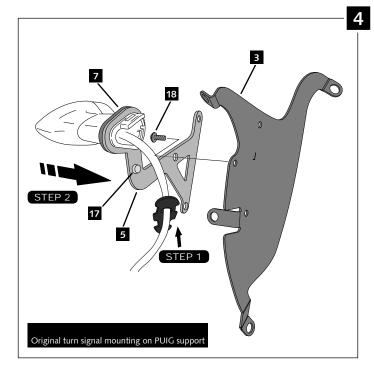

Pg. 5/6



