


FAROS AUXILIARES / AUXILIARY SPOTLIGHTS


REF 3489

MOUNTING INSTRUCTIONS

1

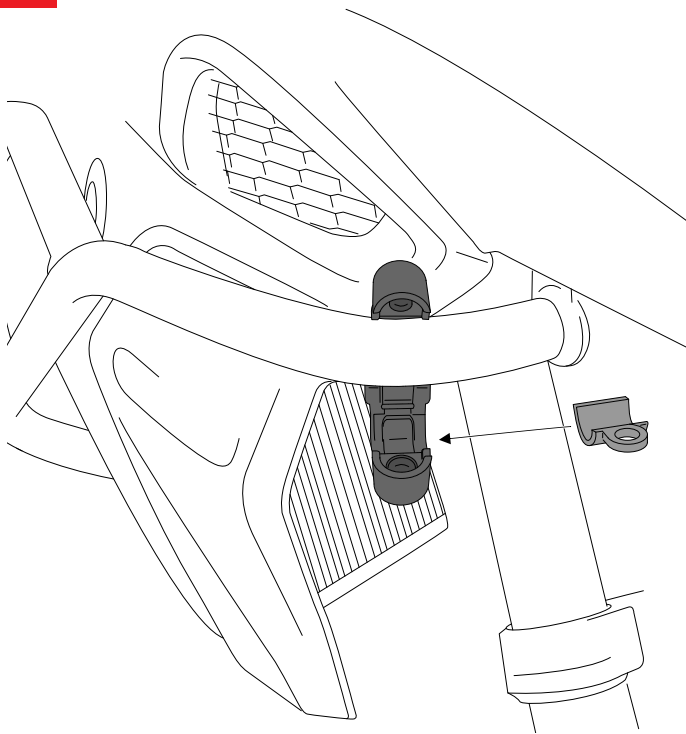


2

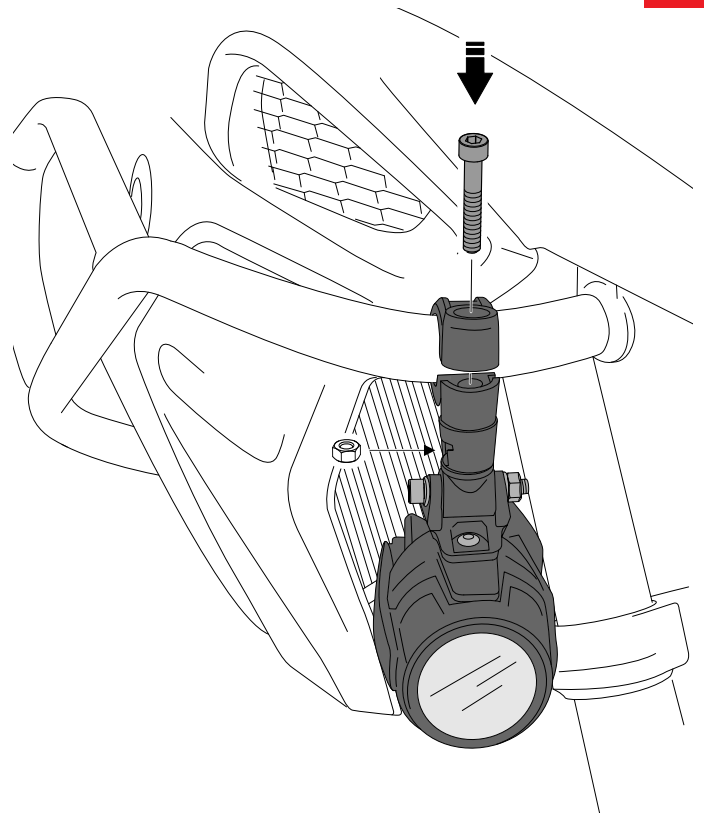

FOR THE ASSEMBLY OF THE AUXILIARY LIGHTS IN THE MOTOPLASTIC DEFENSES USE ONLY ONE OF THE 2 COARS THAT BRING THE SUPPORT AND ALLEN M6x50 SCREW

ESQUEMA ELÉCTRICO / CIRCUIT DIAGRAM

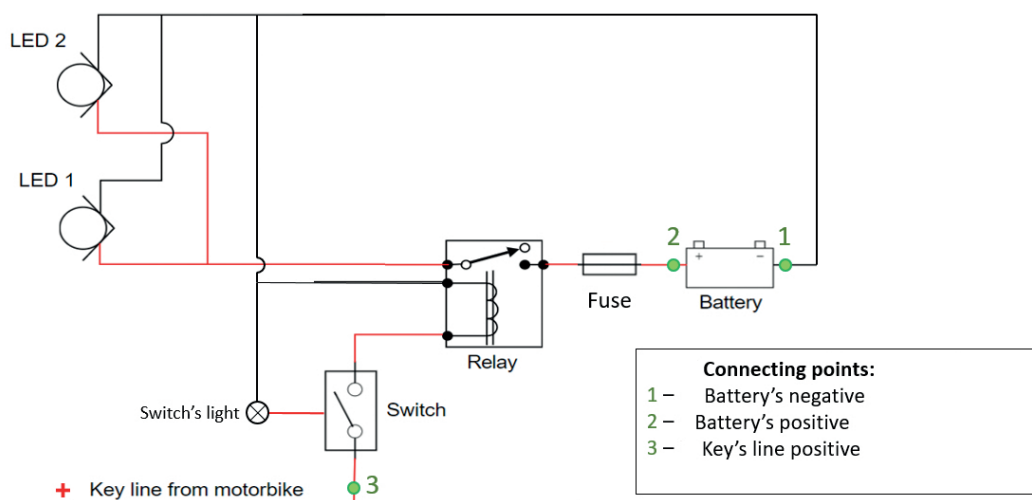


FAROS AUXILIARES / AUXILIARY SPOTLIGHTS


REF 9773

MOUNTING INSTRUCTIONS

1

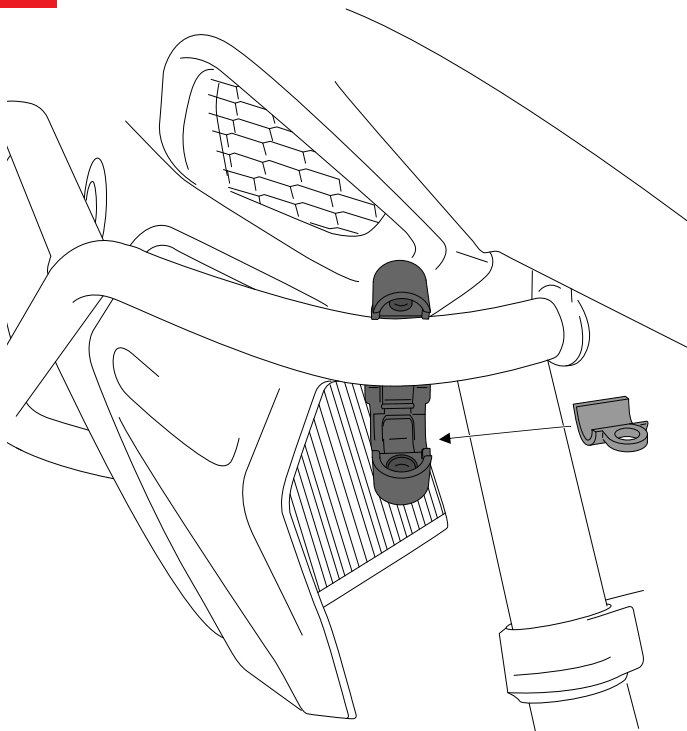

2


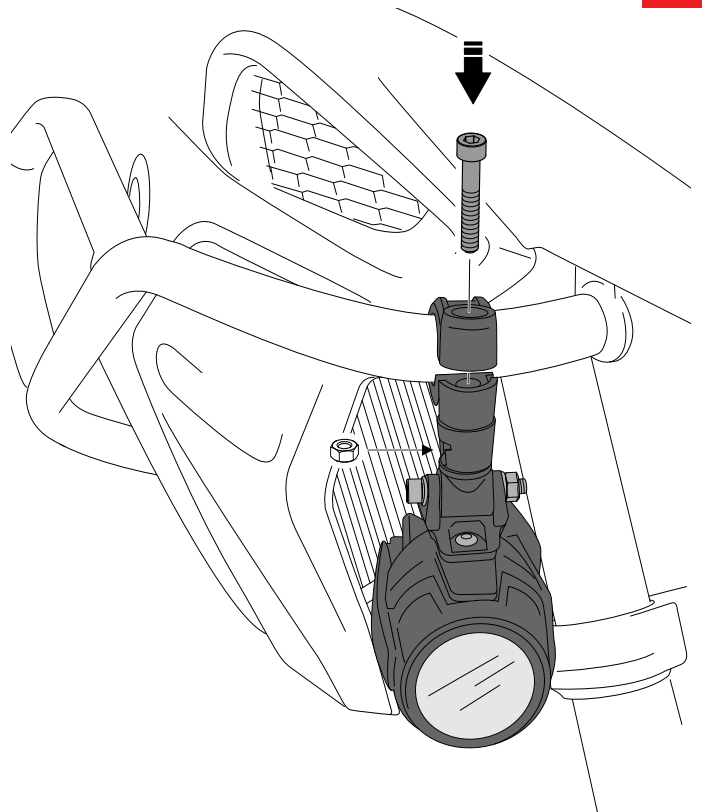





**FOR THE ASSEMBLY OF THE AUXILIARY LIGHTS IN THE MOTOPLASTIC DEFENSES
USE ONLY ONE OF THE 2 COARS THAT BRING THE SUPPORT AND ALLEN M6x50
SCREW**

REJILLA FARO AUXILIAR / AUXILIARY SPOTLIGHT GRILLAGE

REF 9785N

MOUNTING INSTRUCTIONS

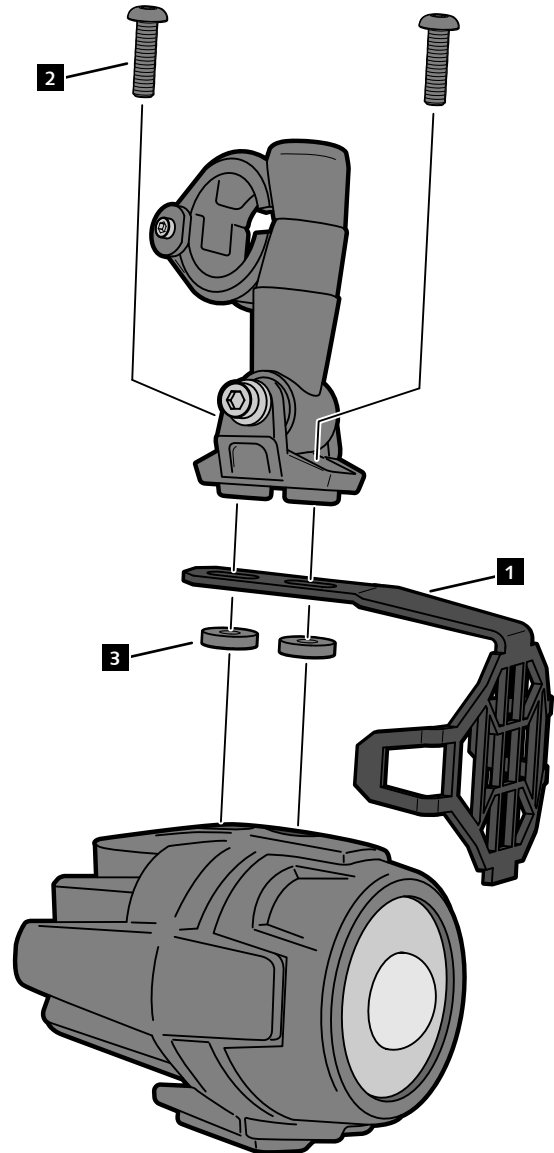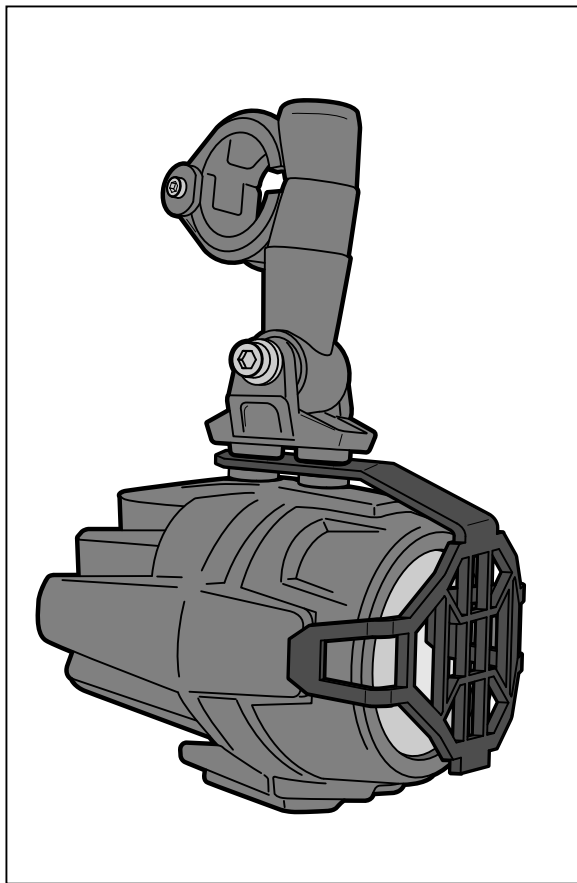

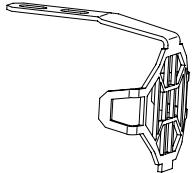ID.	PART	DESCRIPTION	QTY.	REF.:
1		Grillage	2	9785N
2		M5x20 screw ISO7380 INOX	4	9785N
3		Spacer 3mm	4	9785N

REF.3541N



ELECTRICAL CIRCUIT

