

BMW R NINE T


MOUNTING INSTRUCTIONS

REF 9167

**ABS
FRONT PLATE**

REF 9798

**ALUMINUM
FRONT PLATE**

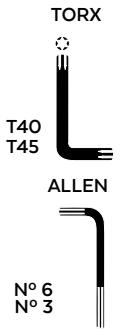

ID.	PART	DESCRIPTION	QTY.	REF.:
1		ABS front plate	1	10526J/CM3
		ALUMINUM front plate		9807P/N
2		Right metal support	1	SOPOR-2P-2-9167
3		Left metal support	1	SOPOR-2P-2-9167
4		M5 silentblock	2	SILENBTM5-046/1
5		Øint 8,5 x Øext 14x7,5 arrowhead	2	CASQUI8147-0193
6		M8x35 DIN912 screw	2	TORNI-AD912-196
7		M5x16 Ø11 ISO 7380 allen screw	2	TORNI-I7380-493
8		M5x1 nylon washer	2	ARNV0000000245
9		M5 ISO7380 screw cap	2	TAPON-----85
10		M5x16 Ø11 ISO 7380 allen screw (INOX)	2	TORNI-IA----423
11		Ø8x2 mm silicone tear (Supplied already mounted on item ID2 & ID3)	4	ADHESI-GT-D8---
12		Selft-autoadhesive trim lenght 190mm 6,2x2,6mm *ONLY FOR ALUMINUM FRONT PLATE (REF:9807)	1	PERFIL-PVC-1048
13		Stickers set	1	10535


BMW R NINE T

MOUNTING INSTRUCTIONS

1


DISASSEMBLY

A Original screws

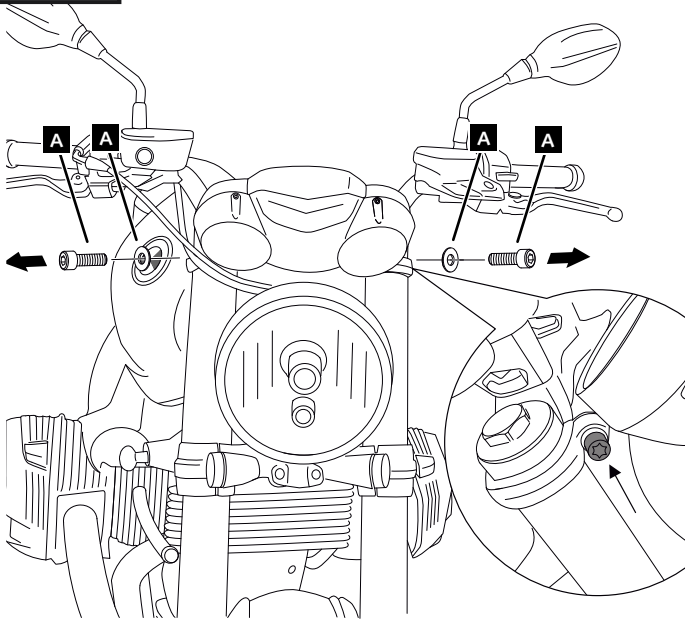

2


ASSEMBLY

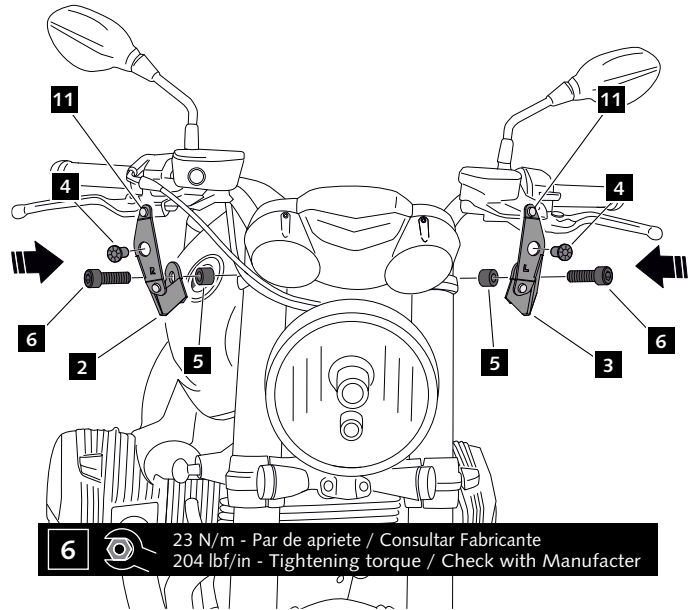


3

ASSEMBLY

ALUMINUM

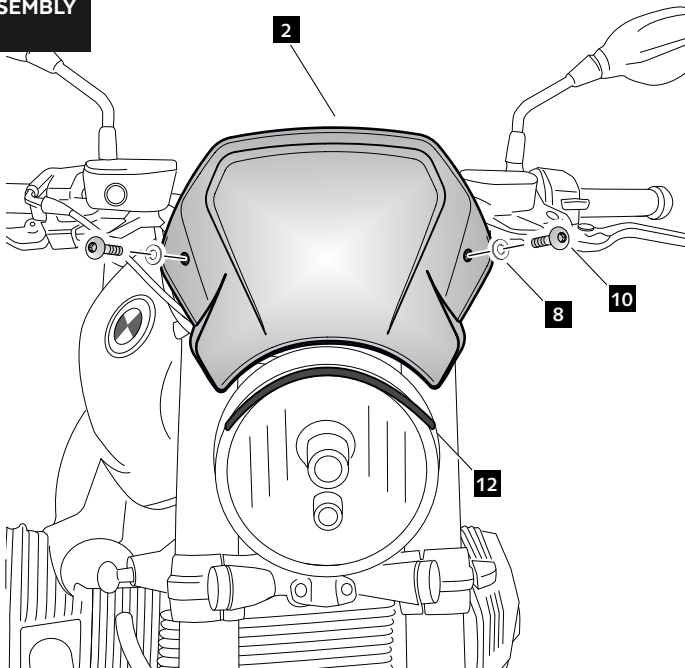

ABS

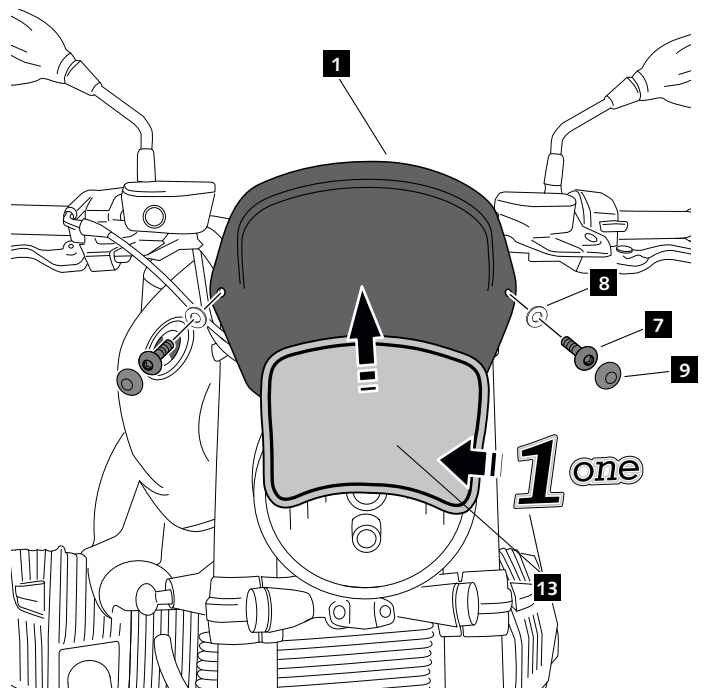

ID13 ONLY SUPPLIED WITH ABS FRONT PLATE