


FITTING INSTRUCTIONS FOR FI0071BK FRAME INSERT BMW R1200RT 2016 FRAME LEFT HAND SIDE



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW. DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

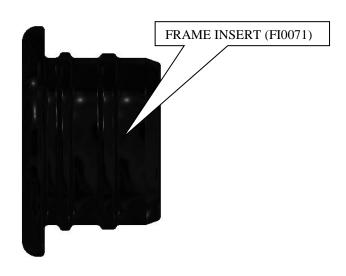

TOOLS REQUIRED

• SOFT MALLET



<u>Left hand side (as you sit on bike)</u>
• ENSURING THE LOGO IS IN THE CORRECT ORIENTATION PLACE THE FRAME INSERT INTO FRAME RECESS AND GENTLY KNOCK IN WITH A SOFT MALLET OR THE PALM OF YOUR HAND.