



FITTING INSTRUCTIONS FOR LS0008BK LOCKSTOP SAVERS
DUCATI PANIGALE V4, V4S, SPECIALE '18-



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike.

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY).

KIT CONTENTS

- Lockstop saver mounting plate (MP0213) (x2)
- Lockstop saver bobbin (B0486) (x4)
 - Spacer (S1109) (x4)
- M5 x 20mm long button head bolt (x4)

TOOLS REQUIRED


- 3mm Allen Key
- 4mm Allen Key



Picture 1



Picture 2

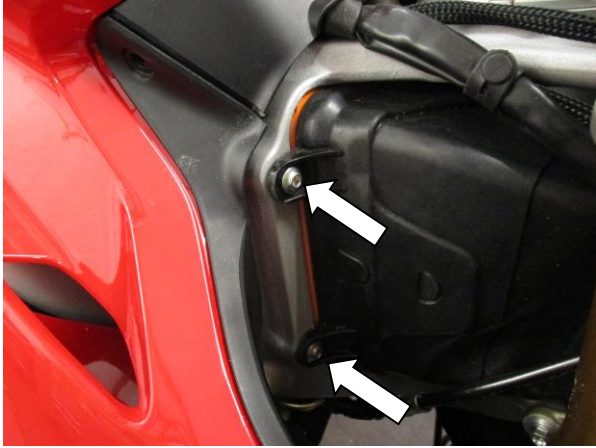

Picture 2



Picture 2

FITTING INSTRUCTIONS

- Assemble the bobbins to the mounting plates by pressing them into the slots as shown in picture 1.
- Place a bolt through both mounting plate holes as shown in picture 1 ensuring that the bolt goes through the side with the greater angle as shown in picture 2. Place a spacer on the opposite side of the mounting plate as shown in pictures 2 and 3.
- Remove the 2 bolts arrowed in picture 1.
- Use the M5 bolts to secure the lockstop saver assembly in place as shown in picture 4.
- Repeat for both sides.
- Do not overtighten the bolts, a maximum torque setting of 12Nm is advised for the supplied M5 bolts.
- Regularly check to ensure lockstop saver remains tight.