



**FITTING INSTRUCTIONS FOR RGH0007BK REAR HUGGER FOR
HONDA NC700 X AND X MODELS 2012-**



**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.**

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Kit Contents:


- 1 x HONDA HUGGER HUG0007 (WITH VELCRO ADHESIVE PADS IN POSITION).
- 2 x M5x20mm LONG BUTTON HEAD BOLTS.
- 1 x 10/32x3/4" SELF-TAPPING SCREWS.
- 2 x 3/8" P-CLIPS.
- 2 x M5 WASHERS.
- 2 x SMALL CABLE-TIES.
- 1 x R&G LARGE BUBBLE STICKER.

TOOLS REQUIRED

- 3mm A/F METRIC ALLEN KEY.
- 5mm A/F METRIC ALLEN KEY.
 - PHILLIPS DRIVER.



PICTURE 1

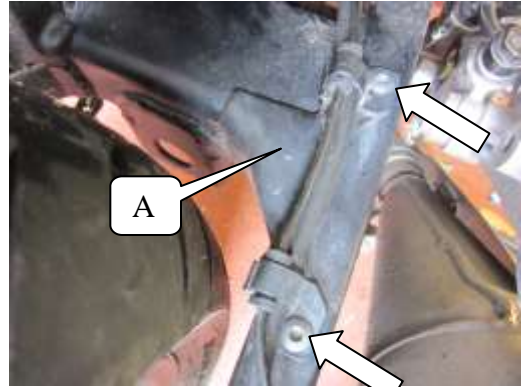

PICTURE 2



PICTURE 3



PICTURE 4



PICTURE 5



PICTURE 6



FITTING INSTRUCTIONS

- REMOVE THE SCREW ARROWED IN PICTURE 1.
- REMOVE THE TWO BOLTS BOLT ARROWED IN PICTURE 2.
- REMOVE PLASTIC CABLE CLAMP LABELLED 'A' IN PICTURE 2.
- OFFER THE R&G HUGGER INTO POSITION AND ALIGN WITH THE HOLES.
- USE THE NEW SELF-TAPPING SCREW FROM THE KIT AND FIT IN POSITION AS SHOWN IN PICTURE 3 (ONLY ENGAGE BY 5mm AT THIS STAGE).
- PLACE TWO OF THE NEW BOLTS AND WASHERS FROM KIT THROUGH THE NEW BRAKE LINE CLAMPING BRACKETS (P-CLIPS) AND INTO THE SWING-ARM ON THE RIGHT HAND SIDE AS SHOWN IN PICTURES 4 AND 5 (ONLY ENGAGE BY 5mm AT THIS STAGE).
- GENTLY LIFT THE HUGGER AND REMOVE THE BACKING OF ALL THE VELCRO STRIPS AND PRESS THE HUGGER FIRMLY INTO POSITION.
- TIGHTEN ALL THREE BOLTS ENSURING THE HUGGER IS CENTRAL AND HAS ADEQUATE FROM THE SIDES AND RADIALY FROM THE WHEEL.
- USE THE TWO CABLE TIES TO SECURE THE ABS WIRING AS ARROWED IN PICTURES 4 AND 5.