




FITTING INSTRUCTIONS FOR BRG0001 BRANDED RADIATOR GUARD
KAWASAKI VULCAN S '15-

Page | 1

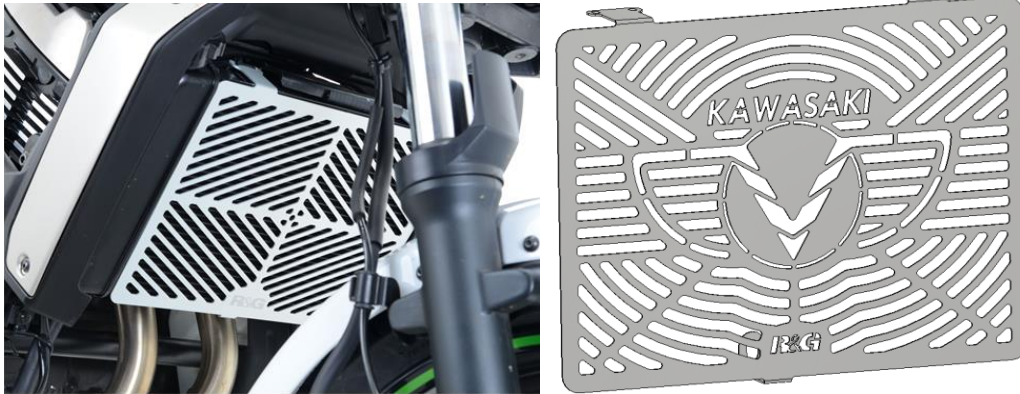

THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

GENERAL TORQUE SETTINGS

M4 BOLT = 8Nm
M5 BOLT = 12Nm
M6 BOLT = 15Nm
M8 BOLT = 20Nm
M10 BOLT = 40Nm

TOOLS REQUIRED

- Socket set to include 10mm socket & wrench.
- 4mm Allen key or socket bits with extension.
 - Cable cutters.

This Kit Contains

- 1x Radiator Guard (BRG0001)
- 1x M6 x 16mm long Button Head Bolt
 - 1x M6 Washer
 - 2x Cable Ties
- 2x 100mm Lengths of self-adhesive Foam



Picture 1



Picture 2



Picture 3



Picture 4



Picture 5



Picture 6



FITTING INSTRUCTIONS

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the bolt that secures the bottom of the radiator in place, located on the back side of the radiator, as shown in picture 1.
- Offer the R&G radiator into place locating the bottom mounting bracket around the radiator from underneath, then lift the radiator guard upwards to allow the top mounting brackets to locate over the top edge of the radiator, before sliding the guard towards the left side of the bike to align correctly, as shown in pictures 2 & 3. *Ensure that the lower mounting bracket sits between the plastic fan surround and radiator mount on the reverse.*
- Loop one cable tie through the top mounting holes and around the radiator mount on both sides of the bike, before loosely tightening, as shown in picture 4.
- Fit the M6 x 16mm long button head bolt through the M6 washer, then position through the plastic fan surround, then through the radiator guard mounting hole before tightening into the threaded boss on the radiator mount, as shown in picture 5.
- Ensure the radiator guard is correctly mounted before tightening the cable ties and bolt, as shown in picture 6.