


FITTING INSTRUCTIONS FOR BRG0003 BRANDED RADIATOR GUARD KAWASAKI Z750 '07-, Z750R, Z800, Z1000, Z1000SX & VERSYS 1000 '13-

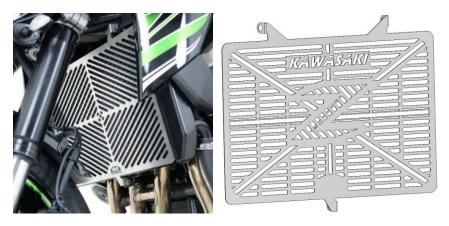



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW. DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – the rubber washers should be thrown away!

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

GENERAL TORQUE SETTINGS

M4 BOLT = 8Nm

M5 BOLT = 12Nm

M6 BOLT = 15Nm

M8 BOLT = 20Nm

M10 BOLT = 40Nm

TOOLS REQUIRED

• Socket set to include 10 socket and wrench or spanner.

This Kit Contains

- 1x Radiator Guard (BRG0003)
 - 2x 100mm Lengths of Foam
 - 3x M6 Washers







Picture 1 Picture 2

FITTING INSTRUCTIONS

Page | 2

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the two top radiator mounting bolts in position shown in picture 1.
- Remove the lower radiator mounting bolt from the left-hand side (as you sit on bike) in position shown in picture 2.
- Fit the radiator guard and secure using original bolts.