


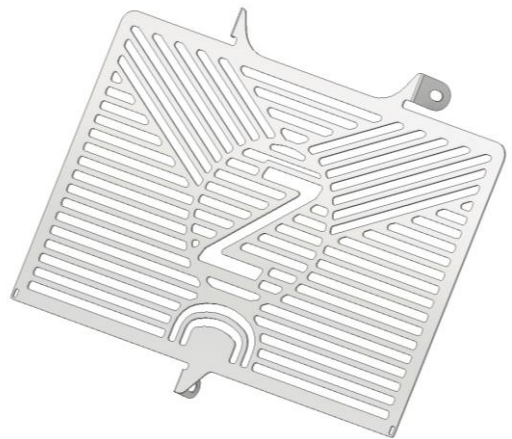

BRG0006

**FITTING INSTRUCTIONS FOR BRG0006SS RADIATOR GUARD**  
**KAWASAKI Z900RS 2018**

Page | 1



**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.**  
**DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.**

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

**GENERAL TORQUE SETTINGS**

M4 BOLT = 8Nm  
M5 BOLT = 12Nm  
M6 BOLT = 15Nm  
M8 BOLT = 20Nm  
M10 BOLT = 40Nm

**TOOLS REQUIRED**


- Socket set to include 10 socket and wrench or spanner.
  - 4mm Allen key.

**In This Kit There Should Be**


- 1 x Radiator Guard (BRG0006SS).
- 3 x 100mm Lengths of self-adhesive Foam.
  - 4 x Cable Ties.




BRG0006

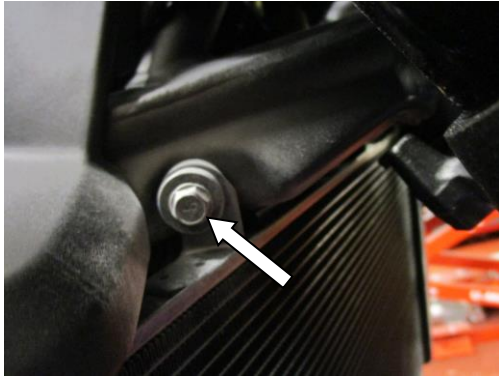

Picture 1

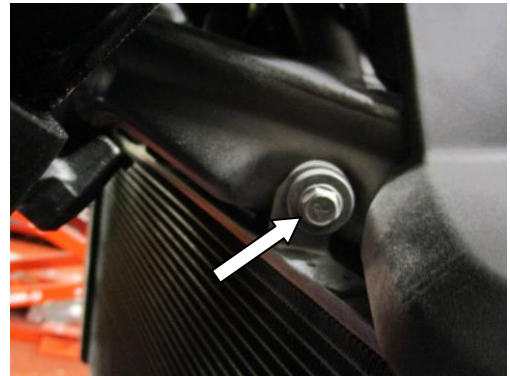

Picture 2

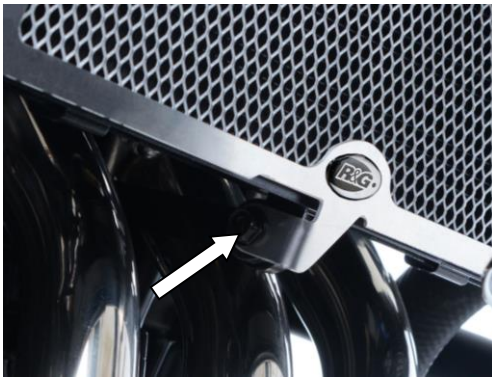

Picture 3



Picture 4




Picture 5



Picture 6



BRG0006

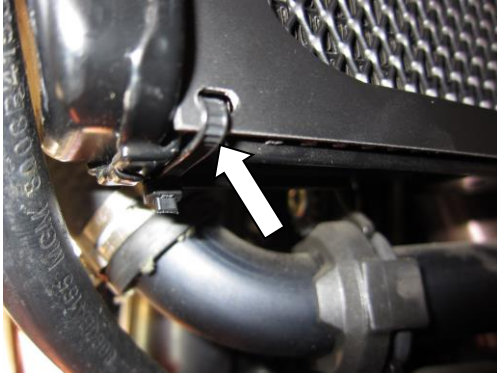

Picture 7



Picture 8

### **FITTING INSTRUCTIONS**

- To fit the radiator guard to the bike, cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the two upper radiator mounting bolts arrowed in pictures 1 and 2.
- Remove the lower radiator mounting bolt arrowed in picture 3.
- Offer the radiator guard into position as shown in the top picture and secure using the original bolts in the upper mounts as shown in pictures 4 and 5 (do not fully tighten at this stage).
- Secure the lower mount using the original bolt as shown in picture 6.
- Use the supplied cable ties to secure the lower radiator guard mounts as shown in pictures 7 and 8.
- Finally tighten all bolts and nuts.