




**Fitting Instructions for RAD0138BK Radiator Guard**  
**HUSQVARNA TR650 STRADA 2012**



**In This Kit There Should Be**  
**1x Radiator Guard (RAD0138BK)**  
**2x 100mm Lengths of self-adhesive Foam**

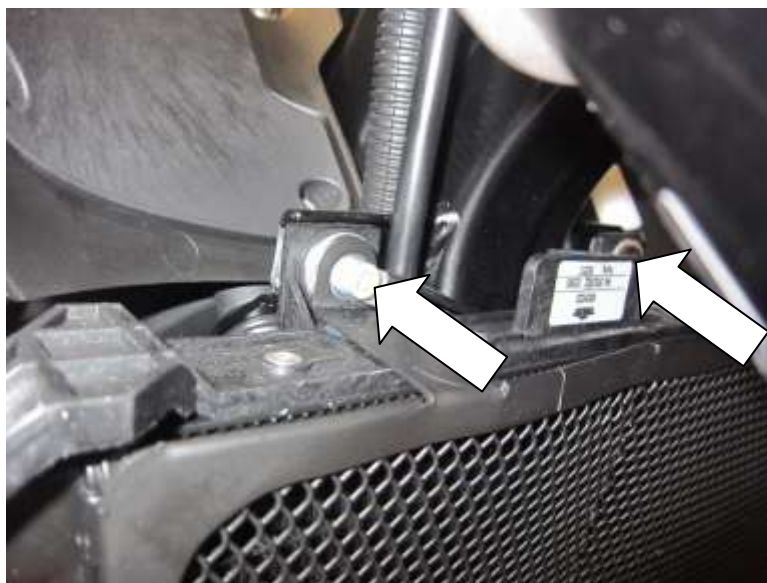



### **TOOLS REQUIRED**

- T30 Torx's bit and Wrench.

### **FITTING INSTRUCTIONS**

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the two top mounting bolts arrowed in the picture above.
- Offer the rad-guard into position, the bottom flanges should clip into position.
- Secure the rad-guard using the two original bolts in the top mounts.