




RAD0171


**Fitting Instructions for RAD0171 Radiator Guard**  
**YAMAHA MT-07 2014-/TRACER 700 2016-**



**In This Kit There Should Be**  
**1x Radiator Guard (RAD0171BK).**  
**4x M6 Nyloc Nuts.**  
**4x M6 Washers.**  
**2x 100mm Lengths of self-adhesive Foam.**

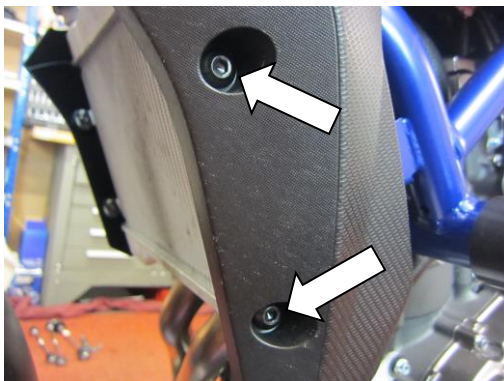


Picture 1

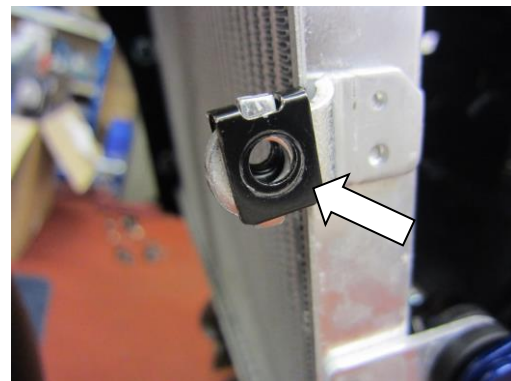


Picture 2




RAD0171

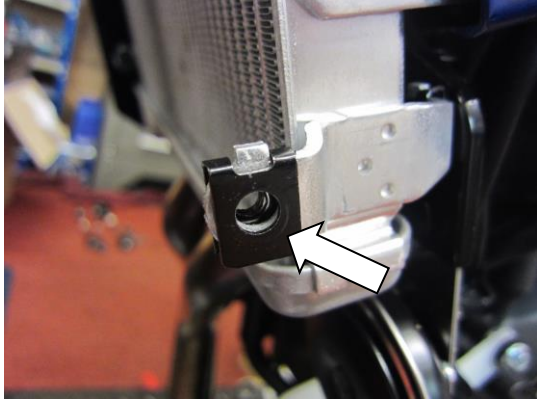


Picture 3

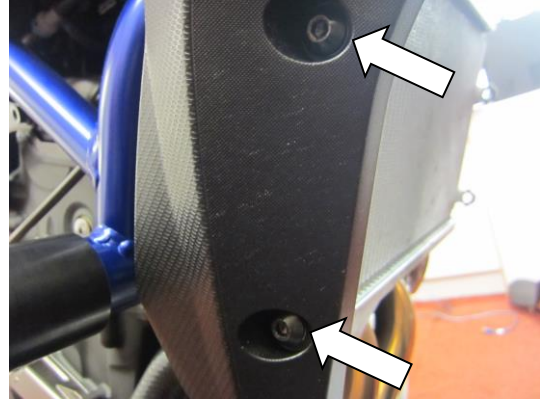


Picture 4

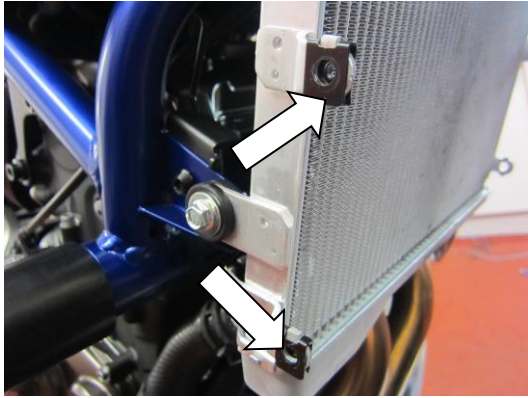

Picture 5

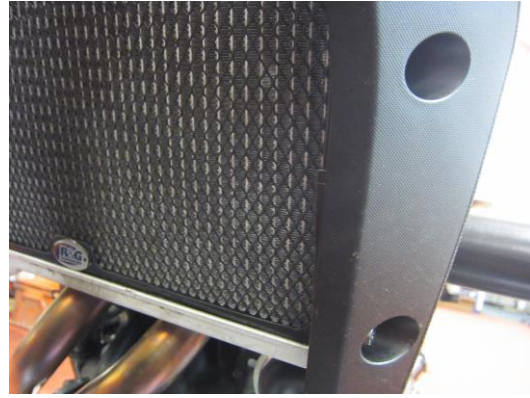

Picture 6

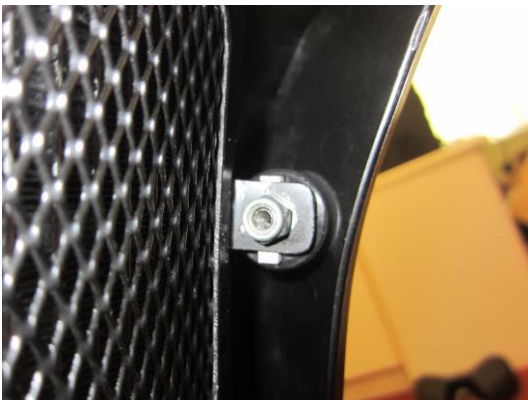

Picture 7



Picture 8

**TOOLS REQUIRED**

- 5mm Allen Key.
- 10mm Spanner.




RAD0171

### **FITTING INSTRUCTIONS FOR MT-07 2014-**


- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the two bolts arrowed in picture 1 and remove the side cowling from the left hand side of the motorcycle.
- Remove the two 'J' clips arrowed in pictures 2 and 3.
- Remove the two bolts arrowed in picture 4 and remove the side cowling from the right hand side of the motorcycle.
- Remove the two 'J' clips arrowed in picture 5.
- Offer the radiator guard into position as shown in picture 6.
- While holding the radiator guard in position, offer the left hand side cowling into position and secure using the original bolts with the washers and nuts from the kit as shown in pictures 7 and 8.
- Repeat the above point for the right hand side.

### **FITTING INSTRUCTIONS FOR TRACER 700 2016-**

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator when fitted.
- Remove the two push rivets arrowed in picture 9 and remove the infill panel from the left hand side of the radiator.
- Remove the two push rivets arrowed in picture 10 and remove the infill panel from the right hand side of the radiator.
- Offer the radiator guard into position as shown in picture 6.
- While holding the radiator guard in position, offer the left hand side infill panel into position as original and secure using the original push rivets (please ensure the rivets are located through the mounting holes in the radiator guard).
- Offer the right hand side infill panel into position as original and secure using the original push rivets (please ensure the rivets are located through the mounting holes in the radiator guard).

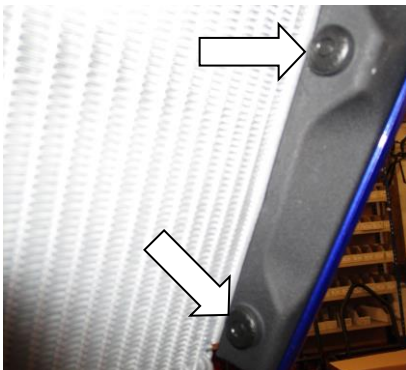

Picture 9

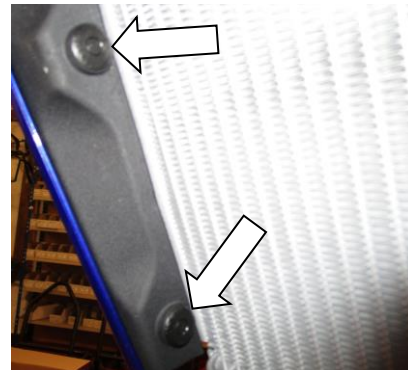

Picture 10