



FITTING INSTRUCTIONS FOR RAD0205 RADIATOR GUARD
YAMAHA YZF-R25/R3 and MT-03/MT-25 2014-



PICTURE 'A'



PICTURE 'B'

THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

GENERAL TORQUE SETTINGS

M4 BOLT = 8Nm
 M5 BOLT = 12Nm
 M6 BOLT = 15Nm
 M8 BOLT = 20Nm
 M10 BOLT = 40Nm

TOOLS REQUIRED

- Socket set to include 10 socket and wrench.
 - 4, 5, 6 and 8mm Allen keys.
 - Phillips driver.

In This Kit There Should Be

- 1x Radiator Guard (RAD0205)
- 2x 100mm Lengths of self-adhesive Foam
 - 4 x Cable/Zip Ties.



Picture 1



Picture 2




Picture 3



Picture 4



Picture 5

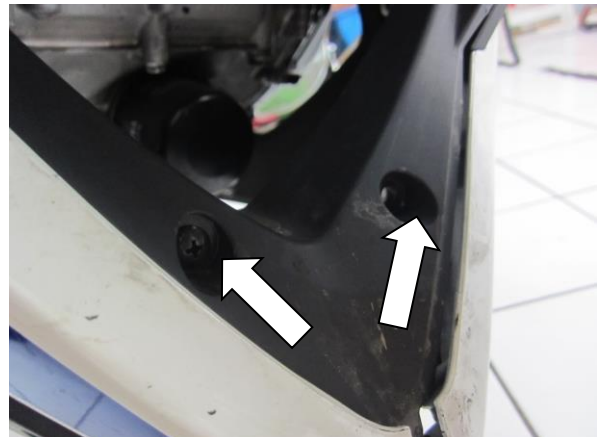

Picture 6



Picture 7



Picture 8



Picture 9



Picture 10



Picture 11



Picture 12



Picture 13



Picture 14




Picture 15



Picture 16




Picture 17

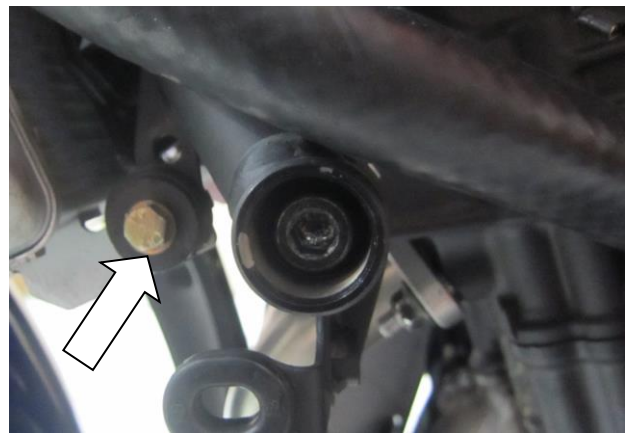

Picture 18



Picture 19

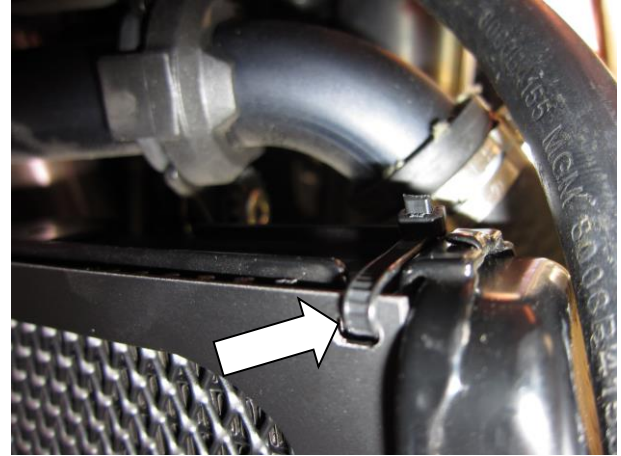

Picture 20


FITTING INSTRUCTIONS FOR R25 and R3

Near side (left side as you sit on bike)

- Remove the two bolts arrowed in pictures 1 and 2 and remove the left hand side plastic infill panel.
- Remove the two bolts arrowed in picture 3 and remove the plastic seat/frame panel.
- Remove the bolts and plastic rivets arrowed in pictures 4 thru 9 and carefully remove the left hand side fairing.

Off side (right side as you sit on bike)


- Remove the two bolts arrowed in pictures 11 and 12 and remove the right hand side plastic infill panel.
 - Remove the two bolts arrowed in picture 13 and remove the plastic seat/frame panel.
 - Remove the bolts and plastic rivets arrowed in pictures 14 thru 16 and carefully remove the right hand side fairing.
-
- To fit the radiator guard to the bike, cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
 - Remove the two bolts arrowed in pictures 17 and 18.
 - Offer the radiator guard into position and secure using the original two bolts on the lower mounting.
 - On the upper mounts use the cable ties supplied to secure in position as shown in pictures 19 and 20.
 - Refit all the side fairings and panels as original.

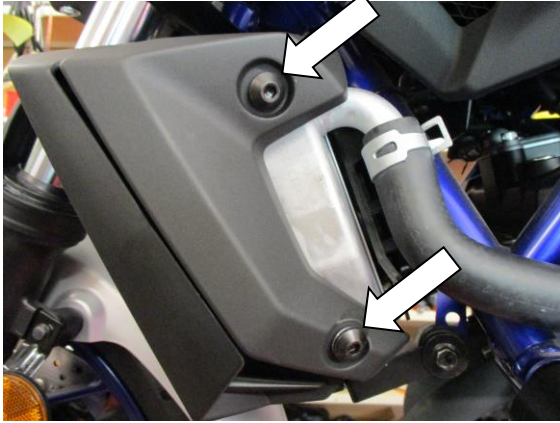


Picture 21




Picture 22

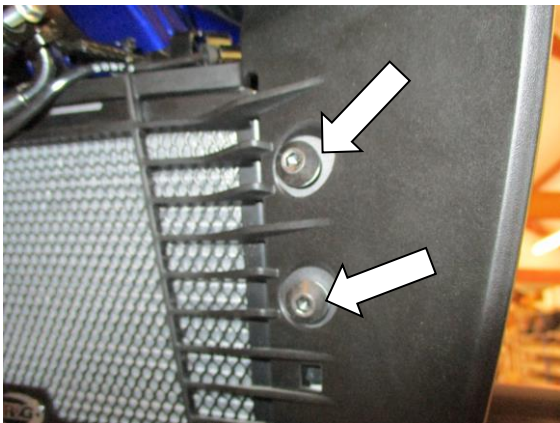

Picture 23

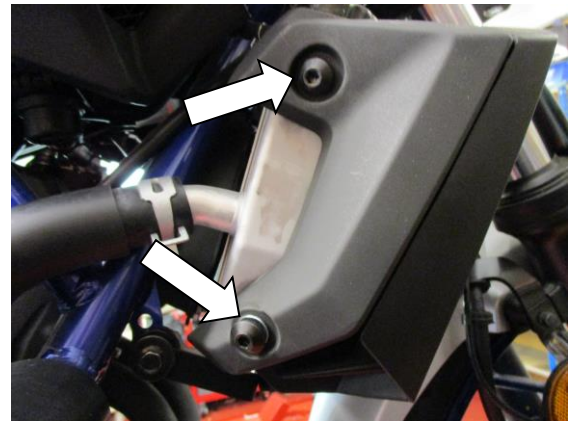


Picture 24

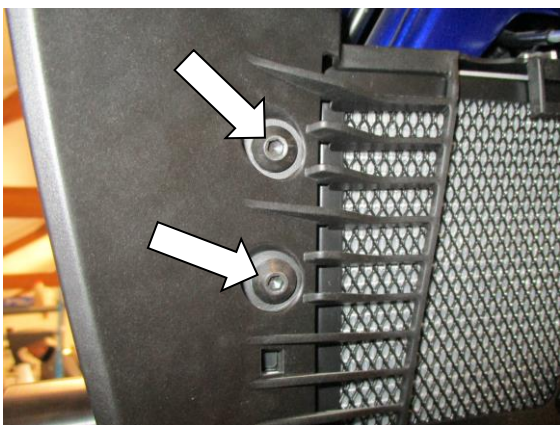


Picture 25




Picture 26

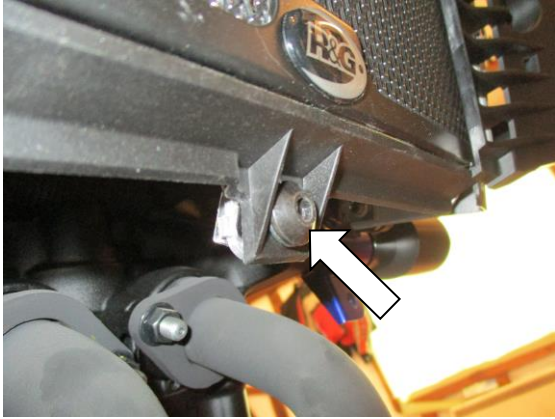

Picture 27

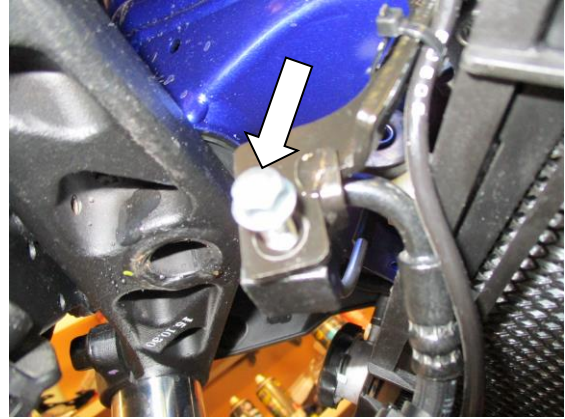

Picture 28

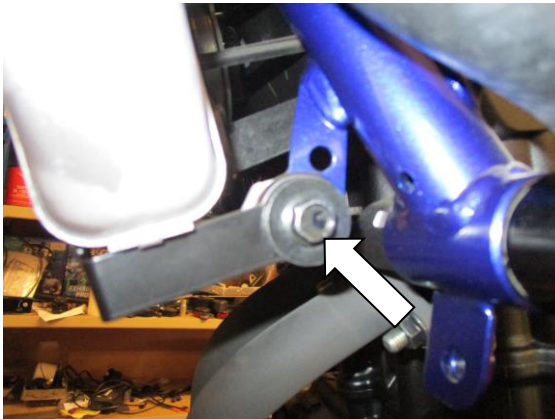


Picture 29



Picture 30



Picture 31

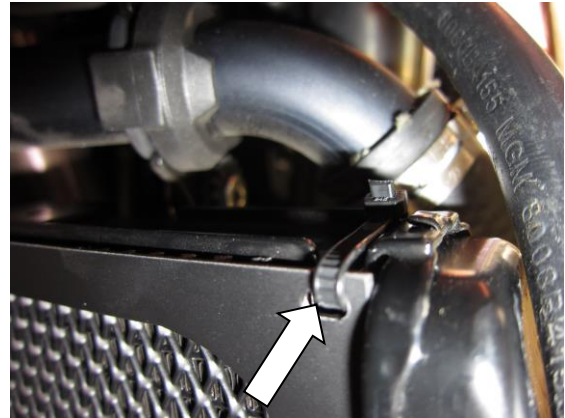

Picture 32



FITTING INSTRUCTIONS FOR MT-25 and MT-03

Near side (left side as you sit on bike)

- Remove the two bolts arrowed in pictures 21 and remove the left hand side plastic panel.
- Remove the plastic rivet arrowed in picture 22.
- Remove the two bolts arrowed in picture 23.

Off side (right side as you sit on bike)

- Remove the two bolts arrowed in pictures 24 and remove the left hand side plastic panel.
- Remove the plastic rivet arrowed in picture 25.
- Remove the two bolts arrowed in picture 26.

- Remove the bolt arrowed in picture 27.
- Remove the bolt arrowed in picture 28 and remove the plastic radiator surround.
- Remove the two bolts arrowed in picture 29 and 30.
- Cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Offer the new radiator guard into position and secure in position as shown in pictures 31 and 32, using the original bolts (do not fully tighten at this stage).
- On the upper mounts use the cable ties supplied to secure in position as shown in pictures 19 and 20.
- Tighten the two lower radiator mounting bolts as shown in pictures 29 and 30.
- Refit the plastic radiator surround as original using the original bolts and plastic rivets.
- Refit and tighten the ABS bracket bolt shown in picture 28.
- Refit both plastic side panels as original.