

## # HWK030 Rack Mounting Support

### For All Can Am Spyder Trailer Hitches & Others With Un-Sprung Hitches

### Installation Instructions



*NOTE: This Mounting Support is made to be used with RIVCO's #GL18008 Quick Detach Rack and Mounting Bracket.*


1. Lay out and familiarize yourself with the supplied parts and hardware in both this kit and the rack # GL18008. Remove the ball from your trailer hitch. Referring to photo (1) install the chrome mounting bracket (1A) with the notch facing upwards followed by the silver angled bracket (1B) in the notch on top of the hitch. Use the supplied longer ball mounting bolt with the original washer and lock washer to loosely secure them to the hitch.
2. Referring to photo (2) slide the pins of the rack through the holes in the receiver brackets (2A). Then place the supplied locking pins thru the holes at the ends of the pins (2B).
3. Referring to photo (3) locate the support rod (3A), place the end of the rod through the hole in the angled bracket followed by the supplied grommet, flat washer and locking pin (3B).
4. Rotate the bracket at the end of the support rod upright. Center the bracket on the rack from left to right using a tape measure from the sides of the rack to the edges of the bracket and make a mark along the edge of the bracket on the rack. As shown in photo (2), at 2C) clamp the bracket to the rack aligning the mark you made with the edge of the bracket and the top of the bracket being flush with the top of the rack using a C-Clamp or similar type clamp. Drill two ¼" holes thru the rack using the holes in the bracket as a guide.

Place the supplied ¼" bolts from the rear through the bracket, and then the rack followed by the supplied nuts. Tighten the two bolts and nuts securely and remove the clamp. While holding the rack straight or parallel to the vehicle, tighten the ball mounting bolt securely.

5. The rack can now be removed by first removing the three locking pins, the outer washer and grommet from the lower pin and then sliding the rack off the mounting plate and support bracket. The mounting and support brackets can stay in place while towing a trailer so that you may easily go from trailer to rack without tools. Note that the rack has a maximum working load rating of 35 lbs., and while the rack can sustain much higher loads than the rated 35 lbs., higher loads may adversely affect vehicle handling. *We also offer an optional Tail Light Set with turn signals and license plate mount which should be used if any portion of the tail lights will be covered by your luggage. Additionally we offer a matching 11"x16"x12" Waterproof Duffle Bag (pt# RB100) which can be attached and locked to the rack using our Locking Rod Set (pt# RBDL).*



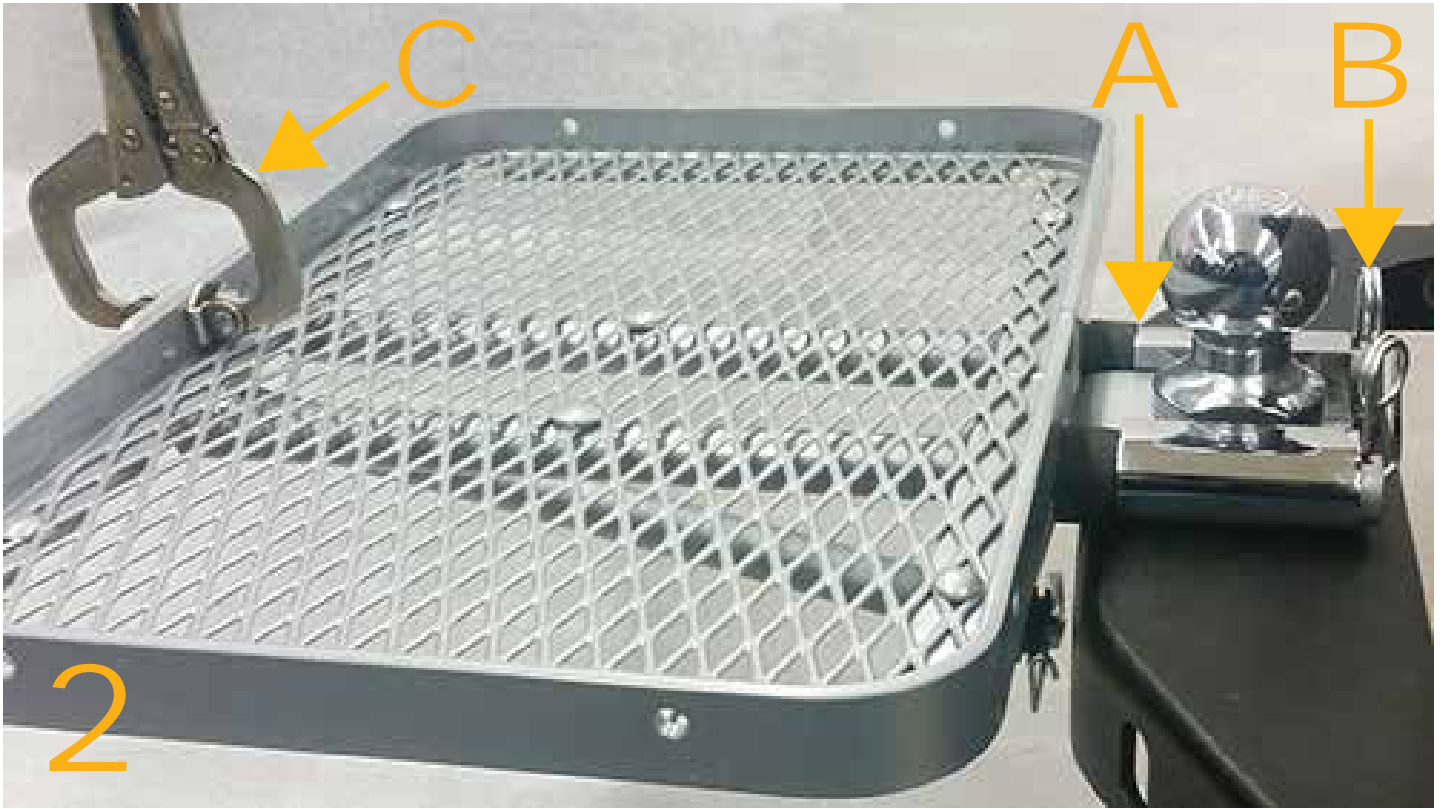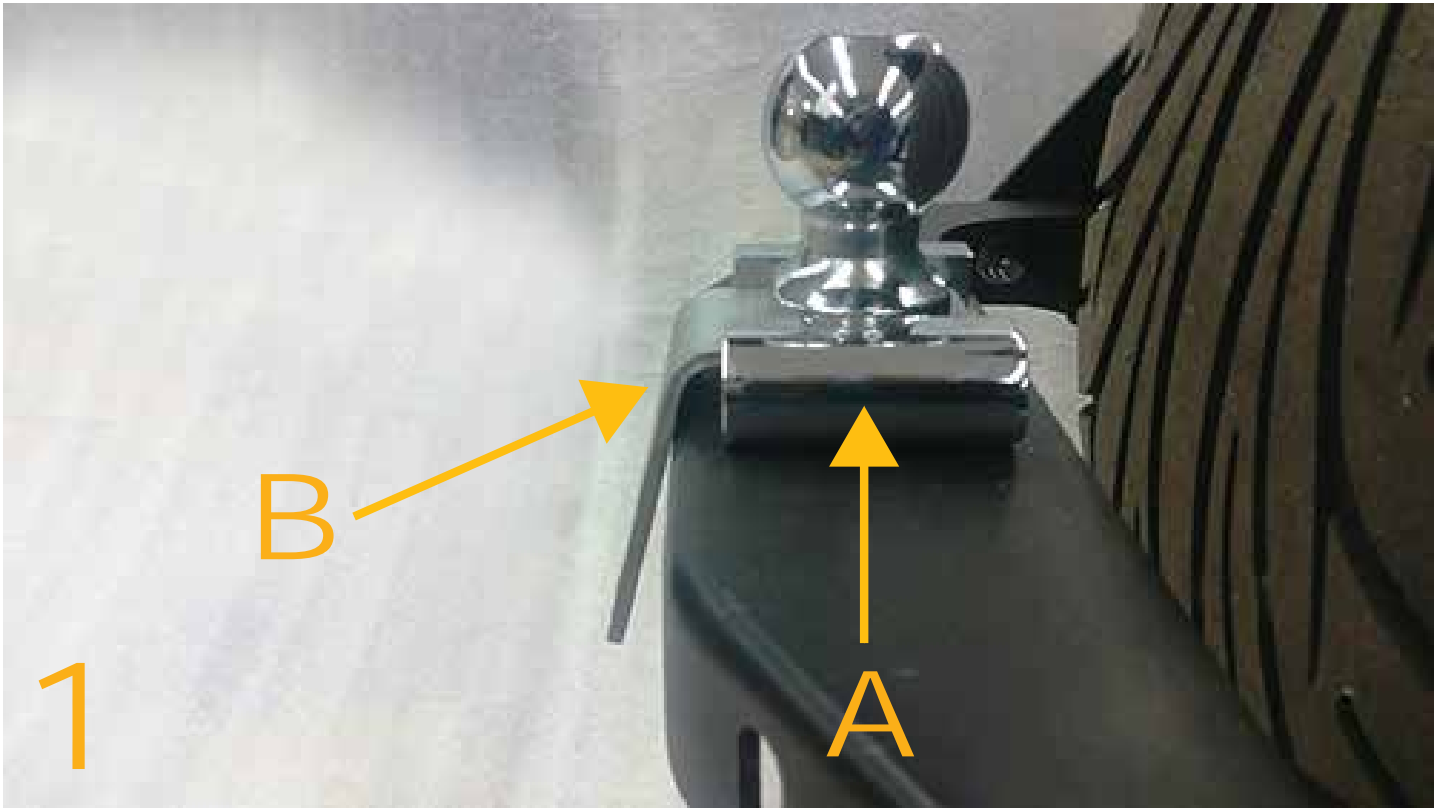

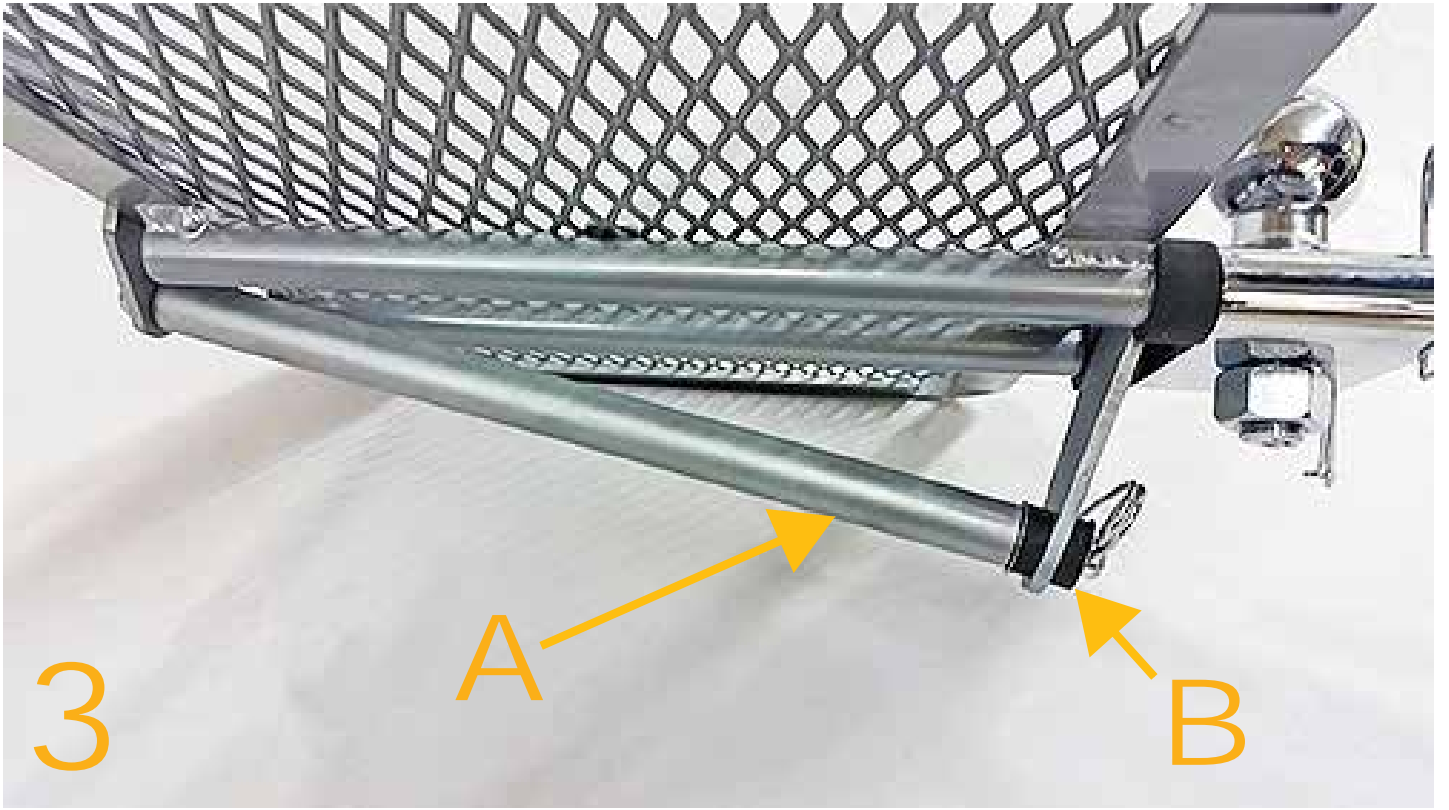

Rely only on high-grade motorcycle luggage systems & saddlebags offered on our virtual shelves.