

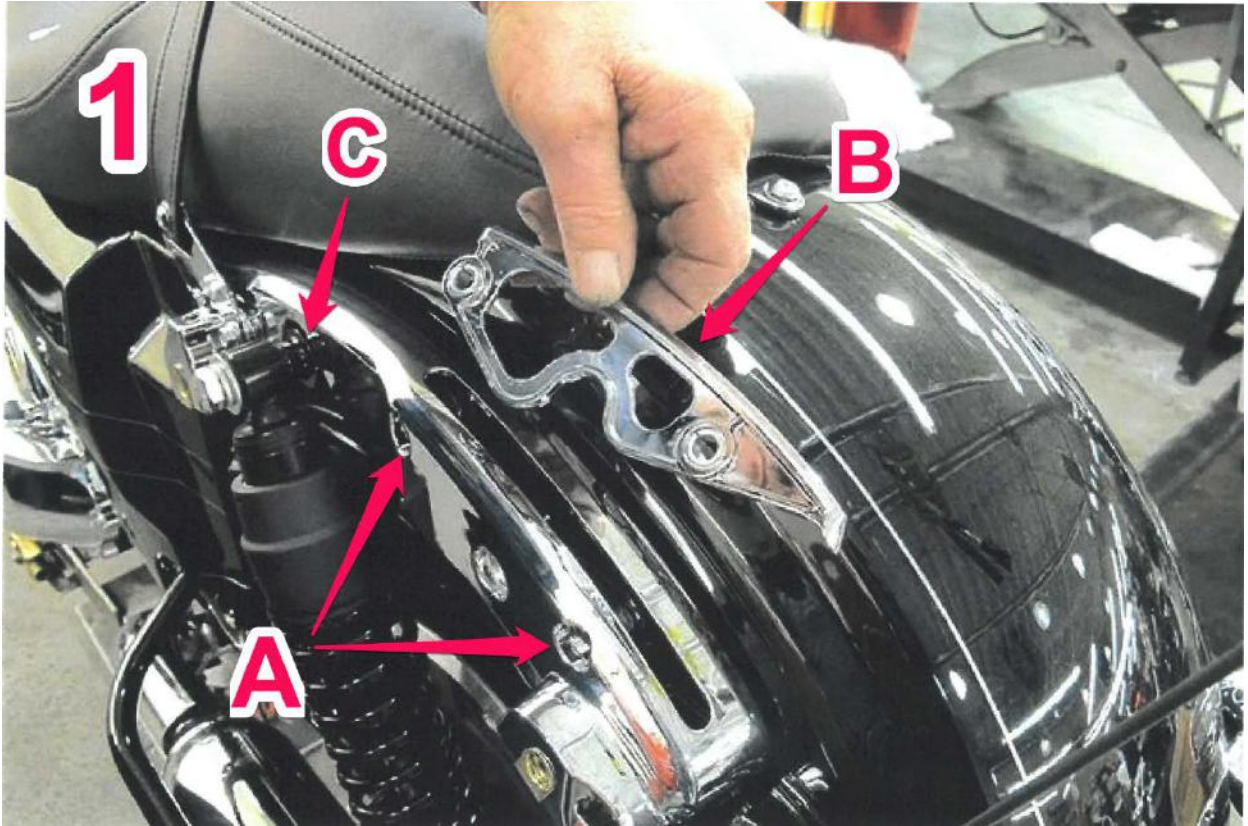


# **Quick Detach Back Rest and luggage rack INSTALLATION INSTRUCTIONS**

## **MV175 2014 and newer FLH & FLT models**

1. Remove the saddlebags and set them aside.
2. Starting on the left side remove the two Torx screws photo (1A). Remove the chrome filler panel (1B).
3. Locate the left docking plate (2A) and place it into the slot where the filler panel was removed. Locate four of the supplied Allen screws and apply a drop of thread locker (Loc-Tite) to the threads on each. Install two of the supplied Allen screws with washers into the holes at (3A) and tighten securely (8-12 ft. lbs.). Install the right plate in the same manner.
4. Install the rack onto the top shock mounts and docking hardware as follows. Slide the open forks at the front of the rack/backrest onto the top of the shock absorber mounts (photo 1A) between the shock and the frame as far as they will go. Rotate or lower the rear of the rack down onto the front spools of the docking plates. (4A). Pull back on the spring loaded levers (4B), rotate the locks (4C) so the open slot aligns with the mounting spools, lower the rack and locks onto the spools. Rotate the lever on the locks forward until they appear as shown in photo (4) and the spring loaded locks close as shown.
5. The rear spools are not used with this rack/backrest combination but will accept the smaller rack or backrests separately.

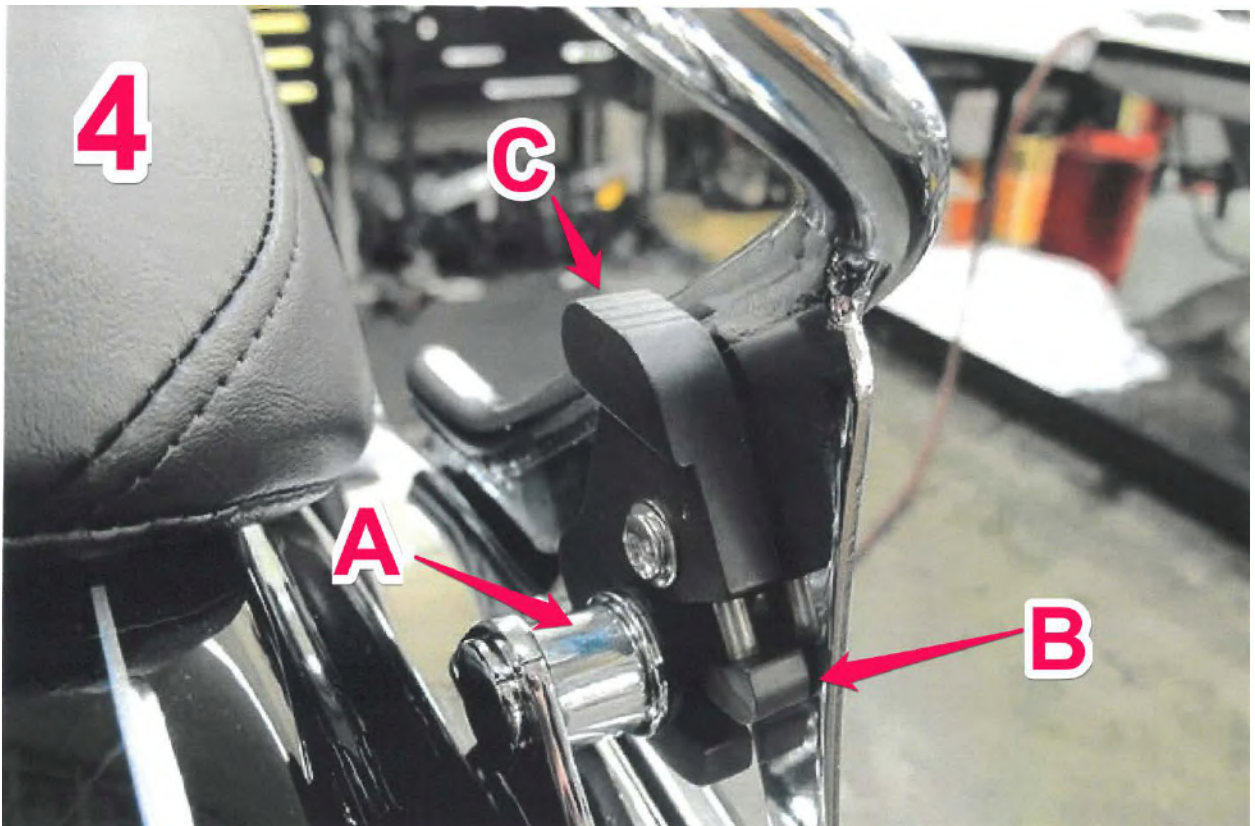

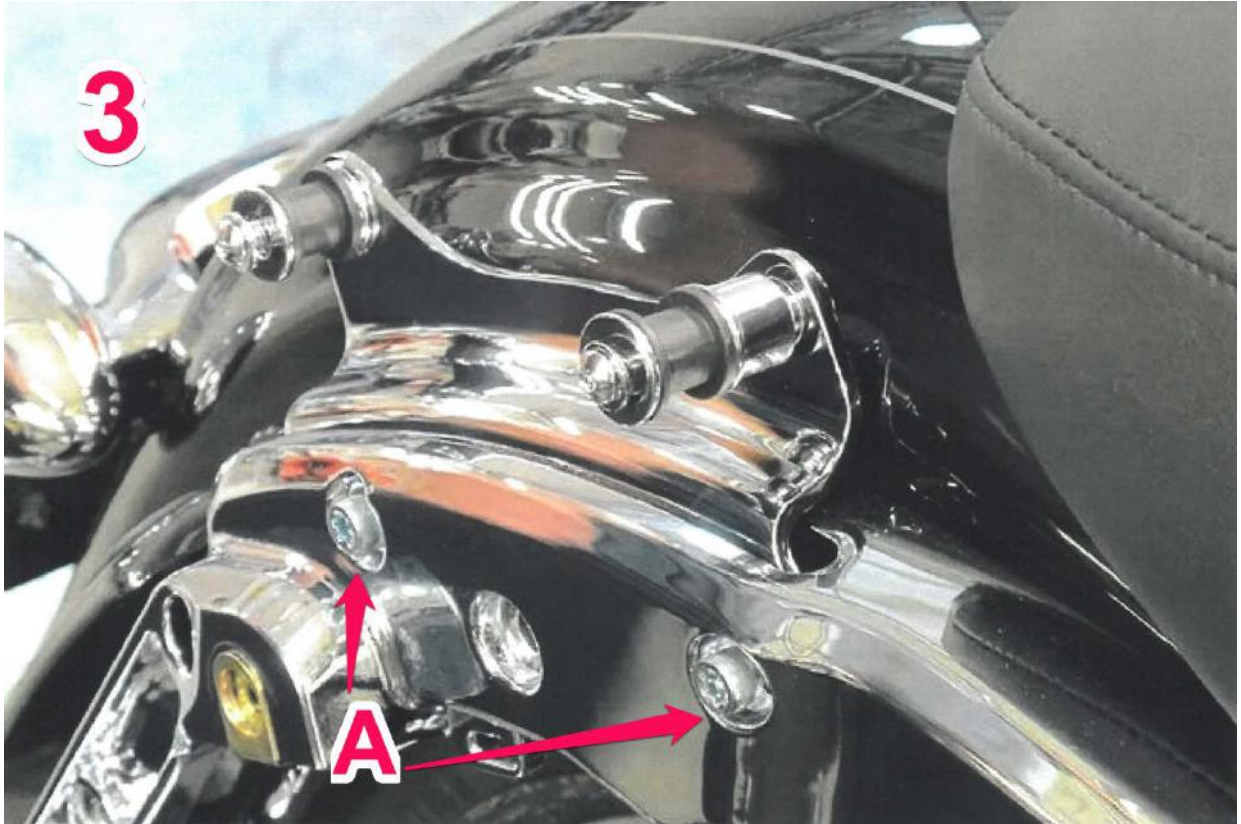

Rely on premium motorcycle seats & backrests by Rivco if you're looking for quality and efficiency.