



# ROLAND SANDS DESIGN®

## ASSEMBLY INSTRUCTIONS

### RSD PULLEY COVER





#### PRODUCT DESCRIPTION

RSD COUNTERSHAFT PULLEY COVER : 2004 AND UP XL SPORTSTER (EXCEPT XRI200R)


0217-2007

### RSD PULLEY COVER INSTALLATION

1. Turn your motorcycle off, place securely on a lift or side stand.
2. Remove the factory sprocket cover. **Note:** Some components such as exhaust and brackets may need to be removed, Consult your HD service manual for specific instructions. Remove sprocket nut lock plate.

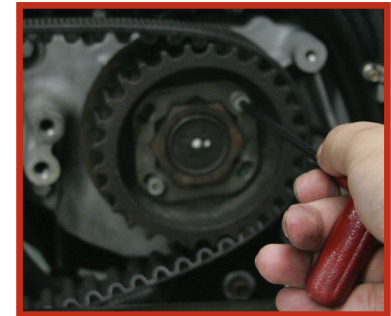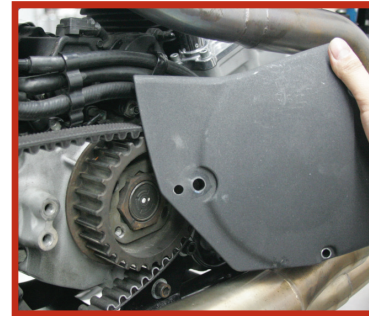

3. Use high strength thread locker on the supplied 1/4" socket head bolts and install the RSD pulley cover with the supplied spacers. Torque bolts to 90-120 in-lbs.

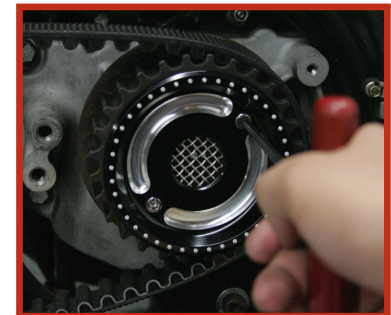

4. Reinstall any components that were removed. Install the RSD Tracker front belt guard 0217-2006 (Sold separately) to complete the tracker look.
5. Hit the road.